



26 captures

7 Jun 97 - 11 May 08

http://www.storage.ibm.com/techsup/hddtech/wda142/wda4tek.htm

Go

DEC FEB JUN [Close](#)

◀ 9 ▶

1999 2001 2002 [Help](#)



Shop IBM + Support Downloads

Home Products Consulting Industries News About IBM

# Models WDA-L42S

For use also with WDA-L42, WDA-L40 and WDA-L40S

Search

All of IBM

Advanced search

←Storage

## Hard disk drives

Products

How to buy

Technical support

News

Resources

Case studies

How to...

Contact hard drives

### Related link:


[IBM Microelectronics technical library](#)

### IBM Worldwide

## Jumper setting

4-bit jumper assembly on the control card is available for drive configuration. Positions 3 and 4 are used to park un-used jumpers. When the drive leaves the factory, the jumper will be set as described below.

Default setting

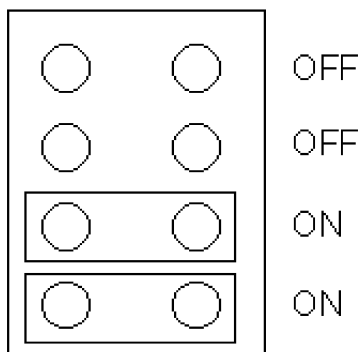

*Note:* When a drive 1 (slave) is installed in the system with a drive 0 (master) already installed, there is not change to the jumper setting for a drive 0 (master). Only the jumper of drive 1 (slave), bit 2, is required to be removed. The jumper may be stored for later use by moving it to bit 3 which is unused.

Bit No.	Name	Description
1	IORDY	If a host supports IORDY signal, this bit must be set ON.
2	-DRV0/DRV1	When set ON, the drive is set as drive 0 (master)

When set OFF, the drive is set as drive 1 (slave)

3	--	Not available
4	--	Not available

### Data organization

Disks	1
Heads	2
RPM	3600
Tracks	2134
Sec/trk	39
Cylinders	1067

[Privacy](#)   [Legal](#)   [Contact](#)