

Search



Advanced search

Storage

Hard disk drives

Products

How to buy

Technical support

News

Resources

Case studies

How to...

Contact hard drives

Related link:

IBM Microelectronics technical library

IBM Worldwide


Model WDS-L40

For use also with WDS-LC40 and WDS-L42

Note: Limited information is available for these hard drives.

SCSI jumpers

A three position jumper switch is used to set the drive address. Specific jumper settings are as follows:

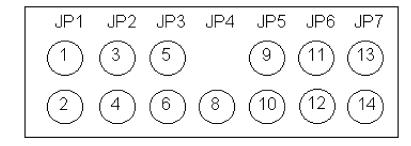

SCSIID

JP1	JP2	JP3	Address
OFF	OFF	OFF	0
ON	OFF	OFF	1
OFF	ON	OFF	2
ON	ON	OFF	3
OFF	OFF	ON	4
ON	OFF	ON	5
OFF	ON	ON	6
ON	ON	ON	7

Close

<u>Help</u>

Pin descriptions

PIN	Status	Description	Signal Name
1	In	-device address select line 0	-DAS0
2		Ground	Ground
3	In	-device address select line 1	-DAS1
4		Ground	Ground
5	In	-device address select line 2	-DAS2
6		Ground	Ground
7		Polarity key	Key
8		-LED	-LED
9	In	-Motor start	-M_start
10		Ground	Ground
11	In	-Hard reset input	-H_reset
12		Ground	Ground
13	Out	+LED	+LED
14	Out	-LED	-LED

Note: When the drives leave the factory, the address jumpers will be set to drive ID 6 and the motor start jumper is set.

Data organization

Heads 2
Sectors/track 39
Cylinders 1067
Capacity 40 MB

Privacy Legal Contact