



Technical Update

ServerGuide Availability Information

Thank you for purchasing an IBM® @server BladeCenter™ HS40 Type 8839 blade server. ServerGuide™ is an IBM server installation assistant that simplifies the process of installing and configuring your blade server. ServerGuide goes beyond hardware configuration by assisting with the installation of your operating system, the latest system device drivers, and other system components with minimal user intervention.

The IBM @server BladeCenter HS40 Type 8839 blade server requires ServerGuide version 7.2.02 or later, which is currently available for download from the IBM Web site <http://www.ibm.com/pc/support/site.wss/document.do?lnocid=MIGR-54181>. Follow the instructions on the Web site to download the ServerGuide software.

Go to the ServerGuide documentation and the documentation that comes with your blade server for information about how to configure your blade server and install an operating system. Keep this documentation with your other BladeCenter documentation.

First Edition (January 2004)

Printed in the U.S.A.

IBM, @server, and the e-business logo are trademarks of the IBM Corporation in the United States, other countries, or both.

© Copyright International Business Machines Corporation 2004. All rights reserved.

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

(1P) P/N: 90P3136

