




Technical Update

Component identification and location information

The information in this update replaces the system-board component identification and location information in the IBM *@server* xSeries™ 305 Type 8673 documentation that comes with your server.

The following illustration shows only the system-board components whose identification or location is different from what appears in the documentation that comes with your server.

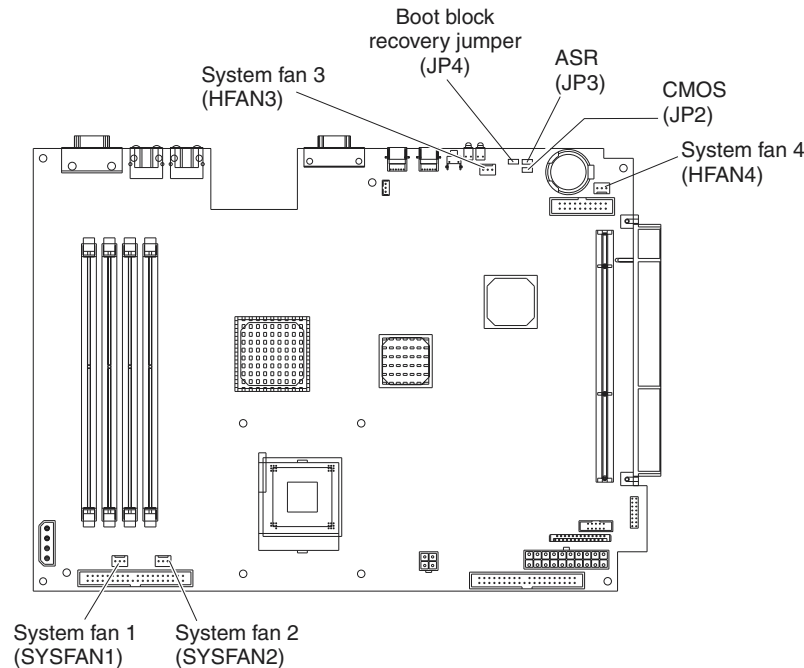

Notes:

1. The Automatic Server Restart (ASR) jumper (JP3) causes the server to restart automatically if it stops (for example, if the operating system stops running). The default position of the jumper (ASR enabled) is pins 2 and 3.
2. The system board does not have a JP1 jumper as described in the documentation.

IBM, xSeries, and the e-business logo are trademarks of the IBM Corporation in the United States, other countries, or both.

© Copyright International Business Machines Corporation 2002. All rights reserved.

Note to U.S. Government Users Restricted Rights — Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

Part Number: 48P9915

Printed in the U.S.A.



1P48P9915