

RS/6000 7025 F30 Series

IBM

User's Guide

Fourth Edition (April 1997)

The following paragraph does not apply to the United Kingdom or any country where such provisions are inconsistent with local law: THIS PUBLICATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. The manufacturer may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time, without notice.

It is possible that this publication may contain reference to, or information about, products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that these products, programming, or services will be announced in your country. Any reference to a specific licensed program in this publication is not intended to state or imply that you can use only that licensed program. You can use any functionally equivalent program instead.

Requests for technical information about products should be made to your authorized reseller or marketing representative.

© International Business Machines Corporation 1995, 1997. All rights reserved.

Note to U.S. Government Users -- Documentation related to restricted rights -- Use, duplication or disclosure is subject to restrictions set forth in GSA ADP Schedule Contract with IBM Corp.

Contents

Communications Statements	ix
Federal Communications Commission (FCC) Statement	ix
European Union (EU) Statement	x
International Electrotechnical Commission (IEC) Statement	x
United Kingdom Telecommunications Safety Requirements	x
Avis de conformité aux normes du ministère des Communications du Canada	xii
Canadian Department of Communications Compliance Statement	xii
VCCI Statement	xii
Radio Protection for Germany	xiii
Federal Communications Commission (FCC) Statement	xiv
European Union (EU) Statement	xiv
International Electrotechnical Commission (IEC) Statement	xv
United Kingdom Telecommunications Safety Requirements	xv
Avis de conformité aux normes du ministère des Communications du Canada	xv
Canadian Department of Communications Compliance Statement	xv
VCCI Statement	xvi
Radio Protection for Germany	xvii
Safety Notices	xix
Electrical Safety	xix
Laser Safety Information	xxi
Power Cables	xxii
About This Book	xxv
ISO 9000	xxv
Related Publications	xxv
Trademarks	xxv
Chapter 1. System Startup	1-1
Before You Begin	1-2
Unpacking Your Server	1-3
Connecting the Cables	1-5
Starting the Server	1-6
Finishing the Installation	1-8
Chapter 2. Using the System Unit	2-1
Starting the System Unit	2-1
Stopping the System Unit	2-1
Reading the Operator Panel Display	2-2
Using the Keyboards	2-5
Using the Three-Button Mouse	2-7

Using the 3.5-Inch Diskette Drive	2-11
Using the CD-ROM Drive	2-13
Using the Hot Swap Disk Drives	2-16
Using the 5.0GB 8-mm Tape Drive	2-21
General Information for 5.0GB 8-mm Tape Drive	2-26
Using the 4.0GB 4-mm Tape Drive	2-30
General Information for 4.0GB 4-mm Tape Drive	2-35
Using the 24/48GB DDS-2 4-mm Tape Autoloader	2-41
Chapter 3. System Management Services	3-1
Graphical System Management Services	3-2
Start Up	3-4
Test	3-5
Tools	3-7
Text-Based System Management Services Programs	3-11
Select Boot Devices	3-12
Test the Computer	3-13
Utilities	3-14
ASCII Terminal System Management Services Programs	3-16
Select Boot Devices	3-17
Test the Computer	3-18
Utilities	3-19
Chapter 4. Firmware	4-1
Password Design Description	4-3
Firmware Flash Update Design	4-5
Power On Self Test (POST)	4-7
Post Indicators	4-8
Chapter 5. Installing Options	5-1
Safety Considerations	5-1
Handling Static-Sensitive Devices	5-3
Expansion Bays	5-4
Input/Output Connectors	5-5
Removing the Front Covers Only	5-6
Removing Both the Front and Side Covers	5-10
Option List	5-16
Installing Memory-Module Kits	5-17
Removing Memory-Module Kits	5-22
Upgrading the CPU Card	5-25
Installing Adapters	5-29
Removing Adapters	5-34
Installing Internal Drives	5-37
Installing a Disk Drive, Tape Drive, or CD-ROM in Bay A or Bay B	5-41

Installing a SCSI Disk Drive in Bank C, D, or E.	5-52
Installing an SSA Disk Drive in Bank C, D, or E.	5-56
Installing a SCSI Backplane in Bank D or E.	5-60
Installing an SSA Backplane in Bank D or E.	5-76
Removing Internal Drives	5-90
Removing a Disk Drive, Tape Drive, or CD-ROM from Bay A or Bay B	5-91
Removing a SCSI Disk Drive from Bank C, D, or E	5-92
Removing an SSA Disk Drive from Bank C, D, or E	5-96
Installing a Service Processor	5-100
Installing a U-Bolt	5-104
Replacing the Front Covers	5-106
Replacing Both the Front and Side Covers	5-109
Chapter 6. Using the Standalone and Online Diagnostics	6-1
Sources for the Diagnostic Programs	6-1
Standalone and Online Diagnostics Operating Considerations	6-1
Online Diagnostics Mode of Operation	6-9
Running the Online Diagnostics in Service Mode (Service Mode IPL)	6-10
Standalone Diagnostic Operation	6-13
Running the Standalone Diagnostics	6-13
General Information About Multiple Systems	6-14
High-Availability SCSI	6-15
Diagnostic Summary	6-15
4.2 Diagnostic Changes	6-16
Location Codes	6-19
Chapter 7. Introduction to Tasks and Service Aids	7-1
AIX Shell Prompt Service Aid	7-3
Backup/Restore Media Service Aid	7-3
Configure Ring Indicate Power On Service Aid	7-3
Configure Service Processor Service Aid	7-3
Create Customized Diagnostic Configuration Diskette	7-5
Diagnostic Package Utility Service Aid	7-5
Dials and LPFK Configuration Service Aid	7-6
Disk Based Diagnostic Update Service Aid and Update Disk Based Diagnostic Task	7-6
Disk Media Service Aids	7-7
Disk Maintenance Service Aid	7-9
Diskette Media Service Aid	7-11
Display/Alter Bootlist Service Aid	7-11
Display or Change Configuration or Vital Product Data (VPD) Service Aid	7-11
Display and Change Diagnostic Test List Service Aid	7-14
Display Machine Check Error Log Service Aid	7-14
Display Previous Diagnostic Results Service Aid	7-15

Display Resource Attributes	7-15
Display Test Patterns Service Aid	7-16
Generic Microcode Download Service Aid	7-16
Hardware Error Report Service Aid and Display Hardware Error Log Task	7-16
ISA Adapter Configuration Service Aid	7-16
Local Area Network Service Aid and Local Area Network Analyzer Task	7-18
Microcode Download Service Aid	7-18
PCI RAID Physical Disk Identify	7-18
Periodic Diagnostics Service Aid	7-19
Process Supplemental Media Task	7-19
Run Diagnostics Task	7-20
Run Error Log Analysis Task	7-20
SCSI Bus Service Aid and SCSI Bus Analyzer Task	7-20
SCSI Device Identification and Removal	7-22
SCSI Tape Utilities Service Aid	7-22
Service Hints Service Aid	7-23
SSA Service Aids	7-23
7135 RAIDiant Array Service Aid	7-23
7318 Serial Communications Network Server Service Aid	7-24
SSA Location Code Format	7-24
SSA Loops and Links	7-25
SSA Service Aids	7-30
Service Aid Error Codes	7-49
Using the Service Aids for SSA-Link Problem Determination	7-50
Finding the Physical Location of a Device	7-56
Microcode Maintenance	7-58
Vital Product Data (VPD)	7-59
Chapter 8. Using the System Verification Procedure	8-1
Step 1. Considerations before Running This Procedure	8-1
Step 2. Loading the Diagnostics	8-2
Step 3. Running System Verification	8-3
Step 4. Additional System Verification	8-3
Step 5. Stopping the Diagnostics	8-4
Chapter 9. Hardware Problem Determination	9-1
Problem Determination Using the Standalone or Online Diagnostics	9-1
Problem Determination When Unable to Load Diagnostics	9-10
Chapter 10. SSA Problem Determination Procedures	10-1
Disk Drive Module Power-On Self-Tests (POSTs)	10-1
Adapter Power-On Self-Tests (POSTs)	10-2
Service Request Numbers (SRNs)	10-3
SSA Loop Configurations That Are Not Valid	10-15

SSA Maintenance Analysis Procedures (MAPs)	10-16
MAP 2010: SSA Hot-Swap Disk Drive–Start	10-17
Appendix A. Server Records	A-1
Record the Identification Numbers	A-1
Device Records	A-2
Appendix B. Replacing the Battery	B-1
Index	X-1

Communications Statements

The following statement applies to this product. The statement for other products intended for use with this product appears in their accompanying manuals.

If Feature Codes 2743, 3615, 6218, 8130 or 8134 are NOT installed, this system complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

Federal Communications Commission (FCC) Statement

Note: The *IBM RS/6000 7025 F30 Series Server* has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an authorized dealer or service representative for help.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Proper cables and connectors are available from authorized dealers. Neither the provider nor the manufacturer are responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

International Business Machines Corporation
New Orchard Road
Armonk, New York 10504
Telephone: (919) 543-2193



Tested to Comply
With FCC Standards

FOR HOME OR OFFICE USE

European Union (EU) Statement

This product is in conformity with the protection requirements of EU Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility. The manufacturer cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of option cards supplied by third parties. Consult with your dealer or sales representative for details on your specific hardware.

This product has been tested and found to comply with the limits for Class B Information Technology Equipment according to CISPR 22 / European Standard EN 55022. The limits for Class B equipment were derived for typical residential environments to provide reasonable protection against interference with licensed communication devices.

International Electrotechnical Commission (IEC) Statement

This product has been designed and built to comply with IEC Standard 950.

United Kingdom Telecommunications Safety Requirements

This equipment is manufactured to the International Safety Standard EN60950 and as such is approved in the UK under the General Approval Number NS/G/1234/J/100003 for indirect connection to the public telecommunication network.

The network adapter interfaces housed within this equipment are approved separately, each one having its own independent approval number. These interface adapters, supplied by the manufacturer, do not use or contain excessive voltages. An excessive voltage is one which exceeds 70.7 V peak ac or 120 V dc. They interface with this equipment using Safe Extra Low Voltages only. In order to

maintain the separate (independent) approval of the manufacturer's adapters, it is essential that other optional cards, not supplied by the manufacturer, do not use main voltages or any other excessive voltages. Seek advice from a competent engineer before installing other adapters not supplied by the manufacturer.

Avis de conformité aux normes du ministère des Communications du Canada

Cet appareil numérique de la classe B est conform à la norme NMB-003 du Canada.

Canadian Department of Communications Compliance Statement

This Class B digital apparatus complies with Canadian ICES-003.

VCCI Statement

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づきクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。

The following is a summary of the VCCI Japanese statement in the box above.

This product is a Class B Information Technology Equipment and conforms to the standards set by the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). This product is aimed to be used in a domestic environment. When used near a radio or TV receiver, it may become the cause of radio interference. Read the instructions for correct handling.

Radio Protection for Germany

Dieses Gerät ist berechtigt in Übereinstimmung mit dem deutschen EMVG vom 9.Nov.92 das EG-Konformitätszeichen zu führen.

Der Aussteller der Konformitätserklärung ist die IBM Germany.

Dieses Gerät erfüllt die Bedingungen der EN 55022 Klasse B.

If Feature Codes 2743, 3615, 6218, 8130 or 8134 are installed, this system complies with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules.

Federal Communications Commission (FCC) Statement

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Neither the provider nor the manufacturer are responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

European Union (EU) Statement

This product is in conformity with the protection requirements of EU Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility. The manufacturer cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of option cards supplied by third parties. Consult with your dealer or sales representative for details on your specific hardware.

This product has been tested and found to comply with the limits for Class A Information Technology Equipment according to CISPR 22 / European Standard EN 55022. The limits for Class A equipment were derived for commercial and industrial environments to provide reasonable protection against interference with licensed communication equipment.

Attention: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

International Electrotechnical Commission (IEC) Statement

This product has been designed and built to comply with IEC Standard 950.

United Kingdom Telecommunications Safety Requirements

This equipment is manufactured to the International Safety Standard EN60950 and as such is approved in the UK under the General Approval Number NS/G/1234/J/100003 for indirect connection to the public telecommunication network.

The network adapter interfaces housed within this equipment are approved separately, each one having its own independent approval number. These interface adapters, supplied by the manufacturer, do not use or contain excessive voltages. An excessive voltage is one which exceeds 70.7 V peak ac or 120 V dc. They interface with this equipment using Safe Extra Low Voltages only. In order to maintain the separate (independent) approval of the manufacturer's adapters, it is essential that other optional cards, not supplied by the manufacturer, do not use main voltages or any other excessive voltages. Seek advice from a competent engineer before installing other adapters not supplied by the manufacturer.

Avis de conformité aux normes du ministère des Communications du Canada

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Canadian Department of Communications Compliance Statement

This Class A digital apparatus meets the requirements of the Canadian Interference–Causing Equipment Regulations.

VCCI Statement

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

The following is a summary of the VCCI Japanese statement in the box above.

This equipment is in the Class 1 category (information equipment to be used in commercial and/or industrial areas) and conforms to the standards set by the Voluntary Control Council For Interference by Data Processing Equipment and Electronic Office Machines aimed at preventing radio interference in commercial and/or industrial areas.

Consequently, when used in a residential area or in an adjacent area thereto, radio interference may be caused to radios and TV receivers, etc.

Read the instructions for correct handling. VCCI-1.

Radio Protection for Germany

Dieses Gerät ist berechtigt in Übereinstimmung mit dem deutschen EMVG vom 9.Nov.92 das EG-Konformitätszeichen zu führen.

Der Aussteller der Konformitätserklärung ist die IBM Germany.

Dieses Gerät erfüllt die Bedingungen der EN 55022 Klasse A. Für diese von Geräten gilt folgende Bestimmung nach dem EMVG:

Geräte dürfen an Orten, für die sie nicht ausreichend entstört sind, nur mit besonderer Genehmigung des Bundesministers für Post und Telekommunikation oder des Bundesamtes für Post und Telekommunikation betrieben werden. Die Genehmigung wird erteilt, wenn keine elektromagnetischen Störungen zu erwarten sind.

(Auszug aus dem EMVG vom 9.Nov.92, Para.3, Abs.4)

Hinweis

Dieses Genehmigungsverfahren ist von der Deutschen Bundespost noch nicht veröffentlicht worden.

Safety Notices

A *danger* notice indicates the presence of a hazard that has the potential of causing death or serious personal injury.

A *caution* notice indicates the presence of a hazard that has the potential of causing moderate or minor personal injury.

Electrical Safety

Observe the following safety instructions any time you are connecting or disconnecting devices attached to the workstation.

DANGER

An electrical outlet that is not correctly wired could place hazardous voltage on metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock.

Before installing or removing signal cables, ensure that the power cables for the system unit and all attached devices are unplugged.

When adding or removing any additional devices to or from the system, ensure that the power cables for those devices are unplugged before the signal cables are connected. If possible, disconnect all power cables from the existing system before you add a device.

Use one hand, when possible, to connect or disconnect signal cables to prevent a possible shock from touching two surfaces with different electrical potentials.

During an electrical storm, do not connect cables for display stations, printers, telephones, or station protectors for communication lines.

CAUTION:

This product is equipped with a three-wire power cable and plug for the user's safety. Use this power cable with a properly grounded electrical outlet to avoid electrical shock.

DANGER

To prevent electrical shock hazard, disconnect the power cable from the electrical outlet before relocating the system.

Laser Safety Information

The optical drive in this system unit is a laser product. The optical drive has a label that identifies its classification. The label, located on the drive, is shown below.

CLASS 1 LASER PRODUCT LASER KLASSE 1 LUOKAN 1 LASERLAITE APPAREIL À LASER DE CLASSE 1 IEC 825:1984 CENELEC EN 60 825:1991

The optical drive in this system unit is certified in the U.S. to conform to the requirements of the Department of Health and Human Services 21 Code of Federal Regulations (DHHS 21 CFR) Subchapter J for Class 1 laser products. Elsewhere, the drive is certified to conform to the requirements of the International Electrotechnical Commission (IEC) 825 (1st edition 1984) and CENELEC EN 60 825:1991 for Class 1 laser products.




CAUTION:

A class 3 laser is contained in the device. Do not attempt to operate the drive while it is disassembled. Do not attempt to open the covers of the drive as it is not serviceable and is to be replaced as a unit.

Class 1 laser products are not considered to be hazardous. The optical drive contains internally a Class 3B gallium-arsenide laser that is nominally 30 milliwatts at 830 nanometers. The design incorporates a combination of enclosures, electronics, and redundant interlocks such that there is no exposure to laser radiation above a Class 1 level during normal operation, user maintenance, or servicing conditions.

Power Cables

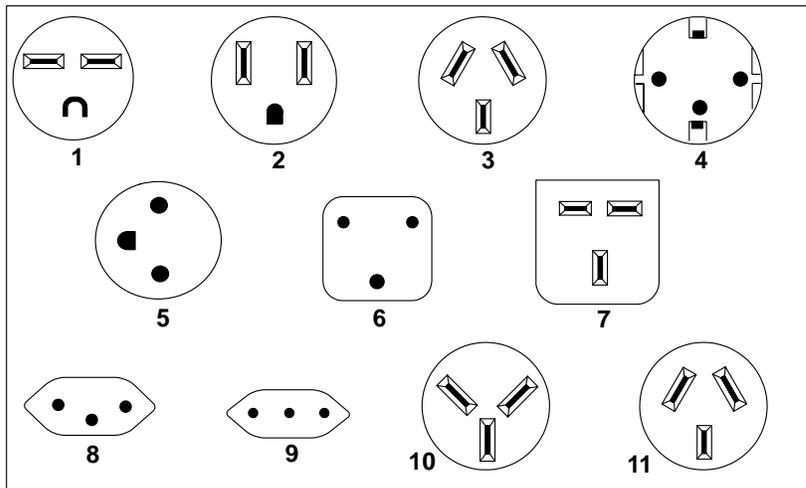

Index	Part Number	Country
1	1838574	Bahamas, Barbados, Bolivia, Brazil, Canada, Costa Rica, Dominican Republic, El Salvador, Ecuador, Guatemala, Guyana, Haiti, Honduras, Jamaica, Japan, Netherlands Antilles, Panama, Peru, Philippines, Taiwan, Thailand, Trinidad, Tobago, U.S.A. (except Chicago), Venezuela
2	6952300	Bahamas, Barbados, Bermuda, Bolivia, Brazil, Canada, Cayman Islands, Colombia, Costa Rica, Dominican Republic, Ecuador, El Salvador, Guatemala, Guyana, Haiti, Honduras, Jamaica, Japan, Korea (South), Mexico, Netherlands Antilles, Nicaragua, Panama, Peru, Philippines, Puerto Rico, Saudi Arabia, Suriname, Trinidad, Taiwan, U.S.A. (except Chicago), Venezuela
2	62X1045	Chicago, U.S.A.
3	6952311	Argentina, Australia, New Zealand
4	13F9979	Abu Dhabi, Austria, Belgium, Bulgaria, Botswana, Egypt, Finland, France, Germany, Greece, Iceland, Indonesia, Korea (South), Lebanon, Luxembourg, Macau, Netherlands, Norway, Portugal, Saudi Arabia, Spain, Sudan, Sweden, Turkey, Yugoslavia
5	13F9997	Denmark
6	14F0015	Bangladesh, Burma, Pakistan, South Africa, Sri Lanka
7	14F0033	Bahrain, Bermuda, Brunei, Channel Islands, Cyprus, Ghana, Hong Kong, India, Iraq, Ireland, Jordan, Kenya, Kuwait, Malawi, Malaysia, Nigeria, Oman, People's Republic of China, Qatar, Sierra Leone, Singapore, Tanzania, Uganda, United Arab Emirates (Dubai), United Kingdom, Zambia

Index	Part Number	Country
8	14F0051	Liechtenstein, Switzerland
9	14F0069	Chile, Ethiopia, Italy
10	14F0087	Israel
11	6952291	Paraguay, Colombia, Uruguay

About This Book

This book provides information on how to install and remove options, use the system, use diagnostics, use service aids, and verify system operation. This book also provides information to help you solve some of the simpler problems that might occur.

ISO 9000

ISO 9000 registered quality systems were used in the development and manufacturing of this product.

Related Publications

The following publications are available:

- The *IBM RS/6000 7025 F30 Series Service Guide* contains reference information, maintenance analysis procedures (MAPs), error codes, removal and replacement procedures, and a parts catalog.
- The *IBM RS/6000 Diagnostic Information for Multiple Bus Systems* contains diagnostic information, service request numbers (SRNs), and failing function codes (FFCs).
- The *IBM RS/6000 Adapter, Device, and Cable Information for Multiple Bus Systems* contains information about adapters, devices, and cables for your system. This manual is intended to supplement the service information found in the *IBM RS/6000 Diagnostic Information for Multiple Bus Systems*.
- The *Site and Hardware Planning Information* contains information to help you plan your installation.

Trademarks

- Windows NT is a trademark of the Microsoft Corporation.
- PowerPC is a trademark of the International Business Machines Corporation.

Chapter 1. System Startup

Thank you for selecting an IBM RS/6000 7025 F30 Series server!

The IBM RS/6000 7025 F30 Series server combines PowerPC 604 microprocessor performance and system expandability, ensuring that your server adapts to handle ever-changing operating requirements. The server is specifically designed to support the demands of network environments.

The IBM RS/6000 7025 F30 Series server incorporates the new, advanced peripheral component interconnect (PCI) bus, which is faster than the industry standard architecture (ISA) bus. But the server also offers ISA as a secondary bus architecture, to accommodate businesses that already have invested in ISA and ISA-based devices.

This book helps you set up and use the server, install and remove options, configure the server, and use the system programs that are provided. This book also provides information to help you solve some of the simpler problems that might occur, and how to obtain assistance and service. Appendix A, "Server Records" on page A-1 provides a section for you to record all the important information about your server.

Before You Begin

- Make sure you have an adequate number of properly grounded electrical outlets for your server, display, and any other options you intend to install.
- Place your server in a location that is dry. Rain or spilled liquids might damage your server.
- Leave about 51 mm (2 in.) of space on all sides of the server to allow the server's cooling system to work properly.
- Collect the following tools, and keep them handy:
 - Small flat-blade screwdriver
 - Medium flat-blade screwdriver
 - Trays to hold screws


Unpacking Your Server

CAUTION:

To avoid possible injury while moving or lifting the server, ask another person to help you.

Moving the Server

When the server is in the normal upright position, move it by lifting up on the handle on the front and moving it forward or backward as shown. (There is a roller built into the rear of the server's base.)

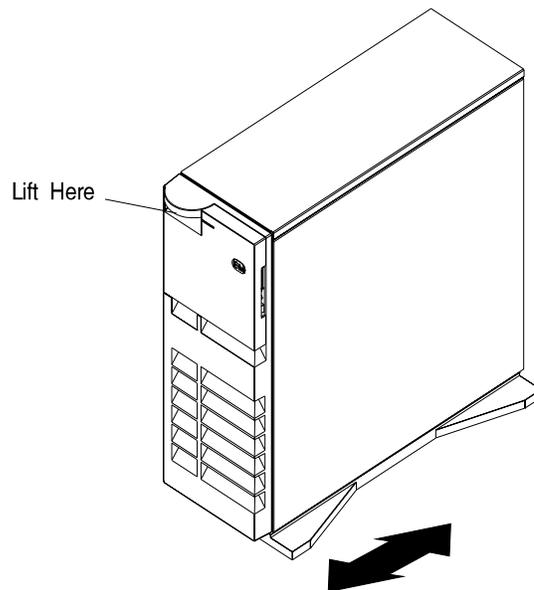

Preinstallation Checklist


After you unpack your server, display or ASCII terminal, and optional devices, make sure you have the following items:

- Server and power cord
- ASCII terminal (or keyboard, keyboard cable, display, display cable, and display power cord)
- Mouse (if using display and keyboard)
- Other publications and media (for example, CD-ROM) that came with the server
- Options you want to install

Contact your authorized reseller or marketing representative if any items are missing or damaged.


Connecting the Cables

1. If you are using a keyboard, attach the keyboard cable to the keyboard connector ().
2. If you are using a display, attach the display to the display connector on the back of the display adapter in one of the expansion slots. See the *About Your Machine* document for information on preinstalled adapters.
3. If you are using an ASCII terminal, connect the terminal to serial port 1 ().
4. If you are installing a mouse or other pointing device, connect that cable to the mouse connector ().
5. Connect the display or ASCII terminal power cord to the display or ASCII terminal.
6. Attach adapter cables to any adapters installed in the expansion slots. See the *About Your Machine* document for information on preinstalled adapters. For more instructions on adapter cabling, see the documentation that came with your adapter, or to the *IBM RS/6000 Adapter, Device, and Cable Information for Multiple Bus Systems*.
7. Make sure the server's power is turned off.
8. Connect the server connector power cord to the power connector. *Secure all these connections*, then plug the display power cord and the server power cord into properly grounded electrical outlets.

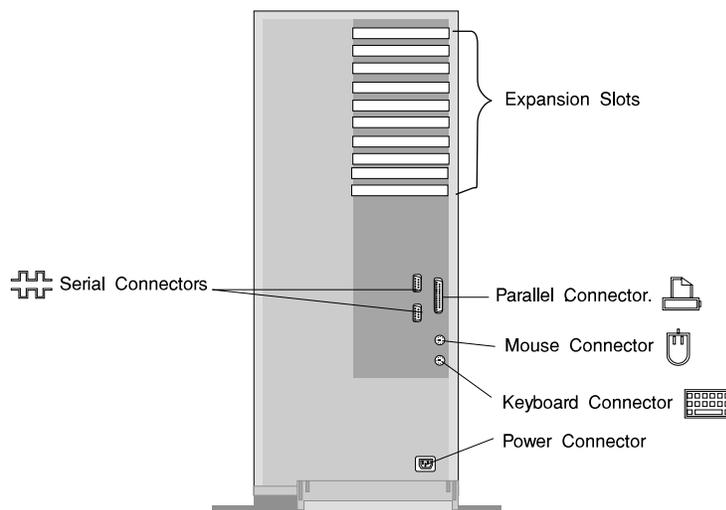


Starting the Server

1. Open the door. If the diskette drive contains packing material or a diskette, remove it from the drive. The power enabled LED should be blinking.
2. Remove the extra key and ID tag that is taped inside the door and store them in a secure place.

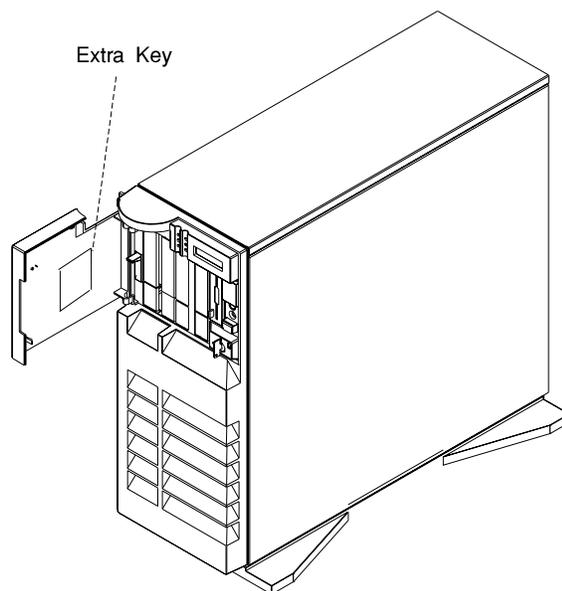

3. Turn on all external devices, such as printers, plotters, or modems.

4. Press the Power Enable switch to the On (Green) position.
5. Turn the server power on by pressing the start/stop switch.

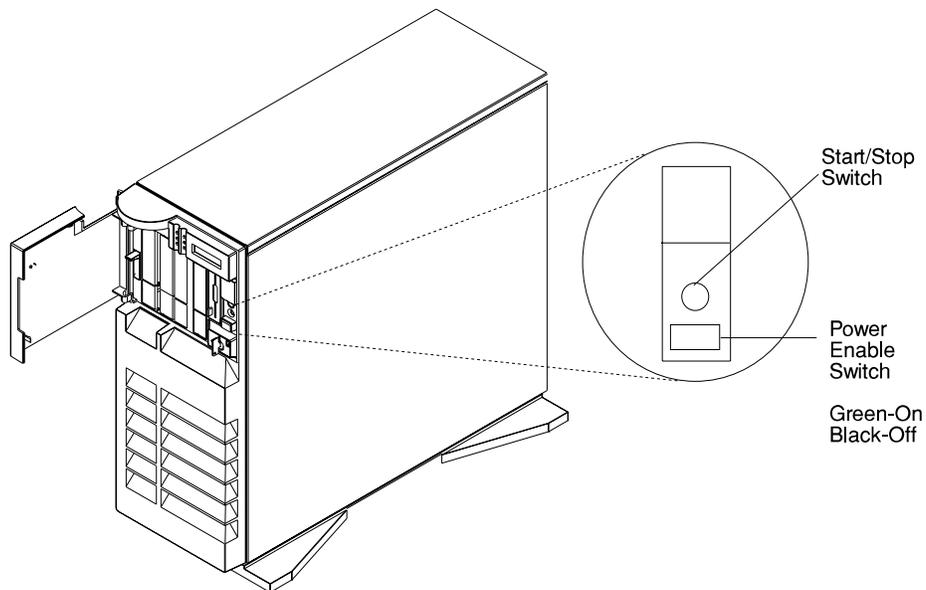

6. Check your display or ASCII terminal for configuration information displayed as the *power-on self-test (POST)* begins. The server beeps once to indicate it is working properly.

If no operating system is installed, you are prompted to select the operating system installation device.

Finishing the Installation

Important

- Be sure to maintain at least 51 mm (2 in.) of space on all sides of the server to allow the server's cooling system to work properly. Blocking the air vents can cause overheating, which might result in a malfunction or permanent damage.

Your server hardware is set up, and you are ready to learn about your server and make backup copies of important software. The order in which you do these tasks is up to you. Use the following checklist as a guide.

Record your identification numbers

Your server has important identification information that you might need if you have it serviced. Appendix A, "Server Records" on page A-1 shows where to find these numbers, and provides space to record and retain this information.

Install options

If you decided earlier to delay installing your options, you might want to complete these installations now. See Chapter 5, "Installing Options" on page 5-1 for handling and installation instructions.

Install the Operating System

If AIX is preinstalled in your system unit, or if you plan to install AIX yourself, refer to the Quick Installation and Startup Guide for instructions.

If Windows NT (Power PC Edition) is preinstalled in your system unit, or if you plan to install Windows NT (Power PC Edition) yourself, refer to the Windows NT (Power PC Edition) documentation for instructions.

Some options that you might install come with a diskette that contains device drivers, configuration files, or test programs. To install these files (after your operating system is installed), follow the instructions that come with the diskettes.


Install application programs

To install application programs, follow the instructions supplied with each application program.

Chapter 2. Using the System Unit

Starting the System Unit

1. Set the power switches of the attached devices to On.
2. Press the power enable switch.

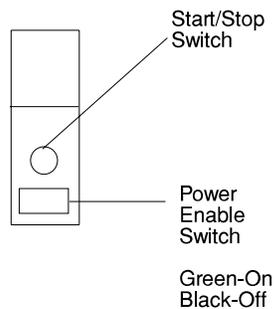

3. Start the system unit by pressing the start/stop switch.

When you press the start Switch, the power good LED comes on solid and the system starts a POST (power-on self test).

During POST, progress codes display in the operator panel display.

4. If power does not come on when you press the start switch, ensure that the power cord, located at the back of the system unit, is plugged into a grounded electrical outlet. If this does not solve the problem, go to Chapter 9, "Hardware Problem Determination" on page 9-1.

Stopping the System Unit


Attention: When using the shutdown procedure for your system, enter the correct command before you stop the system unit. Failure to do so may result in the loss of data. If you need information on the shutdown procedure for your operating system, see your operating system information.

1. Before stopping the system unit, you must first perform a shutdown procedure of the operating system to prevent the loss of data.
2. After you shut down the operating system, set the power switches of the attached devices to Off.
3. Stop the system unit by pressing the start/stop switch.

Reading the Operator Panel Display

The operator panel display is used to:

- Track the progress of the system unit self tests and configuration program.
- Display codes when the operating system comes to an abnormal end.
- Display system messages.

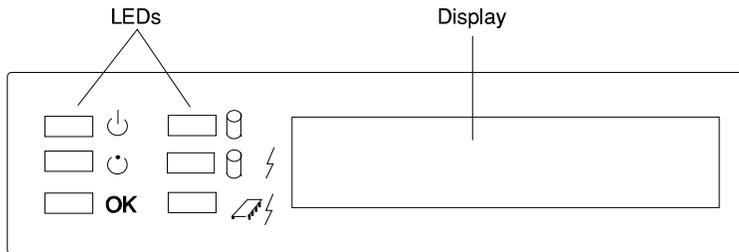

⏻ = Power Good

⏻ = Power Enabled

OK = Subsystems Good

⏻ = Disk Drive Activity

⏻ ⚡ = Disk Drive Error

⏻ ⚡ = Processor Error

During power-on self-test (POST), 3 characters display indicating the progress of the testing. If an error is detected that requires attention, the system unit halts and an 8 digit number displays in the operator panel display to identify the error.

Operator Panel LEDs

The following table explains the functions of the operator panel LEDs.

LED Functions		
LED	Status	Definition
Power Good	On	System power is On
	Off	System power is Off
Power Enabled	On	System power is On
	Off	Power not connected to system
	Blinks slowly	Power is connected to system
	Blinks rapidly	AIX memory dump has been initiated by start/stop method
OK	On	System electronics are not reporting errors
	Off	System electronic failures are detected
Disk Drive Activity	On	Disk drive active
		Also used for POST error indications in conjunction with speaker beep and diskette LED
Disk Drive Error		Not used by base system, available for disk drive applications to report errors
Processor Error	On	System experienced (1) heartbeat detection lapse. (2) EPOW condition (fans, temperature, voltage).

The start/stop switch, power enable switch, and light-emitting diodes (LEDs) on the front of your server allow you control power to the server, observe system power status, and observe disk activity.

These features also have other built-in capabilities to assist you in diagnosing system problems and observing system status:

- As soon as the system unit is connected to a power source, the power enabled LED begins blinking slowly (about 2 flashes per second) to indicate that power is connected to the system, even though the system unit is **not** powered on or running.
- When the system unit is turned on by pressing the start/stop switch, the power enabled LED lights steadily.

If the operating system is loaded and running, a memory dump of system information can be requested.

- To enable this function, the **sysdumpdev -K** command must be executed before an error condition exists.

- To request a memory dump, press and hold the start/stop switch for longer than two seconds. Requesting a memory dump directs the operating system to save system information to a predefined file before turning off the system. This feature can be used to assist in recovery from system problems.
- When a memory dump has been requested the power enabled LED blinks quickly (about 10 flashes per second) to indicate that the dump has been started. This blinking ceases after about a minute whether or not the dump is complete, and the LED returns to its steady, lit state until the system turns off or reboots when the dump is complete.
- The memory dump file can be viewed by entering the AIX command **sysdumpdev -L**

The disk drive activity LED lights whenever the hard disk drives within the server are being used.


The disk drive activity LED also provides basic system diagnostic information:

- If no memory can be found as the system boots, the disk drive activity LED lights and the system stops the boot process.
- If an error is detected in the firmware boot program, this LED lights and the system stops, and the diskette activity LED begins blinking. This condition indicates that the system is requesting a Firmware Recovery Diskette, which should be made to facilitate resolution of system problems. For instructions on creating a Firmware Recovery Diskette, see Chapter 3, "System Management Services" on page 3-1.

Using the Keyboards

There are several keyboards available for the system unit. The keyboards have various keys that enter data and control the cursor location. The keyboards can be engraved for the languages of different countries.

The functions of each keyboard depend on the software used. The character sets for the keyboards are contained and explained in the information for your operating system.

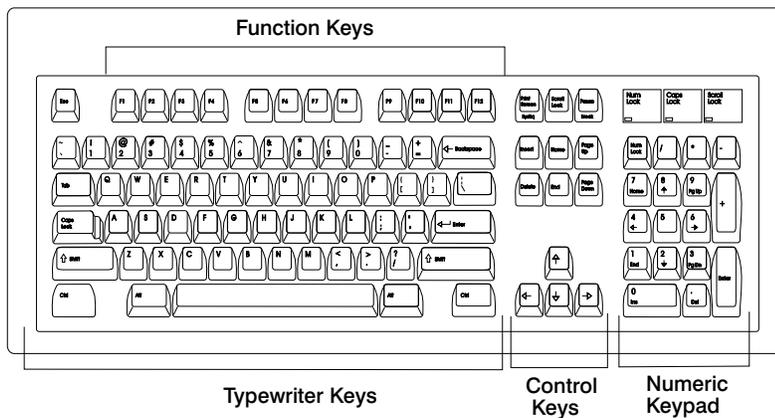


The keyboard is divided into four sections:

- Function keys are multipurpose keys and their function is controlled by the operating system.
- Typewriter keys are similar to a standard typewriter. Their function is controlled by the software.
- Control keys move the cursor on the screen and do programmed control functions. The movement and functions depend upon the application used.
- Numeric keypad is arranged like a calculator to help when typing numbers.

On all of the keyboards, you can adjust the tilt position for typing comfort. To tilt the keyboard, pull out on the keyboard legs. The legs snap into position. To decrease the tilt of the keyboard, rotate the keyboard legs until they snap into the bottom of the keyboard case.


The keyboard cable plugs into the keyboard connector at the rear of the system unit.

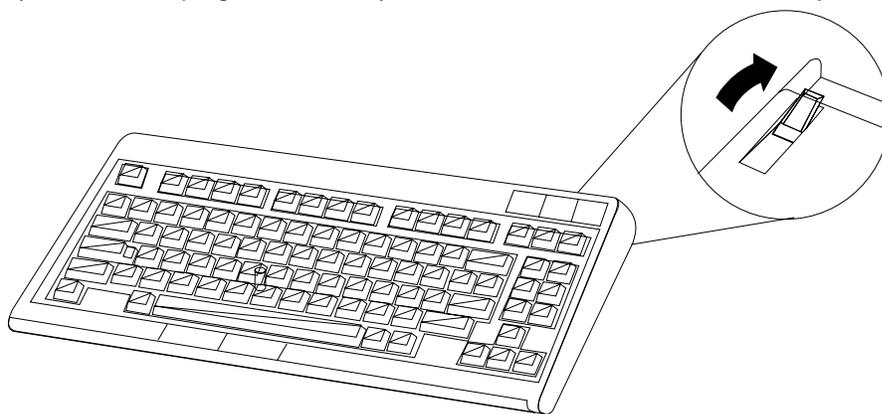

Using the Three-Button Mouse


The mouse is a hand-operated locating device. A three-button mouse is available for use with the system unit.

Consult your application publication for the exact use of the three-button mouse.

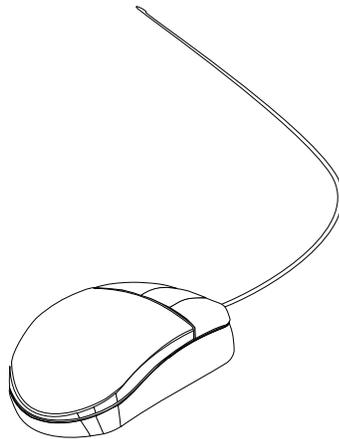

You can use the mouse to perform such functions as positioning a cursor, selecting items from a menu, or moving around in your document much easier and faster than if you used only the keyboard. The cursor moves exactly as you move the mouse on a flat surface, such as a desktop.

When you move the mouse around on a flat surface as shown in this illustration, the cursor moves on the display screen; the movement changes the position of the cursor.

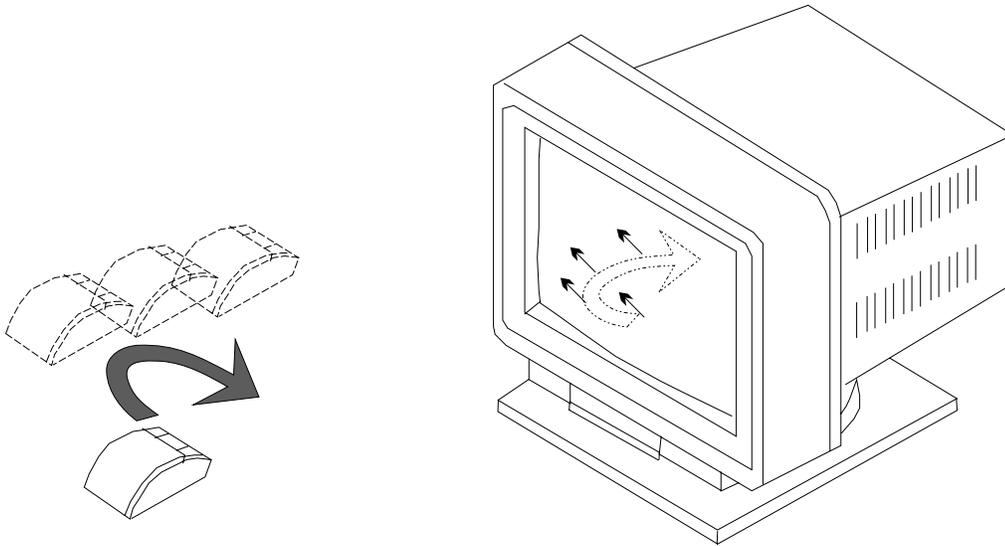

With the mouse buttons, you can perform functions such as selecting and deselecting options, extending your selection, or choosing a command. The precise function of your mouse depends on the software you are using.

The mouse has a cable that plugs into the mouse connector at the rear of the system unit.

Handling the Mouse Correctly

For best operation, handle the mouse with care. Incorrect handling can damage the mouse.

Do not:

- Operate the mouse on cloth, unfinished wood, newspaper, or carpet.
- Drop or hit the mouse.
- Carry the mouse by holding onto the cable.
- Expose the mouse to extreme temperatures or direct sunlight.
- Place the mouse in liquid spills.

Care of the Mouse

The operating surface for the mouse should be smooth, clean, and flat. For example, you can operate the mouse on the following surfaces:


- Finished wood
- Glass
- Enamel
- Plastic
- Paper (except newspaper)
- Metal

Rough surfaces collect contaminants that can be transferred to the interior of the mouse by the ball. The surface you use should be free from spills, dirt, dust, lint, wax, eraser dust, and other foreign matter. Rough surfaces can also cause the pads located on the bottom of the mouse to prematurely wear. A deeply pitted surface could cause erratic operation of the mouse.

- Inspect the work surface for spills or other contaminants.
- Dust the work surface.
- If you are using a paper pad, inspect it for wear and replace it if necessary.

Cleaning the Mouse

1. Remove the retaining ring by turning it counterclockwise, in the direction of the arrow as shown in the illustration.

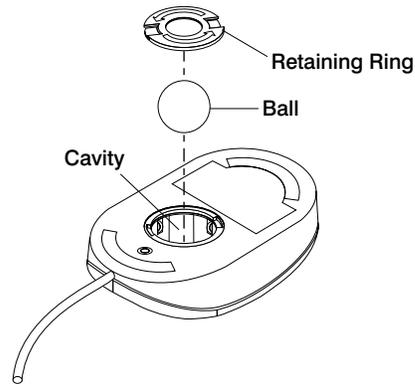

2. Remove the ball.
3. Inspect the ball for contaminants. Wipe it clean with a dry, lint-free cloth.
4. If the ball is dirty, wash it in warm, soapy water. Rinse and wipe the ball with a lint-free cloth until dry.
5. Inspect the ball cavity in the mouse for foreign materials. If there are any foreign materials, remove them.
6. Replace the ball.
7. Replace the retaining ring on the mouse and align it with the open slots in the ball cavity.
8. Turn the retaining ring clockwise until the open slots are covered and you hear the ring snap into place.

Using the 3.5-Inch Diskette Drive

Diskette Compatibility

The system unit has a 1.44MB diskette drive installed.

The 1.44MB diskette drive can format, read, and write diskettes compatible with the following diskette drives:

- 1.0MB diskettes with 720KB formatted data capacity.
- 2.0MB diskettes with 1.44MB formatted data capacity (HD).

Format the diskette according to its specified capacity.

Write-Protecting 3.5-Inch Diskettes


Write-protecting diskettes is necessary so that important information is not accidentally lost.

When diskettes are write-protected, you can read information from the diskettes, but you cannot write information on to them.


There is a write-protect tab on the 3.5-inch diskette.

To locate the write-protect tab, turn the diskette over with the label facing down.

- To prevent writing onto a diskette, slide the write-protect tab, to open the protect slot.

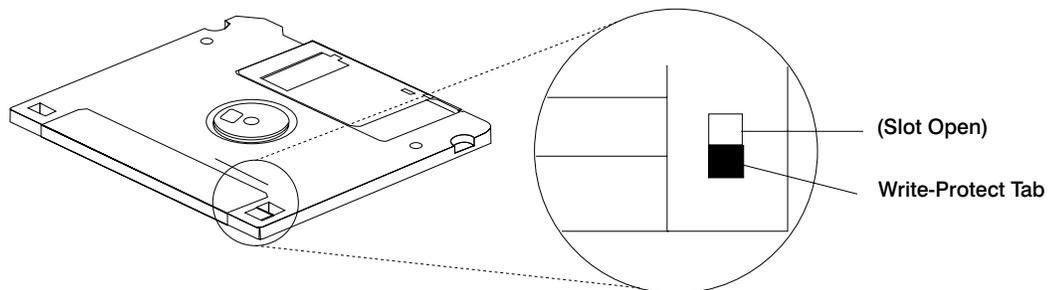

- To allow writing onto a diskette, slide the write-protect tab to cover the protect slot.

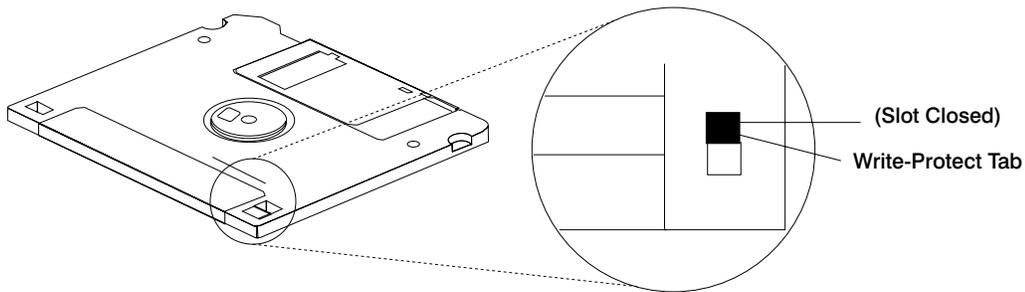

Loading and Unloading the 3.5-Inch Diskette

To load a diskette into the drive, insert the diskette in the diskette drive with the labeled metal shutter first. Push the diskette into the drive until you hear a click. The click indicates that the diskette is securely in position in the drive.


To unload the diskette, push the diskette-unload button. The diskette unloads partially from the drive. Pull the diskette out.

Using the CD-ROM Drive

CAUTION:

A Class 3 laser is contained in the device. Do not attempt to operate the device while it is disassembled. Do not attempt to open the covers of the device, as it is not serviceable and is to be replaced as a unit.

The CD-ROM is located in bay A1 of the system unit. Your CD-ROM drive looks like the one shown in the illustration, and the controls are located as indicated.

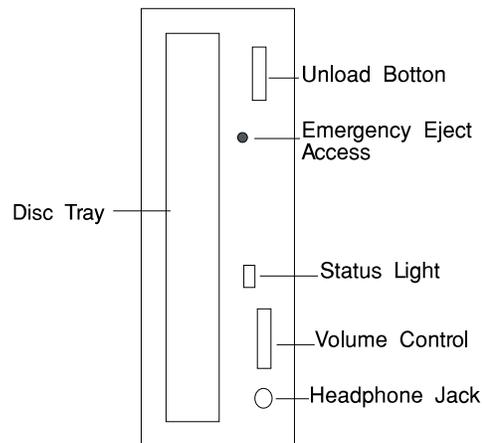


When the CD-ROM is set to On, the status light indicates one of several conditions. The following are status light states and the respective conditions of the CD-ROM drive:

- Off during standby with the tray loaded or unloaded.
- Blinks from insertion of the tray to completion of initialization.
- Blinks slowly when either the lens or disc is dusty (lens should be cleaned by running the cleaning disc).
- Blinks fast when in the audio mode.
- Lights during data transfer operations.
- Lights steady when:
 - No disc is in the tray.
 - The disc is in the tray upside down.
 - Some condition exists that should be checked. If this occurs, contact your service representative.

Loading the CD-ROM Drive

Press the unload button to open the tray. Place the disc, with the printed side away from the tray, into the tray. If the CD-ROM drive is in the vertical position, slip out the bottom tabs to hold the disc in place. Push gently on the load/unload button. The drive automatically pulls the tray into the drive and prepares the disc for reading.

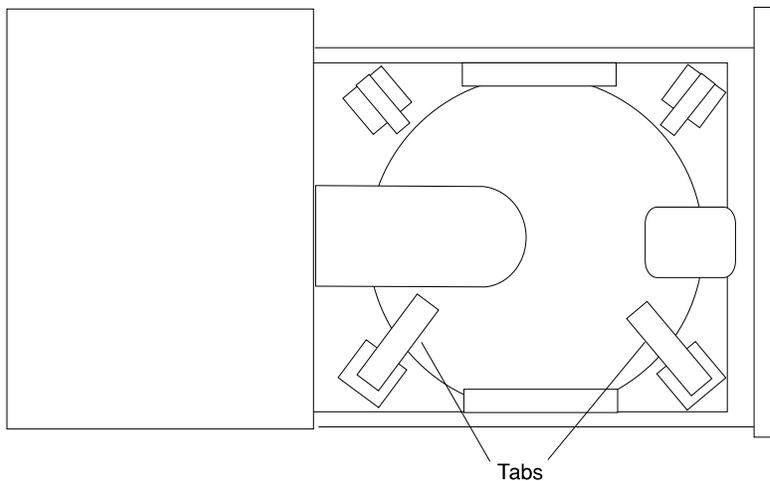

Unloading the CD-ROM Drive

Push and hold the unload button until the drawer comes out and then remove the disc.

Cleaning the CD-ROM Drive


This CD-ROM drive has an internal head-cleaning mechanism, and therefore does not require an external cleaning device. The internal cleaning mechanism cleans the head every time the tray is operated.

Always handle discs carefully by the edges to avoid leaving fingerprints or scratching the disc. (This helps the disc to maintain good readability.) Discs can be wiped with a soft, lint-free cloth or lens tissue. Always wipe in a straight line from the inner hub to the outer rim.

Emergency Eject

Note: Execute the following procedure only in an emergency (caddy will not eject although pressing the unload button).

1. Power-off the CD-Rom drive.
2. Insert a small diameter rod, such as a straightened paper clip, into the emergency eject hole. (Refer to the illustration below for the location of the emergency eject hole.)
3. Push the tool in until some resistance is felt.
4. Maintain a small amount of pressure on the rod while pulling on the tray with your finger nail.
5. Pull the tray open and remove the disc.

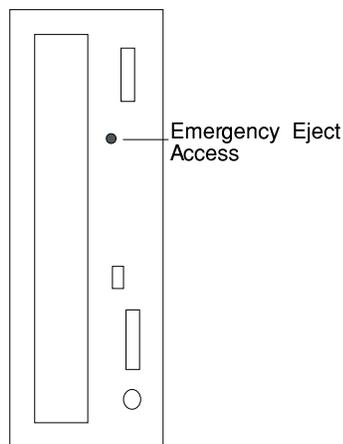

Note: Normally the tray makes a ratcheting sound when pulling it open using the above procedure.

Using the Hot Swap Disk Drives

For information on installing hot swap drives refer to “Installing a SCSI Disk Drive in Bank C, D, or E.” on page 5-52.

For information on removing hot swap drives refer to “Removing a SCSI Disk Drive from Bank C, D, or E” on page 5-92.

Relationship of AIX Prompts and Physical Drive Location

A SCSI adapter and a SCSI drive address can be displayed on a user display. The AIX command **lscfg** list the attached devices on the system display. A SCSI adapter and drives might be listed as:


```

scsi0 00 - 01          SCSI I/O Controller
hdisk0 00 - 01 - 00 - 0,0  1.08GB SCSI Disk Drive
hdisk1 00 - 01 - 00 - 3,0  2.2GB SCSI Disk Drive

```

Labels on the right side of each bank, identify the PCI Bus indicator and PCI Slot address for the SCSI adapter attached to each bank.

Physical Slot of SCSI Adapter	Bank Label
7E/P	04 - 07
6E/P	04 - 06
5E/P	04 - 05
4E/P	04 - 04
3P	04 - 03
2P	04 - 02
1P	04 - 01
Integrated SCSI	04 - C0

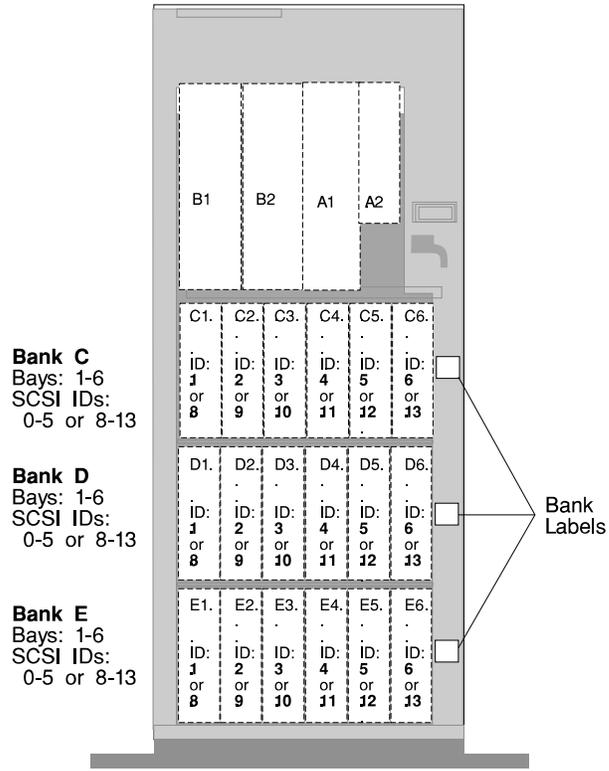

Handling Guidelines

The hot-swap disk drive is a sensitive device. Handle the hot-swap carrier and disk drive with care.


- Do not drop the disk drive or subject the drive to excessive shock.
- Do not expose the disk drive to temperatures lower than -40° F (-40° C) or higher than 158 ° F (70° C).
- If drive temperature changes, allow approximately one hour of temperature acclimatization for every 18° F (10° C) of temperature change.
- Never allow moisture to condense on the drive.
- Static electricity can damage your equipment. Take these precautions to avoid static electricity damage:
 - Always handle your disk drive carefully.
 - Handle the drive by the edges and never touch any exposed circuitry.
 - Prevent others from touching the drive.
- Store the hot-swap disk drive in a protective container such as an instrument case or in a protected area.
- Failure to observe these precautions may lead to product failure, damage, and invalidation of all warranties.

Labels

Several labels are included in your system ship group which may be attached to the handle of the hot-swap drive. The labels may be marked in any way that the user can easily identify the drive for removal or installation.


Disk Drive Status LED States

SCSI Disk Drives: The following table explains the meaning of the green and amber status LEDs and spin down button.

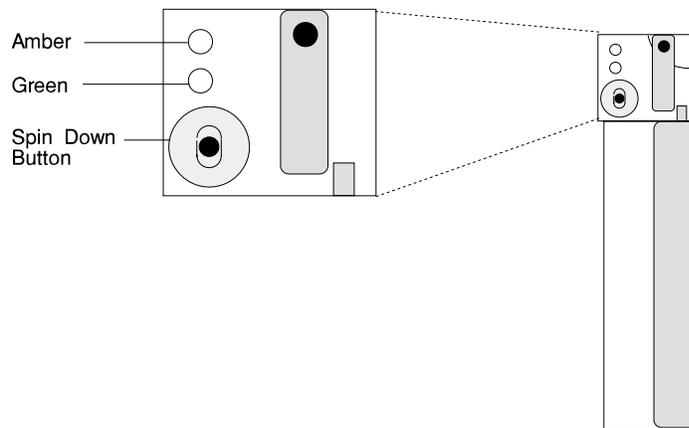

Status LEDs		
LED or Button	Status	Definition
Amber	On	Drive spinning
	Off	Drive not spinning
Green	On	Power On
	Off	Power Off
	Blinking	Power Off/Drive identify
Spin down	Depressed	Spin down drive and remove power

SSA Disk Drives: The following table explains the meaning of the Power, Ready and Check status LEDs.

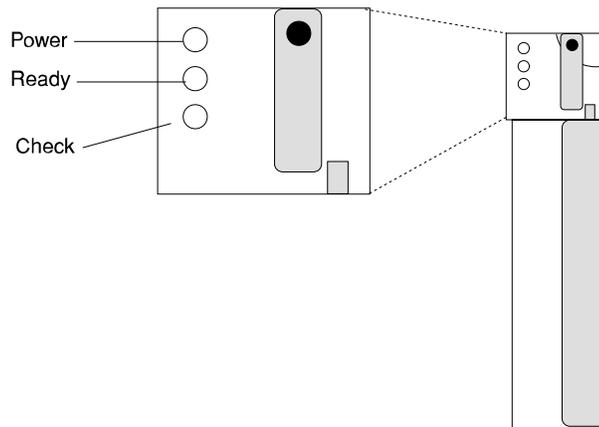

Status LEDs		
LED	Status	Definition
Power	On	Power On
	Off	Power Off
Ready	On	Both SSA connections good and drive is ready
	Blinking	Only one SSA connection good
	Flickering	Drive is executing a command
Check	On	Disk drive failure
		Self-test running
		Drive in service mode
	Blinking	Disk drive selected


Using the 5.0GB 8-mm Tape Drive

The optional 5.0GB 8-mm tape drive is a half-height device.

Status Lights

The 5.0GB 8-mm tape drive has two green status lights and one amber status light. The on and off combinations of the status lights indicate the conditions of the 8-mm tape drive.

Each of the International Organization for Standards (ISO) symbols located next to a status light indicates a specific condition of the tape drive as follows:

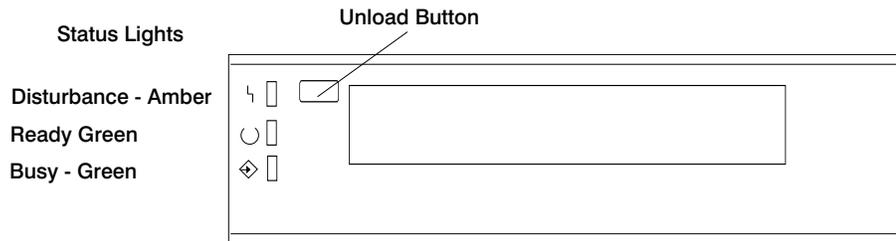

Status Light States

The following table explains the meaning of the green and amber status lights.

Status Lights on the 5.0GB 8-mm Tape Drive			
Status	Ready (green)	Busy (green)	Disturbance (amber)
The power-on self-test (POST) is running or the system has issued a Reset to the drive.	On	On	On
One of the following has occurred: <ul style="list-style-type: none"> The power is off. The POST has completed successfully, but no tape cartridge has been inserted. 	Off	Off	Off
A tape cartridge has been inserted and the 8-mm tape drive is ready to receive commands from the system.	On	Off	Off
A tape cartridge has been inserted and the 8-mm tape drive is performing a tape load or unload operation.	Off	Flashing	Off
The tape is in motion and the 8-mm tape drive is busy running a device operation.	On	Flashing	Off
The 8-mm tape drive has detected an internal fault that requires corrective action. If this occurs, see the following note.	Off	Off	Flashing
The tape path requires cleaning. Refer to "Cleaning the Tape Path on the 5.0GB 8-mm Tape Drive" on page 2-24.	Off or On	Off or Flashing	On


Note: If a fault or an error condition occurs, first try to recover by pressing the unload button. If this does not correct the fault, switch off the power to the 8-mm tape drive and then switch on the power to the drive. If the condition continues, call your service representative.

Loading the 8-mm Tape Cartridge

Before loading the tape cartridge, make sure the power is on and the write-protect tab on the tape cartridge is properly set. Refer to “Setting the Write-Protect Tab on 8-mm Tape Cartridges” on page 2-27. The tape drive loads the tape from the cartridge and prepares it for reading and writing.

To load the 8-mm tape cartridge, do the following:

1. Grasp the edges of the 8-mm tape cartridge with the write-protect tab toward you and the window side of the cartridge facing up.
2. Slide the tape cartridge into the opening on the front of the 8-mm tape drive until the loading mechanism pulls the cartridge into the drive and the drive door closes. The ready status light (green) goes on if the load operation was successful.

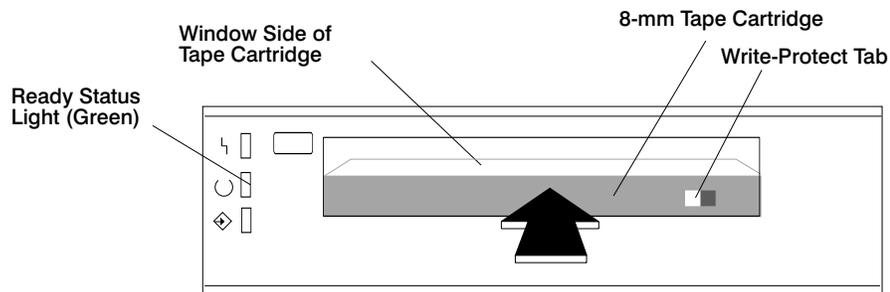

The 8-mm tape drive is ready for data operations when the tape cartridge is inserted. After the cartridge is inserted into the tape drive, the tape takes about 25 seconds to load; this does not interfere with beginning the data operations.

Commands can be entered while the tape is loading. Any commands to the tape drive start running once the tape has finished loading. Commands not requiring the tape cartridge are run immediately.


Unloading the 8-mm Tape Cartridge

Before performing the unload operation, make sure the power to the 8-mm tape drive is on.

To unload and eject the tape cartridge, press the unload button. The 8-mm tape drive rewinds the tape and then ejects the tape cartridge from the tape drive.

After pressing the unload button, the following occurs:

1. The ready status light goes off.
2. The busy status light flashes during the unload operation.
3. The busy status light goes off when the cartridge is ejected from the tape drive.

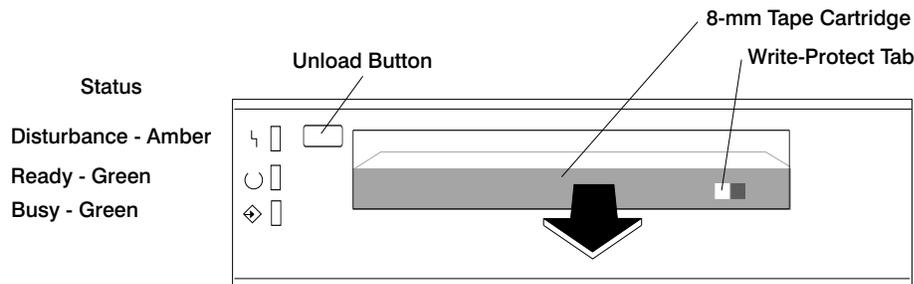

The time required for a tape to rewind and unload is between 18 seconds and 3 minutes, depending on the position of the tape when the unload button is pushed.

If the tape cartridge cannot unload and has to be removed manually from the drive, contact your service representative.

Cleaning the Tape Path on the 5.0GB 8-mm Tape Drive

Attention: Do not use video cleaning cartridges in the 8-mm tape drive. Video cleaning cartridges can damage the 8-mm tape drive.

The 8-mm tape path should be cleaned either approximately every 30 hours of tape motion or once a month, whichever occurs first. The 5.0GB 8-mm tape drive counts the number of hours of tape motion and indicates when the tape path requires cleaning when the lighted disturbance status light (amber) is on.

More frequent cleaning may be required if the drive is operated in a dusty environment or in humid conditions. If the dust is allowed to accumulate, the drive has to perform more reads and writes. This can cause data loss, and may be prevented by regularly scheduled cleaning of the drive.


The cleaning cartridge cleans the 8-mm tape drive 12 times before it needs to be discarded. If you attempt to use an 8-mm cleaning cartridge more than 12 times, the tape drive automatically detects the error and ejects the cleaning cartridge with the disturbance status light (amber) remaining on.

Some video cleaning cartridges are extremely abrasive. An 8-mm tape drive may be permanently damaged after only a few cleaning operations using an abrasive-type cleaning cartridge.

Before loading the cleaning cartridge, make sure the power to the 8-mm tape drive is on.

To load the 8-mm cleaning cartridge, do the following:

1. Grasp the edges of the 8-mm cleaning cartridge with the window side of the cartridge facing up.
2. Slide the cleaning cartridge into the opening on the front of the 8-mm tape drive until the loading mechanism pulls the cartridge into the drive.

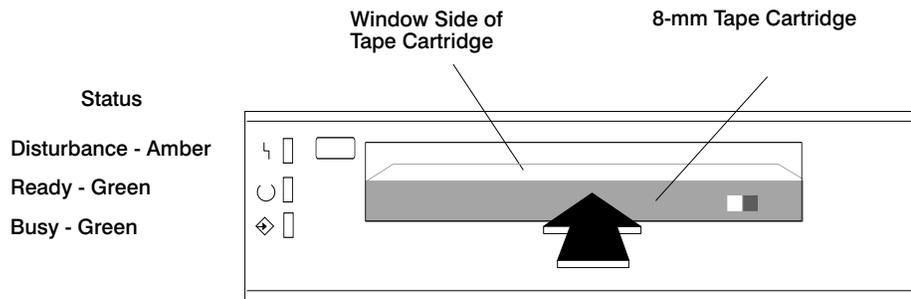

After the 8-mm cleaning cartridge has been fully inserted into the 8-mm tape drive, the following cleaning operations are performed automatically:

1. The cleaning tape is loaded into the tape path.
2. The drive is cleaned by moving the cleaning tape forward for approximately two minutes.
3. The tape is unloaded and the cleaning cartridge is ejected from the tape drive when the cleaning operation is complete.
4. A successful cleaning operation is indicated when the disturbance status light (amber) goes off.

General Information for 5.0GB 8-mm Tape Drive

Recommendations

- Use only Data Grade 8-mm tape cartridges. These cartridges are identified by either a Data, D, or D8 marking on the data cartridge. Use of video grade cartridges can damage the 8-mm tape drive and can void the warranty of your 8-mm tape drive, and data written on these tapes may be lost over a short period of time.
- Remove the tape cartridge from the tape drive when it is not in use, and store the cartridge in the cartridge case.
- Do not open the door on the data tape cartridge. This door covers and protects the magnetic tape material from dirt, dust, and damage.
- Avoid touching the tape since this can cause loss of data.
- Keep the tape drive door closed except when loading or unloading a tape cartridge.
- Back up and then discard any tape cartridge that repeatedly produces error messages. The error information is in the system error log.
- Clean the tape path regularly according to the cleaning procedure of the 8-mm tape drive. Use only recommended cleaning cartridges; other cleaning cartridges can permanently damage your 8-mm tape drive.

Attention: Do not use video grade cartridges in the 8-mm tape drive. Video grade tapes may be unreliable and may cause permanent damage to the 8-mm tape drive.

Types of 8-mm Tape Cartridges

- **Test Tape Cartridge:** This is a specially labeled tape cartridge that is in the media kit with the 8-mm tape drive. Use this cartridge only when checking the operation of the drive or running diagnostics; do not use it to save programs or data.
- **Data Tape Cartridge:** This is a non-labeled blank tape cartridge that is in the media kit. Use this cartridge for saving your programs or data. The same data tape cartridge can be used in either a 2.3GB 8-mm tape drive or a 5.0GB 8-mm tape drive.
- **Cleaning Tape Cartridge:** Use this cartridge for cleaning the 8-mm tape path. For more information, see "Cleaning the Tape Path on the 5.0GB 8-mm Tape Drive" on page 2-24.

Tape Cartridge Compatibility


The 8-mm tape drive is compatible with existing 8-mm tape subsystems that comply to the American National Standard (ANSI) X3B5/89-136, Helical-scan Digital Computer Tape Cartridge, 8-mm for Information Exchange. Data compression effectively increases the cartridge capacity and data transfer rate for the 5.0GB tape cartridges.

Format Modes (C=compression mode)				
8-mm Tape Drive	2.3GB	2.3GB (C)	5.0GB	5.0GB (C)
2.3GB	Read/Write			
5.0GB	Read/Write	Read only	Read/Write	Read/Write

Setting the Write-Protect Tab on 8-mm Tape Cartridges

Setting the write-protect tab on a tape cartridge is necessary so that information is not accidentally lost. When the write-protect tab of a tape cartridge is set (window closed), information can be read from the tape, but cannot be written to it.

The window on the tape cartridge controls write-protection.

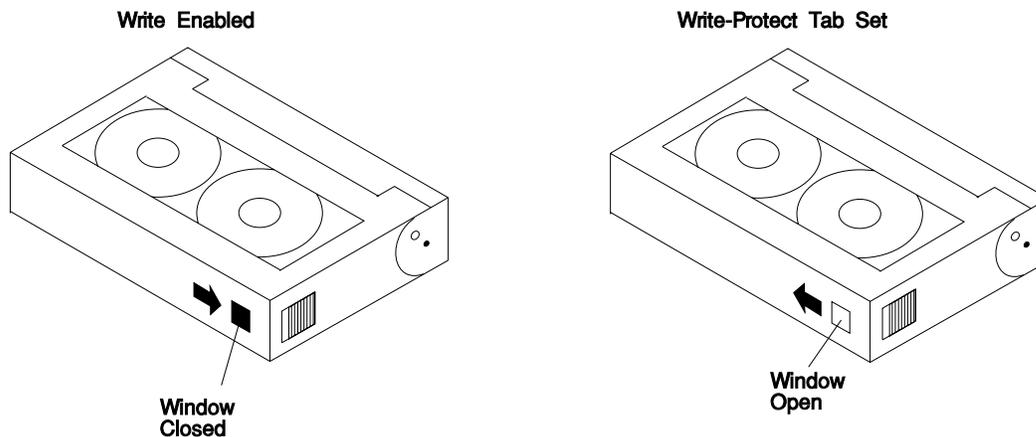

Environment Considerations for 8-mm Data Cartridges

Information in this section describes operating and storage conditions including temperature, relative humidity, and maximum wet bulb data.

Attention: The manufacturer has specified a set of temperature and humidity ranges in which the 8-mm data cartridge can operate with ease. Only regular cleaning procedures are required when operating the cartridge within this range. The risk of possible data loss is increased if 8-mm tape cartridges are operated, stored, or shipped outside the temperature or humidity ranges shown in the following table.

Before using a cartridge, always let it adjust (acclimate) to the operating environment. Do this by placing the cartridge with its container in the operating environment for as long as it has been away from this environment or for 24 hours, whichever is less.

Acclimation is necessary for any data cartridge that has been exposed to a different humidity environment or a temperature change of 11°C or 20°F or more.

	Operating Ranges	Storage	Shipping
Temperature	16°C to 32°C (60°F to 90°F)	5°C to 32°C (40°F to 90°F)	-40°C to 52°C (-40°F to 125°F)
Relative Humidity (non-condensing)	20 to 80%	20 to 80%	5 to 80%
Maximum Wet Bulb	26°C (79°F)	26°C (79°F)	26°C (79°F)

Operating in Harsh Environments

The 8-mm tape drive is ideally suited to streaming operations, as opposed to tape movement operations involving multiple stop/starts and random searches. When the tape is used for frequent stop and start operations, streaming movement is beneficial and should be used whenever possible. This can be accomplished by ensuring that any save or restore operation is the only active operation performed by a device connected to this SCSI I/O controller.

Any tape that has been used outside the ranges specified in the table on 2-28 for an extended period of time (50 passes in 40 hours of nonstop operation) should not be used as an archival tape. Exposure to the environment will deteriorate the magnetic and physical strength of the tape. Do not store important data on a tape that has been used outside the specified ranges; transfer the data to a new tape for reliable archiving.

8-mm Data Cartridge Erasure

Most bulk eraser devices do not have the capability to erase 8-mm data cartridges. To properly erase an 8-mm data cartridge with a bulk eraser device, the erasure rating must be at least 1500 oersted.

The 2.3GB and the 5.0GB 8-mm tape drives erase residual data before writing new data on the data tape.

Tape Cartridge Data Efficiency

The 8-mm tape cartridge efficiency is defined as the amount of data that can be stored on the cartridge. The following variables affect the amount of data that can be stored on a tape cartridge:

- Size of the data file
- Number of file marks per file
- File mark size used
- Compatibility mode (2.3GB or 5.0GB)
- Media rewrites.


Using the 4.0GB 4-mm Tape Drive

The optional 4.0GB 4-mm tape drive is a half-high device.

Status Lights

The 4.0GB 4-mm tape drive has two green status lights and one amber status light. The on and off combinations of the status lights indicate the conditions of the 4-mm tape drive.

Each of the International Organization for Standards (ISO) symbols located next to a status light indicates a specific condition of the tape drive as follows:

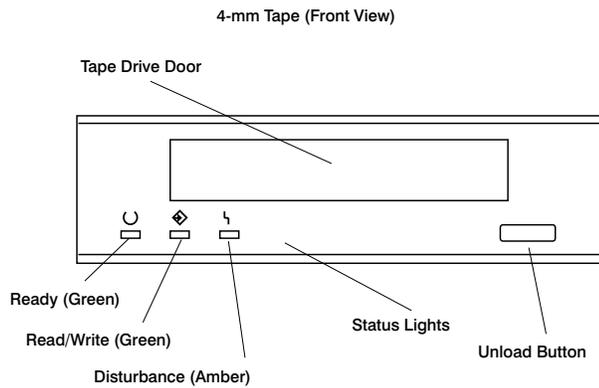

Status Light States

The following tables explain the meaning of the green and amber status lights.

	Ready (green)	Read-Write (green)	Disturbance (amber)
Off	No cartridge installed or error condition	No cartridge or no activity	No error condition
Steady	Cartridge installed or loading/unloading		Cleaning required or worn media
Flashing	Power-on self- test in progress	Cartridge activity	Error condition

Status Lights on the 4.0GB 4-mm Tape Drive			
Status	Ready (green)	Read-Write (green)	Disturbance (amber)
LED test.	On 2 seconds at power on	On 2 seconds at power on	On 2 seconds at power on
The power-on self-test (POST) is running or the Diagnostic Cartridge is running.	Flashing	Off	Off
One of the following has occurred: <ul style="list-style-type: none"> The power is off. The POST has completed successfully, but no tape cartridge has been loaded. 	Off	Off	Off
A tape cartridge has been inserted and the 4-mm Tape Drive is Ready to receive commands from the system.	On	Off	Off
The tape is in motion and the 4-mm Tape Drive is running a device operation or cleaning.	On	Flashing	Off
The 4-mm Tape Drive has detected an internal error that requires corrective action such as tape cartridge failure, high humidity, or no SCSI terminator. Refer to the service guide or contact your service representative. (See note below)	Off	Off	Flashing
The tape path requires cleaning or a poor quality tape cartridge is being used. See "Cleaning the Tape Path on the 4.0GB 4-mm Tape Drive" on page 2-33.	Off or On	Off or Flashing	On


Note: If an error condition occurs, first try to recover by pressing the unload button. If this does not correct the error, switch off the power to the 4-mm tape drive and then switch on the power to the drive. If the condition continues, call your service representative.

Loading the 4-mm Tape Cartridge

Before loading the tape cartridge, make sure the power is on and the write-protect switch on the tape cartridge is properly set. Refer to “Setting the Write-Protect Tab on 4-mm Tape Cartridges” on page 2-38. The tape drive loads the tape from the cartridge and prepares it for reading and writing.

To load the 4-mm tape cartridge, do the following:

1. Grasp the edges of the 4-mm tape cartridge with the write-protect tab towards you and the window side of the cartridge facing up.
2. Slide the tape cartridge into the opening on the front of the 4-mm tape drive until the loading mechanism pulls the cartridge into the drive and the drive door closes. The ready status light (green) goes on if the load operation was successful.

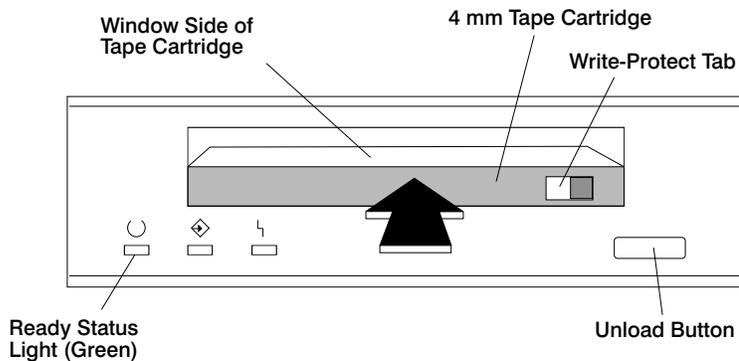

The 4-mm tape drive is ready for data operations when the tape cartridge is inserted. After the cartridge is inserted into the tape drive, the tape takes about 15 seconds to load.


Unloading the 4-mm Tape Cartridge

Before performing the unload operation, make sure the power to the 4-mm tape drive is on.

To unload and eject the tape cartridge, press the unload button. The 4-mm tape drive rewinds the tape and then ejects the tape cartridge from the tape drive.

After pressing the unload button, the following will occur:

1. The Read-Write status light flashes during the unload operation.
2. The Ready status light and the Read-Write status light turns off when the cartridge is ejected from the tape drive.

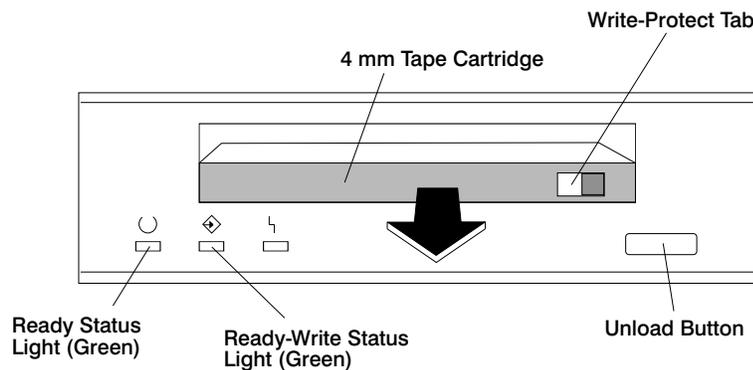

The time required for a tape to rewind and unload is between 10 seconds and 1.5 minutes, depending on the position of the tape when the unload button is pushed.

If the tape cartridge cannot unload and has to be removed manually from the drive, contact your service representative.

Cleaning the Tape Path on the 4.0GB 4-mm Tape Drive

The 4-mm tape path should be cleaned either approximately every 30 hours of tape motion or once a month, whichever occurs first. The 4-mm tape drive monitors the recording quality of the tape cartridge and indicates that the tape path requires cleaning when the disturbance status light (amber) is on.


More frequent cleaning may be required if the drive is operated in a dusty environment or in humid conditions. If the dust is allowed to accumulate, the drive has to perform more reads and writes. This can cause data loss, and may be prevented by regularly scheduled cleaning of the drive.

The cleaning cartridge cleans the 4-mm tape drive 50 times before it needs to be discarded. If you attempt to use a 4-mm cleaning cartridge more than 50 times, the tape drive automatically detects the error and ejects the cleaning cartridge with the disturbance status light (amber) remaining on.

Before loading the cleaning cartridge, make sure the power to the 4-mm tape drive is on.

To load the 4-mm cleaning cartridge, do the following:

1. Grasp the edges of the 4-mm cleaning cartridge with the window side of the cartridge facing up.
2. Slide the cleaning cartridge into the opening on the front of the 4-mm tape drive until the loading mechanism pulls the cartridge into the drive.

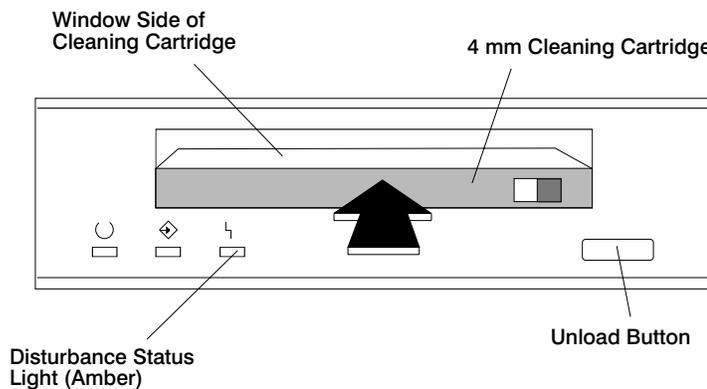

After the 4-mm cleaning cartridge has been fully inserted into the 4-mm tape drive, the following cleaning operations are performed automatically:

1. The cleaning tape is loaded into the tape path.
2. The drive is cleaned by moving the cleaning tape forward for approximately 30 seconds.
3. The tape is unloaded and the cleaning cartridge is ejected from the tape drive when the cleaning operation is complete.
4. A successful cleaning operation is indicated when the disturbance status light (amber) goes off (if it was activated before the cleaning operation).

General Information for 4.0GB 4-mm Tape Drive

The 4.0GB 4-mm tape drive is a streaming tape drive that is used to:

- Save and restore system data files.
- Archive important records.
- Distribute operating system software upgrades.

The 4-mm tape drive can be attached to any system using a single-ended interface meeting the Small Computer System Interface II (SCSI-II) Standard ANSI X3.131-199X Rev. 10h.

The 4-mm tape drive has the following features:

- Capacity of 4.0 GB per cartridge. 8 GB is typical with data compression and with DDS2 data cartridges.

The actual capacity per cartridge varies depending on the application and the type of data cartridge being used.

- Data transfer rate is 400 KBps. 800 KBps is typical with data compression.

Note: Data compression activated is the default setting from the factory. Data compression is usually controlled by the application software.

- Read and write of DDS|||| tape cartridges in 2.0 GB per cartridge format.
- A status light that indicates when it is time to clean the tape path.
- Internal diagnostics that are activated when the 4 mm Diagnostic Cartridge is inserted and loaded into the drive.
- Media recognition system: Only data grade media can be used with this tape drive.

The 4-mm tape drive uses a 4-mm data cartridge for saving and restoring your system data. The 4-mm tape drive uses only 4-mm Digital Data Storage (DDS) cartridges.

Recommendations

Attention: Tape cartridges that do not carry the proper DDS symbol cannot be written to and their use causes the 4-mm tape drive to report an error.

- Use only 4-mm Digital Data Storage (DDS) cartridges.
Attention: Use of other than recommended cleaning cartridges can damage your tape drive and will void the drive warranty.
- Clean the tape path by using the recommended cleaning cartridge. Follow the instructions on the cartridge.
- Back up and then discard any tape cartridge that repeatedly produces error messages. The error information is in the system error log.
- Do not open the door on the data cartridge that covers the tape. This door protects the magnetic tape material from dirt, dust, and damage.
- Do not operate in a dusty environment.
- Do not touch the tape material. Any substance transferred to the tape by touching it could cause loss of data.

Types of 4-mm Tape Cartridges

The 4-mm tape drive is shipped with three 4-mm cartridges to help start your tape operations immediately.

- | | |
|-----------------------------------|---|
| 4-mm Data Cartridge: | Use this non-labeled cartridge for saving or restoring your programs or data. Additional data cartridges can be ordered. |
| 4-mm Diagnostic Cartridge: | Use this specially labeled cartridge to perform diagnostics on the drive. Do not use it to save or restore programs or data. |
| Cleaning Cartridge: | Use this cartridge for cleaning the 4-mm tape path. For more information, see “Cleaning the Tape Path on the 4.0GB 4-mm Tape Drive” on page 2-33. |

Tape Cartridge Compatibility

The 4-mm Tape Drive is compatible with existing 4mm tape subsystems that are designed to operate with Digital Data Storage approved media, which meet the following standards:


- For DDS||||
 - American National Standard (ANSI) standard, X3.203-191, Helical-scan Digital Computer Tape Cartridge, 3.81mm.
 - European Computer Manufacturers Association (EMCA) standard, EMCA-150 , 3.81mm Wide Magnetic Tape Cartridge and DDS|||| format.
- For DDS2
 - European Computer Manufacturers Association (EMCA) standard, EMCA/TC17/93/20, 3.81mm Wide Magnetic Tape Cartridge for Information Interchange Helical Scan Recording, DDS2 format.

You cannot change the density setting of the drive, because the device reconfigures itself automatically, depending on the media type installed, as follows:

Media Type	Device Configuration
DDS	Read-only
DDS 	Read/write in 2.0GB mode only.
DDS2	Read in either density; write in 4.0GB mode only.
Non-DDS	Not supported. The cartridge will eject.

Setting the Write-Protect Tab on 4-mm Tape Cartridges

The window on the tape cartridge controls write-protection. When the write-protect tab of a tape cartridge is set (window open), information can be read from the tape, but cannot be written to it. When the write-protect tab of a tape cartridge is not set (window closed), information can be both written to and read from the tape. Trying to write to a 4-mm data cartridge with the window open causes an error.

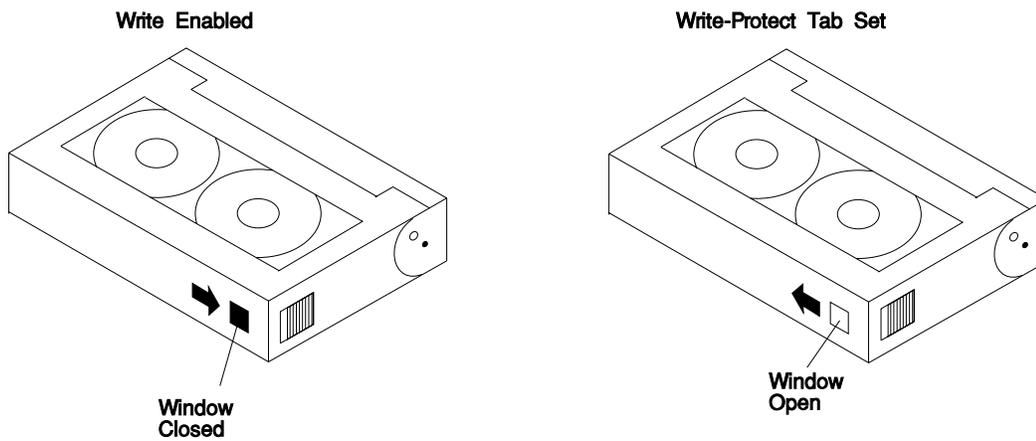

Environmental Considerations for 4-mm Data Cartridges

Information in this section describes operating and storage conditions including temperature, relative humidity, and maximum wet bulb data.

Attention: The manufacturer has specified a set of temperature and humidity ranges in which the 4-mm data cartridge can operate with ease. Only regular cleaning procedures, as described in “Cleaning the Tape Path on the 4.0GB 4-mm Tape Drive” on page 2-33. are required when operating the cartridge within this range. The risk of possible data loss is increased if 4-mm tape cartridges are operated, stored, or shipped outside the temperature or humidity ranges shown in the following table.

Before using a cartridge, always let it adjust (acclimate) to the operating environment. Do this by placing the cartridge with its container in the operating environment for as long as it has been away from this environment or for 24 hours, whichever is less.

Acclimation is necessary for any data cartridge that has been exposed to a different humidity environment or a temperature change of 11°C or 20°F or more.

	Operating Ranges	Storage	Shipping
Temperature	16°C to 32°C (60°F to 90°F)	5°C to 32°C (40°F to 90°F)	-40°C to 52°C (-40°F to 125°F)
Relative Humidity (non-condensing)	20 to 80%	20 to 80%	5 to 80%
Maximum Wet Bulb	26°C (79°F)	26°C (79°F)	26°C (79°F)

Operating in Harsh Environments

The 4-mm tape drive is ideally suited to streaming operations, as opposed to tape movement operations involving multiple stop/starts and random searches. When the tape is used for frequent stop and start operations, streaming movement is beneficial and should be used whenever possible. This can be accomplished by ensuring that any save or restore operation is the only active operation performed by a device connected to this SCSI I/O controller.

Any tape that has been used outside the ranges specified in the previous table for an extended period of time (50 passes in 40 hours of nonstop operation) should not be used as an archival tape. Exposure to the environment deteriorates the magnetic and physical strength of the tape. Do not store important data on a tape that has been used outside the specified ranges; transfer the data to a new tape for reliable archiving.

4-mm Data Cartridge Erasure

Most bulk eraser devices do not have the capability to erase 4-mm data cartridges. To properly erase an 4-mm data cartridge with a bulk eraser device, the erasure rating must be at least 2000 oersted.

The 4-mm tape drive erases residual data before writing new data on the data tape.

Tape Cartridge Data Capacity

The 4-mm tape cartridge capacity is defined as the amount of data that can be stored on the cartridge. The following variables affect the amount of data that can be stored on a tape cartridge:


- Size of the data file
- Number of file marks per file
- Compatibility mode (2GB or 4GB)
- Media rewrites.

Using the 24/48GB DDS-2 4-mm Tape Autoloader

There are two versions of the 4-mm Tape Autoloader. One is vertically oriented and the other is horizontally oriented. Your system type determines which version you use. Both versions operate the same although the front bezel is labeled vertically or horizontally. The vertical version is shown.

Attention: Never remove, install, or transport the 4-mm Tape Autoloader with tape cartridges loaded in the drive. They can become dislodged and jam the mechanism.

Controls and Indicators

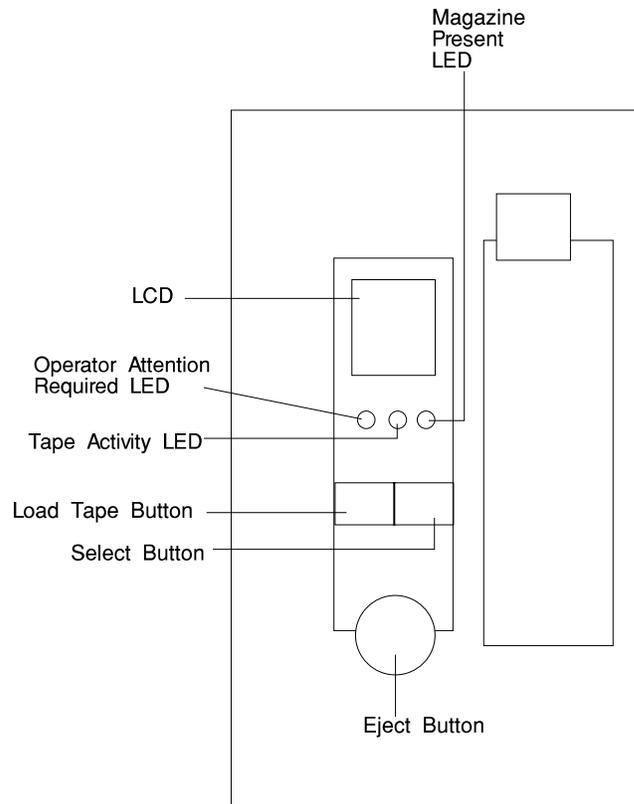

Select Button: The Select button allows you to select a cartridge from the magazine in the unit. The number of the cartridge selected is displayed on the left side of the LCD. If you press the Select button repeatedly, the display cycles through the cartridges available in the magazine.

Eject Button: The Eject button starts the unload process. The drive unloads any currently loaded cartridge, and the changer mechanism returns it to the magazine. The magazine is then ejected.

Load Tape Button: The Load Tape button loads the selected cartridge from the magazine into the drive. The drive then goes into sequential mode. See “Modes” on page 2-47.

Note: When in Random Mode, the select and load buttons are disabled. Their function is controlled by host software.

Magazine Present (LED)

- Steady Green: A magazine is in the Autoloader.
- Flashing Green: A magazine is being loaded, checked, or ejected.

Tape Activity (LED): This light indicates what is happening to the cartridge in the drive:


- Steady Green: A cartridge is present in the drive
- Rapidly Flashing (twice per second) Green: Data is being read or written
- Slowly Flashing (once per second) Green: A cartridge is being loaded or unloaded.

Operator Attention Required (LED): This light indicates that the operator needs to take some action:

- Steady Amber: A serious hardware error has occurred. If a power reset does not eliminate the problem, the Tape Autoloader requires service.
- Flashing Amber: A user-recoverable error has occurred:
 - The front-panel door is open.
 - A cartridge is in the drive, but no magazine is present.
 - The tape heads need cleaning.
 - The tape is nearing the end of its useful life.
 - A firmware upgrade is occurring.

When the Operator Attention Required LED is on or flashing, an error message might be displayed in the Status LCD.

Status Liquid Crystal Display

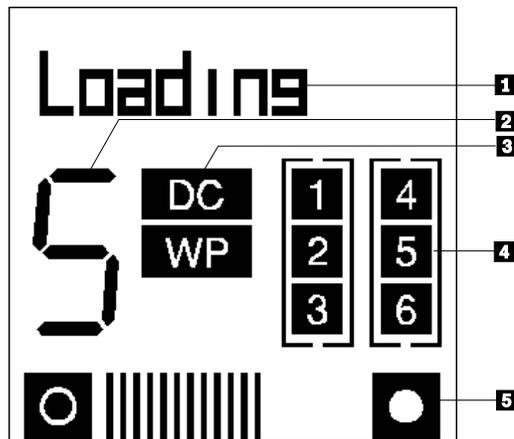

The Status LCD displays a range of autoloader status information in each of its five display regions:

- 1** A 10-character display provides operating status information and potential error conditions.
- 2** A 7-segment display shows the number of the cartridge currently loaded in the drive, or the cartridge selected when the Select button is pressed repeatedly.
- 3** "DC" indicates that data compression is being used for writing; "WP" indicates a Write-Protected cartridge.
- 4** Six numbered boxes individually light to show which magazine slots contain a cartridge.
- 5** An "odometer" line shows how much tape has been used in the active partition of the current cartridge. The more lines that are shown, the more tape that has been used.

Loading a Magazine

Attention: Cartridge and magazine labels must be firmly affixed to the recessed label areas; otherwise, the mechanism will jam.


- Labels must not be peeling off.
- Labels must not go over the edge of the label area.
- Labels must not be folded over the edge of cartridges.
- Labels must not be stuck on top of another label.

Attention: Only cartridges labeled with the DDS or DDS2 logo should be used in the Autoloader.




It is recommended that you store cartridges in their magazines, so that cartridges belonging to a multi-volume backup are kept together and in the correct order.

1. Align the arrow on the cartridge with the arrow on the magazine and insert the cartridge in the magazine. Insert as many cartridges as you need. You can insert up to 6 cartridges, and they can be placed in any of the magazine slots.

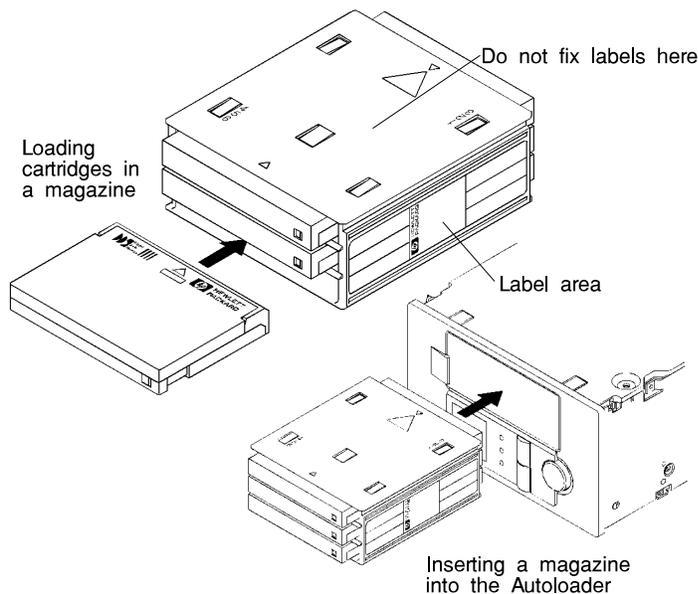

2. Insert the cartridge magazine into the slot in the front of the Autoloader with the large arrow on the magazine pointing towards the Autoloader. Apply steady pressure until the mechanism takes the magazine and pulls it into the Autoloader.

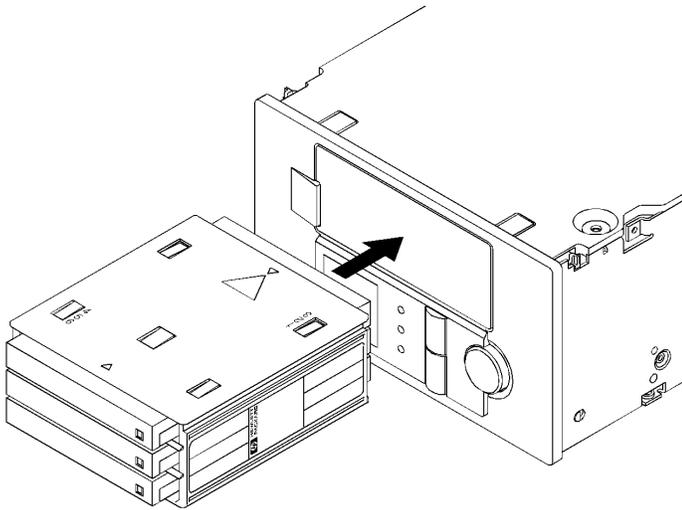

Ejecting a Magazine

To eject the magazine, press the Eject button. When you do this:

1. The tape rewinds to the beginning of the partition (BOP).
2. If the tape is write-enabled, the updated copy of the Tape log is written back to tape.
3. The tape rewinds to BOM and is unthreaded.
4. The changer replaces the cartridge in the magazine.
5. The magazine is ejected.

Forcing an Ejection

Attention: Force an ejection only as a last resort to recover a cartridge. Never use it as a quick way of ejecting the cartridge. You can lose data if you force an eject. The tape also might end up invalidly formatted, because EOD might not have been written.

If you press the Eject button when the drive is busy, the drive first completes the current task. Then it responds to the ejection request. This ensures that the task is terminated in a controlled manner and that no data is lost.

There might be occasions when you need to unload a cartridge urgently, even at the risk of losing data. To do this, you must force an ejection:

1. Press and hold the Eject button for at least 5 seconds. The LCD displays "Force Eject."
2. The Autoloader waits 35 seconds to give the normal ejection process a chance to occur.
3. When this period elapses, any tape in the drive is immediately unthreaded, and the cartridge is ejected, regardless of what operation the drive was performing. The cartridge then is returned to its slot in the magazine, and the drive is reset as though power had been cycled. Because forced ejection might interrupt an operation, it is possible that the drive will not write EOD before the cartridge is ejected. This will cause a loss of data and an invalid formatting of the cartridge. The data on such a cartridge should be readable up to the point where the format violation occurred.
4. If no cartridge is loaded in the drive, the Autoloader waits 35 seconds, ejects the magazine, and then resets as though power had been cycled.

Modes

The Autoloader can operate in two modes, sequential or random.

Sequential: In sequential mode, the Autoloader does not depend on host implementation of changer commands. You select which cartridge you want to start with by using the Select and Load buttons on the front panel. When a cartridge is ejected from the drive following a host UNLOAD command, the cartridge is placed back in its slot and the Autoloader automatically loads the next available cartridge from the magazine into the drive.

Random: In random mode, the host views the Autoloader as two devices:

- A changer mechanism to which SCSI Medium Changer commands can be sent.
- A tape drive to which SCSI Sequential Access commands can be sent.

The controlling host computer therefore has full random access to any cartridge. Most backup/restore applications automatically load, unload the Autoloader using the random access mode. Refer to your backup/restore software instructions for additional details.

Loading and Unloading Cartridges

When a magazine containing cartridges has been inserted into the autoloader, some applications can begin, because they use the Move Medium commands which can select and load cartridges. However, many applications, and the AIX commands **mksysb**, **tar**, **backup**, **cpio**, operate only with a tape drive which has media loaded (is Ready). Also, the drive must be loaded with an appropriate cartridge to boot from the drive, or to run diagnostics on the drive. You can load the drive manually using the controls on the front of the Autoloader.

To load a cartridge into the tape drive contained in the Autoloader, you use the Select button on the front of the Autoloader to select one of the cartridges from the magazine. Then, pressing the Load Tape button causes the selected cartridge to be moved from the magazine to the drive, where the drive starts a Load cycle automatically. Pressing the Load Tape button when the Select digit is "0" causes the loading of the first available cartridge in the magazine.

The tape drive may encounter difficulties in loading the cartridge. If it does, AIX and most using applications are unaware of the difficulty because applications and AIX typically communicate with "Ready" devices. You should observe the loading process to ensure it completes successfully. If the Load Tape process fails, the Autoloader retries the cycle several times. Failure to load after retrying will be signaled to the

operator through the LCD panel and Operator Attention Required LED on the control panel.

Load failures are indicated by a flashing (Yellow) Operator Attention Required LED and messages on the LCD. If an error message (for example, Error 112) is displayed alternating with the instruction PressEject, the operator should press the Eject button which causes the magazine to be ejected with the unloadable cartridge. Try another cartridge. If a second cartridge also fails to load, the drive may be defective. However, if a substitute cartridge loads successfully, the original cartridge may be defective. You can try to load it into another 4-mm tape drive, or examine it for obvious problems (such as tape disconnected from one of the reels).

When a cartridge has been loaded, the LCD displays the READY message, and the application, diagnostic, or command can be initiated or continued. On initial manual loading, the Autoloader is in a sequential mode. In this mode, an Unload command issued to the drive causes the cartridge to be placed back in its assigned slot in the magazine and the next available cartridge to be loaded. This process ends when the cartridge in the highest numbered occupied slot of the magazine has been processed.

Most AIX commands such as **mksysb**, **tar** and **backup** do not issue Unload commands at the end of the command or at the end of the tape. When not controlled by the command or application, the operator should cause the unload by pressing the Eject button (making sure that the application or command is finished with the cartridge). The magazine ejects when operating in this single cartridge mode. Re-insert the magazine, and select the next or appropriate cartridge to continue or to initiate a new command or application. Don't reuse the cartridge just unloaded if it contains important data (such as your backup data).

Autoloader Status Messages

See the *24/48GB DDS-2 4-mm Tape Autoloader Installation and User's Guide* for information about status messages.

Error Messages

See the *24/48GB DDS-2 4-mm Tape Autoloader Installation and User's Guide* for information about error messages.

Head Cleaning

The tape heads should be cleaned regularly, as indicated in the following table. Tape heads also should be cleaned if the "Clean Me" message is displayed on the LCD and the Operator Attention Required LED is flashing amber.

Number of DDS cartridges used each day	Cleaning Interval
1	Weekly
2 to 3	Twice a week
4 or more	Daily

Clean the heads using a cleaning cartridge as follows.

Sequential Mode

1. Place the cleaning cartridge into one of the magazine slots (for example, slot 1) and insert the magazine into the Autoloader.
2. Use the Select button to select the slot in which you placed the cleaning cartridge.
3. Press the Load Tape button to load the cleaning cartridge into the drive. The Autoloader then automatically performs a cleaning cycle.
4. Press the eject button to unload the magazine and remove the cleaning cartridge.
5. Record the date on the label of the cleaning cartridge. After 25 uses, discard the cartridge.

Random Mode

1. Some backup software performs the cleaning operation automatically. Using this process, the cleaning cartridge could be in any one of the six magazine slots. The Autoloader recognizes that the cartridge is a cleaning cartridge once it is loaded into the drive.
2. The drive then automatically carries out a cleaning cycle.
3. The drive automatically ejects the cartridge when the cleaning cycle is complete. The changer returns the cartridge to its magazine slot without any additional user involvement. Refer to your backup/restore software instructions for additional details.

Chapter 3. System Management Services

These programs make it possible for you to view information about your system, run memory tests, and set the storage device from which the server boots.

If you have a graphical display connected to a display adapter in your system unit, then you can use the graphical System Management Services. Otherwise, you must use the text-based version of the System Management Services.

The graphical System Management Services is described in “Graphical System Management Services” on page 3-2; the text-based System Management Services is described beginning in “Text-Based System Management Services Programs” on page 3-11; the ASCII terminal is described beginning in “ASCII Terminal System Management Services Programs” on page 3-16.

To start the programs:

1. Turn on or shutdown and restart the system.
2. When the first screen appears, press the **F1** key to use the graphical System Management Services. To use the text-based System Management Services, press the **F4** key or number 4 key on an ASCII terminal.

Note: You must press **F1** or **F4** key after the diskette indicator appears on the screen, but before the last indicator appears. After you have pressed the F1 or F4 key, the initialization indicators continue to display, and the System Management Services screen displays after the last indicator.

Note: It is recommended that you create a Firmware Recovery Diskette using the Update Firmware selection in the System Management Services Tools section described in this chapter.

Graphical System Management Services

When the graphical System Management Services program begins, the following screen appears.



The System Management Services screen contains the following objects.



Start Up: This function allows you to define a custom boot list, which defines the sequence in which devices are searched by the operating system for a bootable image.



Test: Allows you to repeatedly test the memory in your system.




Tools: Enables you to set and remove passwords and to set the unattended start mode. In addition, you can view information about your system and update system programs.



Exit: Returns you to the previous screen.

To select an object, use the arrow keys to highlight an object and then press **Enter** or the **Spacebar**. To leave the current screen, either press the **Esc** or select the **Exit** object.

Start Up

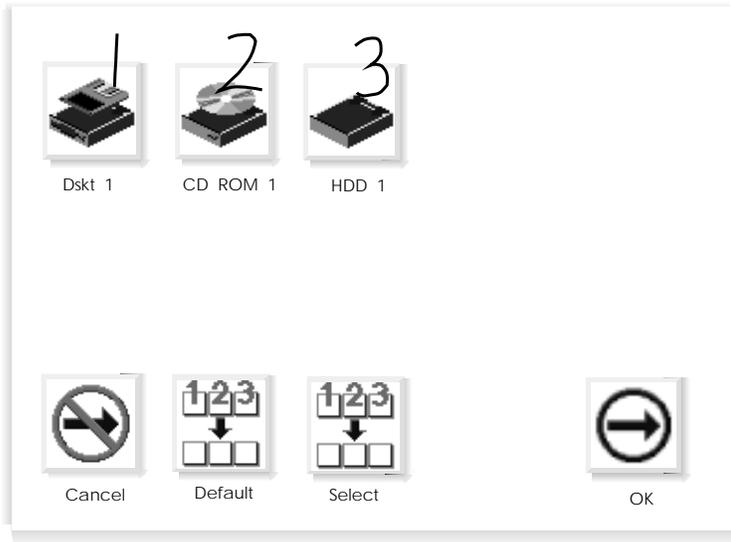

This selection enables you to define a custom boot list or reset default list, which determines the order in which devices are searched by the firmware for a bootable image. The screen may show the following objects.



Diskette: Diskette drive.



CD-ROM: CD-ROM drive.



HDD: Hard disk drive.

Highlight the device which the system will search for first when booting, and press the **Spacebar**. Notice that numbers appear over the objects, indicating the order of the startup sequence. Up to four devices can be specified. To cancel your selection, select the **Cancel** object. The **Default** object sets the sequence to:


- Diskette drive
- CD-ROM drive
- Hard disk drive
- Tape drive
- Network (if installed)

If your system has more devices than shown in the list, their objects will be displayed after those in the default sequence.

Attention: If you change your custom boot list, you must be extremely careful when doing *write* operations (for example, saving or formatting). You can accidentally overwrite data or programs if you select the wrong drive.

Test

Selecting this object enables you to test the memory in your system unit.

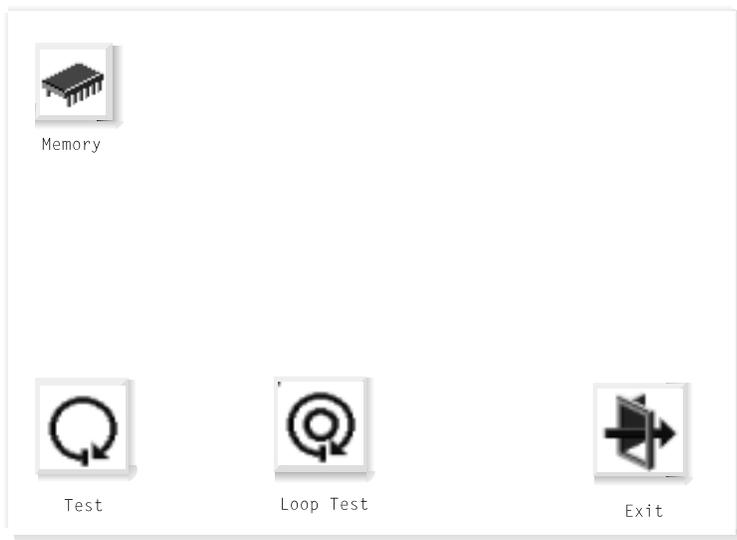

To begin the test, select the **Test** object.



The **Loop Test** object, when selected, allows the memory to be tested in a continuous loop. The test can be stopped by pressing the **S** key.




If a problem is detected during testing, an error code similar to the one below will be displayed under the object for the failing device.

00020000

If an error code appears, make a written record of the error code.

Tools

Selecting this object enables you to perform various tasks and view additional information about your system. The following screen appears with objects presented for your selection.

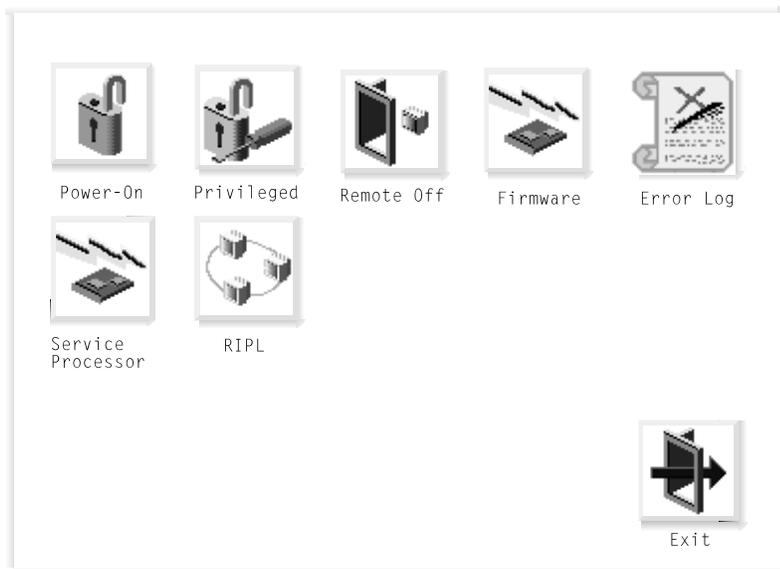

The following describes the objects on this screen.



Power-On Password: Setting a power-on password helps protect information stored in your system. When you select this object, a screen with 8 empty boxes appears. Type your password in these boxes. You can use any combination of up to eight characters (A–Z, a–z, and 0–9) for your password. As you type a character, a key appears in the box. Press **Enter** when you are finished; you will be required to type the password again for verification. If you make a mistake, select the **Cancel** object and start again.

If you already had set a power-on password and wanted to remove it, select the following object.




Note: If you *forget* your password, you will have to remove the battery for at least 30 seconds to disable the password. See Appendix B, “Replacing the Battery” on page B-1.

A password can be set only after system power has been turned off and then on again. You cannot set a password after using the **Ctrl+Alt+Del** combination (or *warm boot*) to restart the system.



Privileged-Access Password: The privileged-access password protects against the unauthorized starting of the system programs. Follow the same procedure described for the power-on password.

As with the power-on password, you must turn system power off and then on again before setting a privileged-access password.

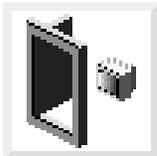

Remote Mode: The remote mode, when enabled, allows the system to start from the defined boot device. This mode is ideal for network servers and other systems that operate unattended. You *must* set a power-on password before you can enable the remote mode. When the remote mode is set, the object changes to **Remote On**.

If you remove the power-on password, the remote mode is automatically reset, and the object returns to **Remote Off**.

Selecting **Remote On** resets the startup mode to the normal startup sequence.



Firmware: Enables you to update system firmware.

Firmware should be selected only when a change to the system firmware is needed. A *Firmware Update* diskette will be made available to you when such an update is needed.


Firmware updates take several minutes, and you need a DOS formatted 1.44MB diskette. The procedure for updating the firmware is as follows.

Attention: Do not turn off power to your system during this procedure.

1. Select **Tools**, and then **Firmware**.
2. Make a backup copy of the system firmware using a DOS formatted 1.44MB diskette as prompted. This backup is a Firmware Recovery Diskette that may be used later to recover from system problems.
3. When the backup is complete, insert the *Firmware Update* diskette. The system firmware will be updated, and the system will automatically restart upon completion.



Error Log: Enables you to view error log information that is stored if an error occurs.

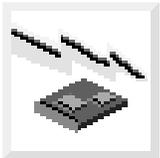

Service Processor: Enables you to update service processor firmware.

Service Processor should be selected only when a change to the service processor firmware is needed. A *Service Processor Update* diskette will be made available to you when such an update is needed.

Service processor updates take several minutes, and you need a DOS formatted 1.44MB diskette. The procedure for updating the service processor firmware is as follows.

Attention: Do not turn off power to your system during this procedure.

1. Select **Tools**, and then **Service Processor**.
2. Make a backup copy of the service processor firmware using a DOS formatted 1.44MB diskette as prompted. This backup is a Service Processor Firmware Diskette that may be used later to recover from system problems.
3. When the backup is complete, insert the *Service Processor Firmware Update* diskette. The service processor firmware will be updated, and the system will automatically restart upon completion.



RIPL: Allows you to select a remote system to load programs from when your system is first powered on.

Overriding the Stored Boot Sequence

In order to override the stored boot sequence for the current boot, press **F5** after the keyboard indicator appears on the screen, but before the last indicator appears. This forces the firmware to search for startup code on the devices listed in the default sequence, either diskette, CD-ROM, hard disk drive, or token-ring (if installed) or ethernet (if token-ring is not installed). Pressing **F5** does not modify what has already been selected through “Start Up” on page 3-4. That information is still stored in the system. Pressing **F5** is limited to the current boot.

Text-Based System Management Services Programs

To start the programs:

1. Turn on or shutdown and restart the system.
2. As soon as the first screen appears, press the **F4** key.

Note: You must press **F4** after the diskette indicator appears on the screen, but before the last indicator appears.

The System Management Services screen appears.

```
System Management Services

Select one:

  1. Select Boot Devices
  2. Test the Computer
  3. Utilities
  4. Select Language

Enter   Esc=Quit  F1=Help  F3=Reboot  F9=Start OS
```

Use the Up Arrow and Down Arrow keys (↑ or ↓) to highlight your selection; then press **Enter**.

You can get help information about any item on a menu by highlighting the item and pressing F1. The bottom of the screen shows which keys are active.

Select Boot Devices

```
System Management Services

Select one:

  1. Select Boot Devices
  2. Test the Computer
  3. Utilities
  4. Select Language

Enter   Esc=Quit  F1=Help  F3=Reboot  F9=Start OS
```


This selection enables you to view and change the sequence in which devices are read at startup time. You also can set or change a particular startup device, or specify the device the system is to start from.

```
Boot Sequence Selection


  1. Display Current Settings
  2. Restore Default Settings
  3. Configure 1st Boot Device
  4. Configure 2nd Boot Device
  5. Configure 3rd Boot Device
  6. Configure 4th Boot Device
  7. Boot Other Device

Enter   Esc=Quit  F1=Help  F3=Reboot  F9=Start OS
```

Test the Computer

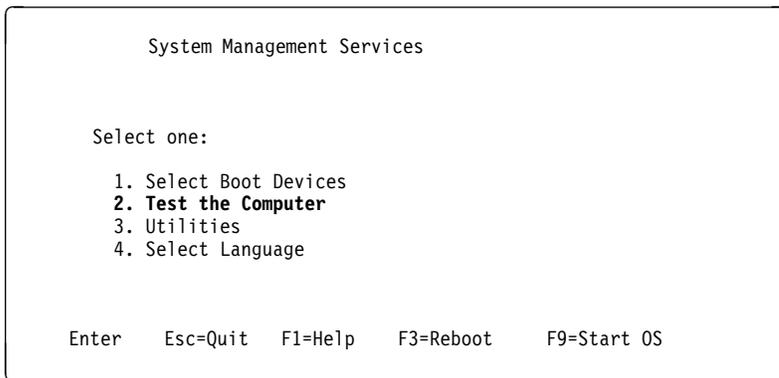


This selection enables you to test devices and functions of your system. The screen that displays, is similar to the screen that follows.

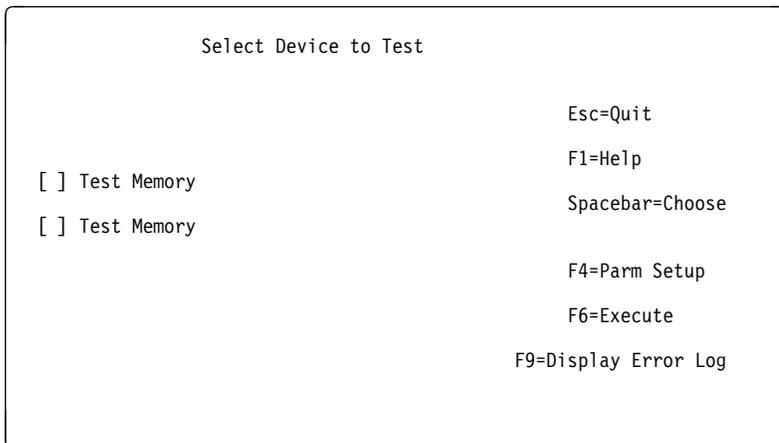


When you have selected the devices you want to test, press **F4** to set the test requirements, such as the number of times the tests are to be run, and whether testing should stop if an error occurs. After you set the requirements, press **Enter** to return to the Select the Device to Test screen; then press **F6** to start the tests.

To see if any errors were recorded in previous tests, press **F9** to display the error log.

Utilities

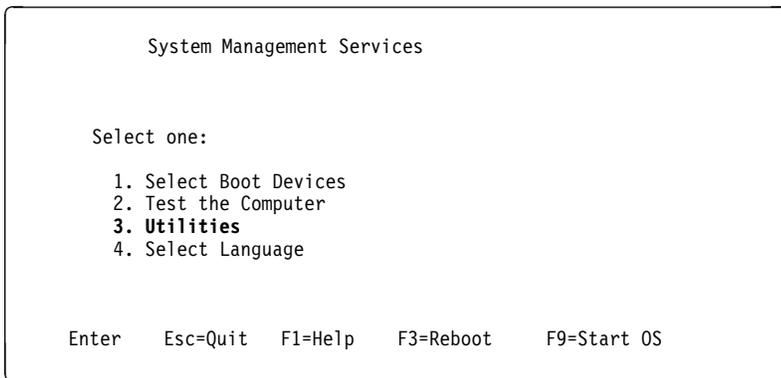

Selecting **Utilities** enables you to select from the System Management Utilities window. It has the following choices.

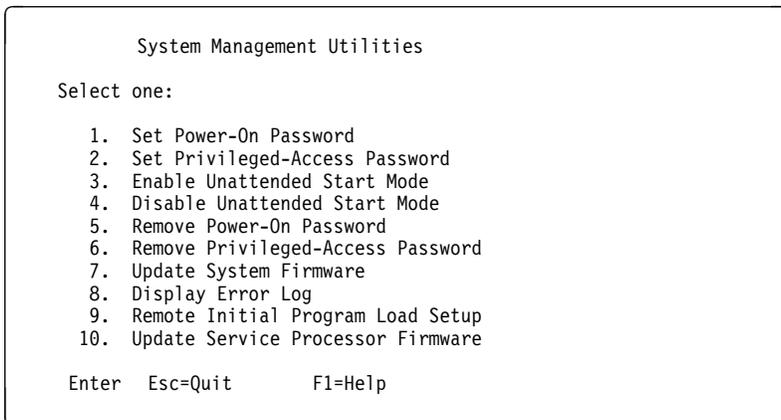

The **Power-On** and **Privileged-Access Password** are security features that help protect your system and stored information.

The **Unattended Start Mode**, when enabled, allows the system to start from the defined boot device.

Update System Firmware enables you to make these changes to the firmware of your system. To receive the latest updates, contact your authorized reseller or marketing representative. Firmware updates take several minutes, and you need a DOS formatted 1.44MB diskette. The procedure for updating the firmware is as follows.

Attention: Do not turn off power to your system during this procedure.

1. Select **Utilities**, and then **Update System Firmware**.
2. Make a backup copy of the system firmware using a DOS formatted 1.44MB diskette as prompted. This backup is a Firmware Recovery Diskette that may be used later to recover from system problems.
3. When the backup is complete, insert the *Firmware Update* diskette. The system firmware will be updated, and the system will automatically restart upon completion.

Display Error Log lets you see what problems have been recorded in previous tests.

Remote Initial Program Load Setup allows you to view parameters.

Update Service Processor Firmware enables you to make changes to the service processor firmware of your system. To receive the latest updates, contact your authorized reseller or marketing representative. Service processor updates take several minutes, and you need a DOS formatted 1.44MB diskette. The procedure for updating the firmware is as follows.

Attention: Do not turn off power to your system during this procedure.

1. Select **Utilities**, and then **Update Service Processor Firmware**.
2. Make a backup copy of the service processor firmware using a DOS formatted 1.44MB diskette as prompted. This backup is a Service Processor Firmware Recovery Diskette that may be used later to recover from system problems.
3. When the backup is complete, insert the *Service Processor Firmware Update* diskette. The service processor firmware will be updated, and the system will automatically restart upon completion.

ASCII Terminal System Management Services Programs

To start the programs:

1. Turn on or shutdown and restart the system.
2. As soon as the first screen appears, press the **1 or 4** key.

Note: You must press **1 or 4** key before the last indicator (boot) appears.

The System Management Services screen appears.

```
System Management Services

Select one:

1. Select Boot Devices
2. Test the Computer
3. Utilities
4. Select Language

Enter - q=Quit - h=Help - r=Reboot - s=Start OS - p=prev-item -
-----
n=next-item -
-----
Press enter to select item number 1.
```

Use the next (n) and previous (p) keys to make your selection; then press **Enter**.

You can get help information about any item on a menu by pressing the h key. The bottom of the screen shows which keys are active.

Select Boot Devices

```
System Management Services

Select one:

  1. Select Boot Devices
  2. Test the Computer
  3. Utilities
  4. Select Language

Enter - q=Quit - h=Help - r=Reboot - s=Start OS - p=prev-item -
-----
n=next-item -
-----
Press enter to select item number 1.
```

This selection enables you to view and change the sequence in which devices are read at startup time. You also can set or change a particular startup device, or specify the device the system is to start from.

```
Boot Sequence Selection

1. Display Current Settings      Enter -
2. Restore Default Settings    -----
3. Configure 1st Boot Device    q=Quit -
4. Configure 2nd Boot Device    -----
5. Configure 3rd Boot Device    h=Help -
6. Configure 4th Boot Device    -----
7. Boot Other Device           p=prev-item -
                                -----
                                n=next-item -
                                -----

Press enter to select item number 1.
```

Test the Computer

```
System Management Services

Select one:

1. Select Boot Devices
2. Test the Computer
3. Utilities
4. Select Language

Enter - q=Quit - h=Help - r=Reboot - s=Start OS - p=prev-item -
-----
n=next-item -
-----
Press enter to select item number 2.
```

This selection enables you to test devices and functions of your system. The screen that displays, is similar to the screen that follows.

```
Select Device to Test

[>] Test Memory

1. Test Memory

q=Quit -
-----
h=Help -
-----
Spacebar=Choose -
-----
p=Parm Setup -
-----
E=Execute -
-----
d=Display Error Log -
-----
```

When you have selected the devices you want to test, press **p** to set the test requirements, such as the number of times the tests are to be run, and whether testing should stop if an error occurs. After you set the requirements, press **Enter** to return to the Select the Device to Test screen; then press **E** to start the tests.

To see if any errors were recorded in previous tests, press **d** to display the error log.

Utilities

```
System Management Services

Select one:

  1. Select Boot Devices
  2. Test the Computer
  3. Utilities
  4. Select Language

Enter - q=Quit - h=Help - s=Start OS - p=prev-item - n=next-item -
-----
Press enter to select item number 3.
```

Selecting **Utilities** enables you to select from the System Management Utilities window. It has the following choices.

```
System Management Utilities

Select one:

  1. Set Power-On Password
  2. Set Privileged-Access Password
  3. Enable Unattended Start Mode
  4. Disable Unattended Start Mode
  5. Remove Power-On Password
  6. Remove Privileged-Access Password
  7. Update System Firmware
  8. Display Error Log
  9. Remote Initial Program Load Setup
 10. Update Service Processor Firmware

Enter - q=Quit - h=Help - r=Reboot - p=prev-item - n=next-item -
-----
Press enter to select item number 1.
```

The **Power-On** and **Privileged-Access Password** are security features that help protect your system and stored information.

The **Unattended Start Mode**, when enabled, allows the system to start from the defined boot device.

Update System Firmware enables you to make these changes to the firmware of your system. To receive the latest updates, contact your authorized reseller or marketing representative. Firmware updates take approximately 30 seconds, and you need a DOS formatted 1.44MB diskette. The procedure for updating the firmware is as follows.

Attention: Do not turn off power to your system during this procedure.

1. Select **Utilities**, and then **Update System Firmware**.
2. Make a backup copy of the system firmware using a DOS formatted 1.44MB diskette as prompted. This backup is a Firmware Recovery Diskette that may be used later to recover from system problems.
3. When the backup is complete, insert the *Firmware Update* diskette. The system firmware will be updated, and the system will automatically restart upon completion.

Display Error Log lets you see what problems have been recorded in previous tests.

Remote Initial Program Load Setup allows you to view parameters.

Update Service Processor Firmware enables you to make these changes to the system processor firmware of your system. To receive the latest updates, contact your authorized reseller or marketing representative. Service processor updates take several minutes, and you need a DOS formatted 1.44MB diskette. The procedure for updating the firmware is as follows.

Attention: Do not turn off power to your system during this procedure.

1. Select **Utilities**, and then **Update Service Processor Firmware**.
2. Make a backup copy of the service processor firmware using a DOS formatted 1.44MB diskette as prompted. This backup is a Service Processor Firmware Recovery Diskette that may be used later to recover from system problems.
3. When the backup is complete, insert the *Service Processor Firmware Update* diskette. The service processor firmware will be updated, and the system will automatically restart upon completion.

Chapter 4. Firmware

Firmware Beeps

The firmware uses the speaker as a means to communicate the result of certain tests. The following list describes the type of beeps.

- **No Beeps:** This is a hardware failure not involving the firmware. "The speaker may be bad or disconnected, or the system board may be bad."
- **One Beep:** Has been redefined as:
 - **One Short Beep(9/32 sec.):** Is used at Power-On when the hardware passes control to the firmware.
 - **One Long Beep(1 3/4 sec.):** It means initialization completed and no fatal errors occurred, so continue the boot process.
- **Continuous Beep:** This is a hardware failure not involving the firmware. "The system board has a failing component or a failure related to the speaker subsystem has occurred."
- **One Long and One Short Beep:** Firmware "... has detected an error on the video adapter card. ..."

Console Strategy

If the graphics adapter is present, the user interface is a Graphical User Interface (GUI). If the graphics adapter is not present and there is an active device in Serial Port 1, the active device is assumed to be an ASCII terminal, and the user interface is text. The user interface is either the graphics system or the ASCII terminal, but not both. Graphics interface default to GUI with the option to switch to text. ASCII terminal interface are always text. The PF keys are not used to initiate Maintenance Mode on ASCII terminal consoles, numeric keys are used instead (see key equivalent in each PF key definition below).

Normal Mode Boot Responses

The following assumes successful entry of the Power On Password (POP) if set. This applies to both normal and service modes.

In case no boot device is found during a normal boot attempt, the firmware requests the Privileged Access Password (PAP) if set, then it initiates the System Maintenance Services (SMS).

If the custom bootlist is discovered to be corrupted, Firmware rebuilds the custom bootlist according to the default sequence. The custom bootlist is four deep, and for

each matching device type found to be present in the system, firmware makes an entry in the custom bootlist. If a default boot list device is missing from the system, firmware enters 'none' in the corresponding location of custom bootlist.

Function Keys

PF1 Key

- PF1, when operated from a directly attached keyboard, invokes the System Management Services (SMS) GUI interface.
- The "key-switch" is set to **Normal mode**.
- Numerical **1 key** is the equivalent key on an ASCII terminal. The result, however, will be the same as the function of PF4, as described below.

PF4 Key

- PF4, when operated from a graphics console, invokes the SMS program and present the text interface.
- The "key-switch" is set to **Normal mode**.
- Numerical **4 key** is the equivalent key on an ASCII terminal.

PF5 Key

- The default boot list, located in firmware, is used.
- The "key-switch" is set to **Service mode**.
- Numerical **5 key** is the equivalent key on an ASCII terminal.

This mode attempts to boot from the first device of each type found in the list. It will not search for other bootable devices of that type if the first device is not bootable. It will, instead, continue to the next device type in the list. If after one pass through the boot list no boot record is found, Firmware invokes the SMS program. The firmware supports up to four entries in the boot list.

The default boot order is:

1. Diskette
2. CD ROM
3. Hard File
4. Network
 - a. Token Ring
 - b. Ethernet

PF6 key: PF6 works like PF5 with some exceptions

- Firmware looks for a boot record according to the custom bootlist that was setup by System Management Services.

- If after one pass through the custom bootlist no boot record is found, firmware invokes the SMS program.
- The "key-switch" is set to **Service mode**.
- Numerical **6 key** is the equivalent key on an ASCII terminal.

Password Design Description

Password Design Overview

The owner of the system has the option to limit access to the system. The system limits access by requiring the user to enter a password. There are three categories of restricted access.

The first category is power-on. If this category is enabled, the system prompts the user to enter the Power-On password (POP) when the system is powered on. The user must supply the Power-On password.

The second category is privileged access. Privileged access is needed to perform functions on the SMS, or boot from a device that isn't in the boot path. When the user attempts to do one of these things, the system prompts for the Privileged Access Password (PAP). The user must supply the PAP.

The third category is unattended start mode. In unattended start mode, the system boots from a defined boot device, but the keyboard is locked until the user enters the Power-On password.

Enabling Security

Utilities are provided to allow the system owner to enable any of the above security modes and to enter or change the Power-On or Privileged-Access passwords. The passwords can be up to 8 characters long. After entering a password, the user is prompted to verify it by entering it a second time. After the password has been entered two consecutive times, it is saved in non-volatile battery powered CMOS.

Storing of Password

The POP and PAP are stored in CMOS. The time that each password was saved, and the time that each password is read is also stored. If for any reason, the contents of CMOS are suspect (bad battery or CRC), the passwords are considered valid, but unusable. The areas in CMOS that contain the password are locked before the operating system is booted. After the passwords have been locked, the user must power off the system before the passwords can be accessed again.

Power On Password

When the system is powered on, it checks whether a Power-On password is present. If there is one present, and unattended start mode (see "Unattended Start Mode") is not set, the owner has specified that the system cannot be used unless the Power-On password is supplied. The system prompts for the Power-On password. The user is given three attempts to enter the password. If the user fails to supply the password, the system goes to a hang state and must be powered off before continuing.

Privileged Utilities Password

If a user wants to boot, change or remove the Privileged-Access password, or use any of the other "Privileged" utilities, the system checks whether a Privileged Access password exists. If it does, the user is prompted to either enter the Privileged Access password. The user is given three tries to supply the correct password. If the user fails to do so, the system goes to a hang state and must be powered off before continuing.

Unattended Start Mode

If Unattended Start Mode is enabled, the system boots from the defined boot device without requiring any input from the user. The keyboard controller is programmed to lock up until the Power-On password is entered.

Firmware Flash Update Design

The firmware flash update can be performed in normal mode and recovery mode. The type of update mode determines what portions of the flash code is updated, whether the update is done "quietly" (no messages), and whether the original VPD information is merged into the new image before updating.

The default is a "normal" update, where the firmware flash update is performed from the System Management Services Menu. Messages and errors are communicated through the menu pop-up interface. The system user selects the Update Firmware option, and the composite image is loaded using the default file name and default media. The original system VPD information is merged in before the image is programmed. Only the sectors containing the composite image are programmed; those containing the recovery block are considered "read-only".

A "recovery" update, is executed automatically when a bad composite image is detected during early system initialization. Most messages and errors are suppressed; fatal errors are displayed in a serial interface compatible format. The default file name and default flash update media is assumed. The selected media drive (diskette drive) is continuously polled until a valid firmware image can be found and loaded. The original system VPD information is merged in before the composite image is programmed. The recovery block flash sectors are not modified during a recovery update.

For any update, the firmware flash update routine checks if the system flash part can be updated. The flash ID and sector protection bits are retrieved from the part. If the flash ID could not be read or the flash ID indicates an unsupported part, then the update routine is terminated. If the ID indicates a supported part, then the sector programming data structures are initialized. The sector protection bits are examined, to ensure that the sectors to be updated are not write-protected. If a sector to be updated is write-protected, then the update routine is terminated. If the flash part passes all of these validity tests, then the routine moves onto file operations.

The firmware flash update routine checks the selected flash media for the flash file. If the file is located and loaded successfully from the media, it is then examined to ensure it is a valid firmware image. A firmware image is verified by checking if it has a valid CRC, valid file length, valid flash table/system ID structure. If the firmware image could not be loaded or is invalid, then the update routine is terminated.

For normal or recovery mode, once a valid firmware image is loaded successfully, the VPD information is merged from the flash ROM to the image. The VPD information is duplicated in the recovery block and composite image, which ensures that there is a protected copy of the VPD in case the composite image is corrupted.

Now that the firmware image is ready for programming, the firmware flash update routine begins the section of code that erases and programs the flash part. During this section of code, a system power-down results in a corrupted flash ROM. Notice that for normal and recovery mode, only the composite image sectors are erased and reprogrammed, so those sectors would be the only ones that could be corrupted. Since the recovery block is protected in these modes, the system can still be restored through a recovery flash update. To minimize the risk while updating the flash, the routine displays a message warning the user `Flash update in progress. Do not power down the system...`

Before the flash part can be programmed with the new image, the firmware flash update routine must erase the appropriate sectors. For all modes, the composite image sectors are erased and reprogrammed first. If an erase operation fails, it is retried according to the flash part spec. If the flash part won't erase even after retries, the update routine is terminated. If the erase operation was successful, the firmware flash update routine programs the composite image into the corresponding flash sectors. If a byte in the flash part cannot be programmed with a new value, even after the specified retries, the update routine is terminated. If the composite image was programmed successfully, the routine checks if it still needs to update the recovery block portion.

The firmware has now been successfully updated. The firmware flash update routine will remove any "in process" messages, perform some general clean-up and then reboot the system. Once the system is re-booted, the new flash image is active and executed.

Power On Self Test (POST)

Processor POST

The firmware tests the processor. If there is a failure, the system will Check-Stop (stop) and the initial beep of the speaker is not heard.

Memory Module and L2 cache POST

The firmware RAM POST tests all of memory; it is done in segments. After the initial short beep, if the system stops with the hard file indicator on solid, then this is the indication that no memory was found.

If any memory is found then a small segment is used. If the segment cannot be found then the system stops with the hard file indicator on solid.

A larger amount of memory is tested for stuck or coupled bits. The L2 cache is tested, if it fails there is a momentary indication when the display becomes available, the error is also put in the SMS error log.

During system initialization when icons are being displayed for the various components of the system, one of the icons is the memory module icon. During display of this icon an L2 cache, 8 digit error code would be displayed if L2 is not fully functional; also the remainder of memory is tested and if a failure is detected, an 8 digit error code is posted. This error indicates which memory module slot is at fault.

A separate memory test is provided in the System Management Services (SMS). This test can be made to loop. It tests memory similar to the POST and also gives an 8 digit error indications for the memory module slot. The L2 cache is not retested in the SMS memory test.

Update Flash CRC

The firmware performs a Cyclic Redundancy Check (CRC) on the update portion of the flash module. If the check is not good then the firmware goes into recovery mode. This mode is recognized by the hard file indicator being on continuously (or blinking), and the diskette drive indicator blinking periodically.

Video/Graphics Adapter POST

The firmware does test the VGA adapter but not the display. The system gives a speaker beep sequence when the VGA adapter is found to be non-functional. The beep sequence is a one long beep followed by one short beep; the error is logged and the system continues.

SCSI subsystem POST

The SCSI POST opens the adapter and runs several test scripts which check and exercise the various functions related to the chips on the SCSI adapter, such as DMA, and simulate mailbox commands. If an error is detected then an 8 digit error code is displayed, and the error is entered in the SMS error log and the system continues.

Keyboard/Mouse Adapter

The keyboard/mouse adapter has a built in power on test, and the firmware checks the results. If an error is detected then an 8 digit error code is displayed, and the error is entered in the SMS error log and the system continues.

Post Indicators

When the POST is finished, the following screen displays.



The POST screen displays the following objects.



Keyboard: Initialize the keyboard and mouse. The window for pressing the F1 (GUI) and F4 (English) keys is now open.



Diskette: Initialize the adapter.



Memory Module: Test all memory greater than 3 Meg.



SCSI: Adapters are being initialized. Network is also initialized if present.



Boot Disk: System is attempting to boot from the boot list.

If using an ASCII terminal, the following text is displayed.

- dsktOK
- memOK
- scsiOK
- bootOK

If the POST does not complete successfully, you will not get an "OK" and an error code will be displayed.

Chapter 5. Installing Options

This chapter provides instructions to help you add options to your server. Some option-removal instructions are provided, in case you need to remove one option to install another. If you have several internal options to install, these instructions enable you to add them all at one time.

Safety Considerations

Observe the following safety precautions any time you work with this system unit.

DANGER

An electrical outlet that is not correctly wired could place hazardous voltage on metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent and electrical shock.

Before installing or removing signal cables, ensure that the power cables for the system unit and all attached devices are unplugged.

When adding or removing any additional devices to or from the system, ensure that the power cables for those devices are unplugged before the signal cables are connected. If possible, disconnect all power cables from the existing system before you add a device.

Use one hand, when possible, to connect or disconnect signal cables to prevent a possible shock from touching two surfaces with different electrical potentials.

During an electrical storm, do not connect cables for display stations , printers, telephones, or station protectors for communication lines.

CAUTION:

This product is equipped with a three-wire power cable and plug for the user's safety. Use this power cable with a properly grounded electrical outlet to avoid electrical shock.

DANGER


To prevent electrical shock hazard, disconnect the power cable from the electrical outlet before relocating the system.

Handling Static-Sensitive Devices

Attention: Adapters, planars, diskette drives, and disk drives are sensitive to static electricity discharge. These devices are wrapped in antistatic bags, as shown in this illustration, to prevent this damage.


Take the following precautions:

- If you have an antistatic wrist strap available, use it while handling the device.
- Do not remove the device from the antistatic bag until you are ready to install the device in the system unit.
- With the device still in its antistatic bag, touch it to a metal frame of the system.
- Grasp cards and boards by the edges. Hold drives by the frame. Avoid touching the solder joints or pins.
- If you need to lay the device down while it is out of the antistatic bag, lay it on the antistatic bag. Before picking it up again, touch the antistatic bag and the metal frame of the system unit at the same time.
- Handle the devices carefully in order to prevent permanent damage.

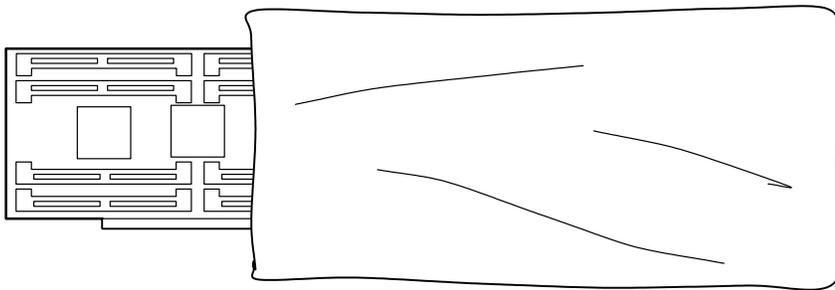

Expansion Bays

Your server comes with one 3.5-inch, 1.44MB diskette drive and a SCSI CD-ROM drive. The number of preinstalled disk drives in your server varies according to the model you ordered.


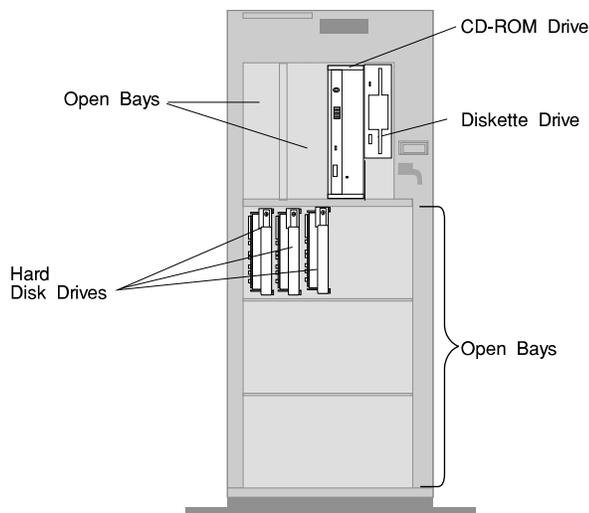


Diskette Drive: The 3.5-inch, 1.44MB diskette drive uses 1MB, and 2MB diskettes.

Open Bays: Your server's special design gives you the flexibility to use up to 18 hot-swappable 3.5-inch disk drives. There are two additional open spaces in the top left bay for additional media devices. For installation instructions and information on the types of drives that you can install in each bay, see "Installing Internal Drives" on page 5-37.

Disk Drive: All models come with one or more integrated SCSI-2 disk drives. The capacity of the disk drives varies, depending on your model.

Input/Output Connectors

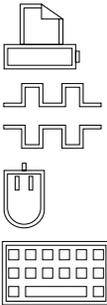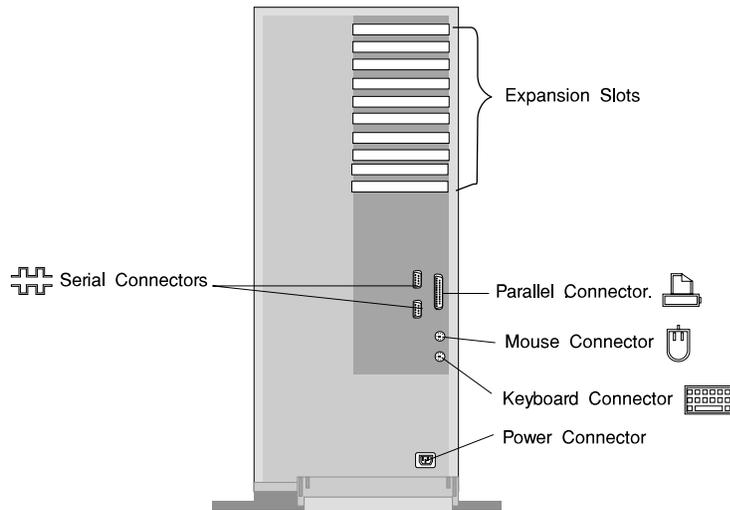

Parallel Connector: One 25-pin parallel port is provided.

Serial Connectors: Two 9-pin serial connectors (1 and 2) are provided. If you are using a 25-pin signal cable, you need a 9-pin-to-25-pin adapter cable.


Mouse Connector: This is where the mouse cable connects to the server. This connector sometimes is called an auxiliary-device or pointing-device port.

Keyboard Connector: The cable from your keyboard connects here.


Removing the Front Covers Only

Note: If you are removing or installing hot-swap drives, only the front covers need to be removed. Other options may require removal of both the front and side covers as described in “Removing Both the Front and Side Covers” on page 5-10.

1. Open the door.

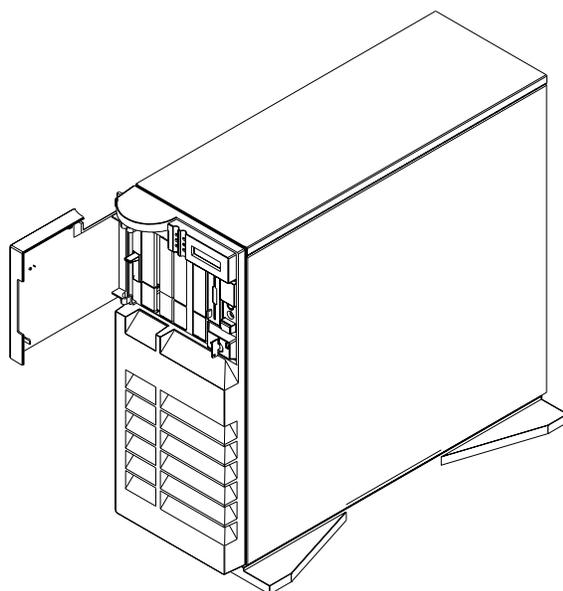


2. Remove the door by carefully lifting it up and off the hinges. Store it in a safe place.

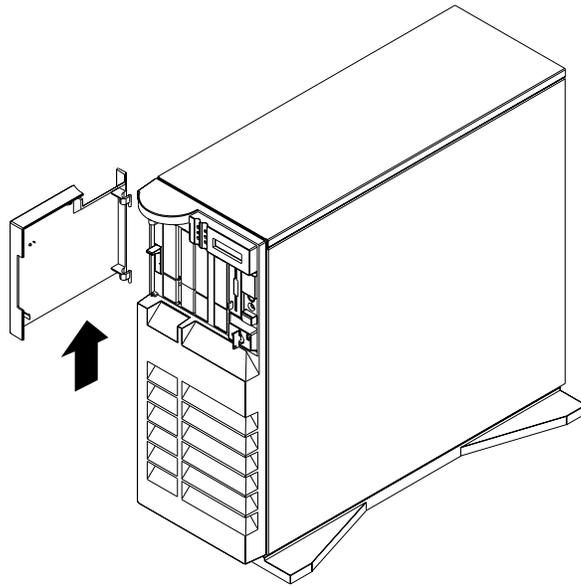


3. Remove the front cover:

- a. Unlock the keylock on the front cover.
- b. Lift up on the latch on the left side of the front cover.

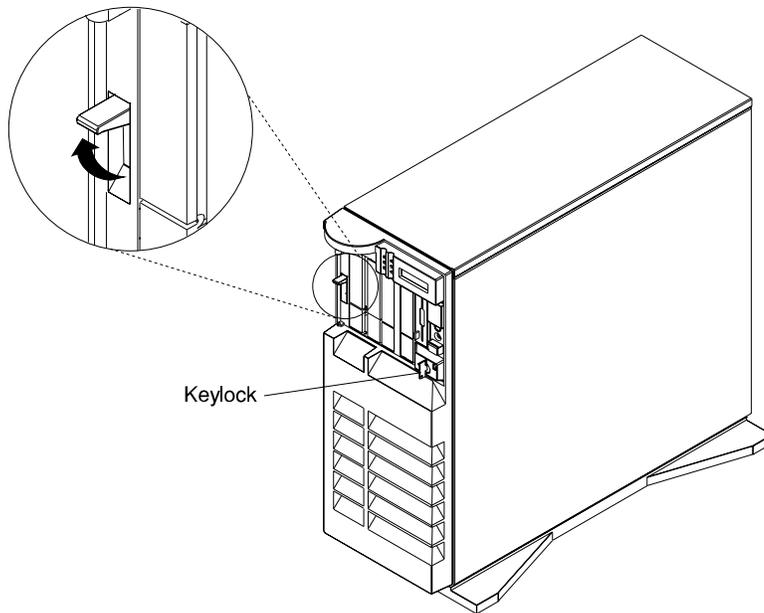


- c. Grasp the sides of the front cover at the top of the server and pull it forward.
(The front cover is held in place by two spring detented ball studs.)
- d. Detach the front cover's bottom hooks from the grooves located on the bottom of the server, and lift the front cover off the bottom of the server.

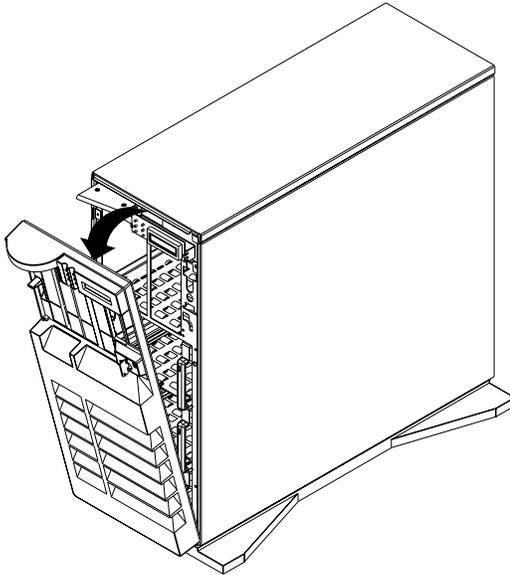


Removing Both the Front and Side Covers

Note: If you previously removed the front covers, go to Step 3.

1. Open the door.

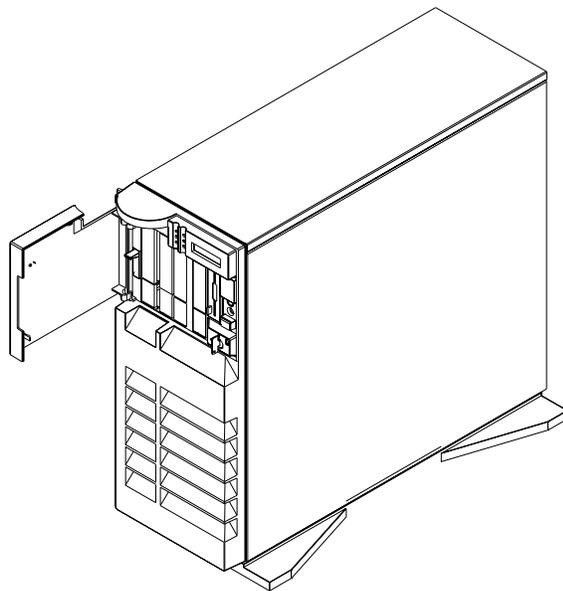


2. Remove the door by carefully lifting it up and off the hinges. Store it in a safe place.

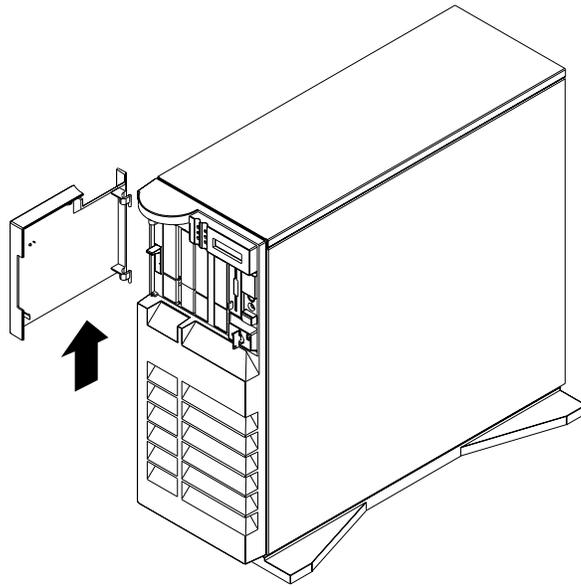

3. Remove all media (diskettes, CDs, tapes) from the drives.
4. Shutdown the operating system.
5. Turn off power to the server and all attached options.

6. If you have a modem or fax machine attached to the server, disconnect the telephone line.

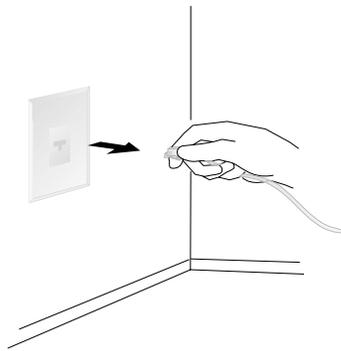


7. Unplug all power cords (cables) from electrical outlets.

Note the location of the following; then disconnect them from the back of the server:


- Power cord
- Display cable
- Keyboard cable
- Any other cables and cords



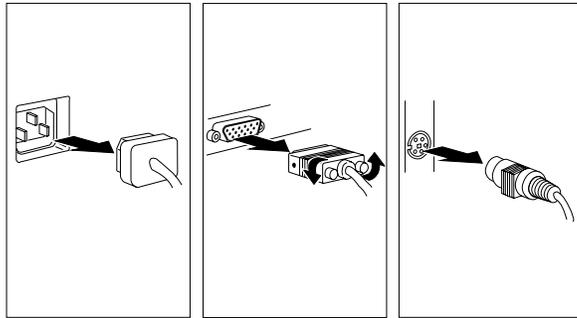


8. Remove the front cover:

- a. Unlock the keylock on the front cover.
- b. Lift up on the latch on the left side of the front cover.


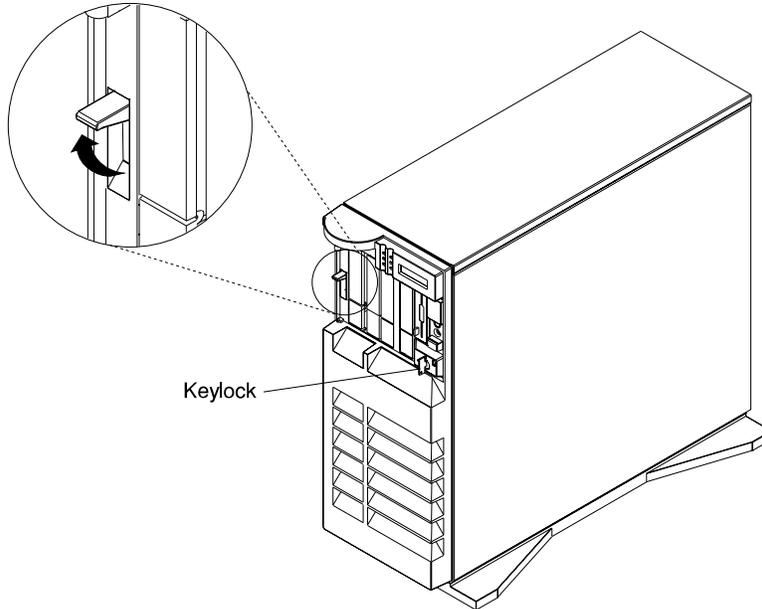


- c. Grasp the sides of the front cover near the top of the server and pull it forward. (The front cover is held in place by two spring detented ball studs.)
- d. Detach the front cover's bottom hooks from the grooves located on the bottom of the server, and lift the front cover off the bottom of the server.

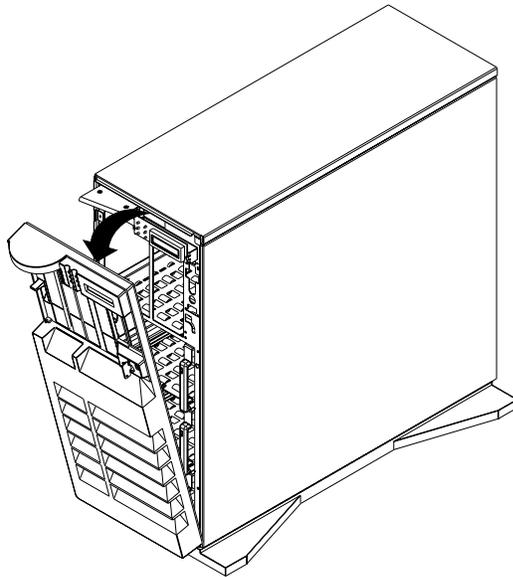

9. Remove the side cover:

- a. Pivot the side cover away from the front of the server.
- b. Remove the cover by carefully lifting it up and off the hinges. Store it in a safe place.

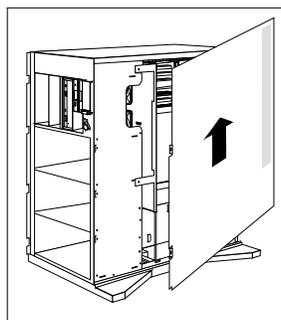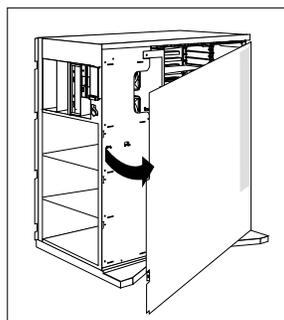

Option List

- Installing Memory–Module Kits — Go to page 5-17.
- Removing Memory–Module Kits — Go to page 5-22.
- Upgrading the CPU card — Go to page 5-25.
- Installing Adapters — Go to page 5-29.
- Removing Adapters — Go to page 5-34.
- Installing Internal Drives — Go to page 5-37.
- Installing a Disk Drive, Tape Drive or CD-ROM in Bay A or Bay B — Go to page 5-41.
- Installing a SCSI Disk Drive in Bank C, D, or E — Go to page 5-52.
- Installing an SSA Disk Drive in Bank C, D, or E — Go to page 5-56.
- Installing a SCSI Backplane in Bank D or E — Go to page 5-60.
- Installing an SSA Backplane in Bank D or E — Go to page 5-76.
- Removing an Internal Drive — Go to page 5-90.
- Removing a Disk Drive, Tape Drive or CD-ROM from Bay A or Bay B — Go to page 5-91.
- Removing a SCSI Disk Drive from Bank C, D, or E — Go to page 5-92.
- Removing an SSA Disk Drive from Bank C, D, or E — Go to page 5-96.
- Installing a Service Processor. Go to page 5-100
- Installing a U-Bolt — Go to page 5-104.


Installing Memory-Module Kits

You can increase the amount of memory in your server by installing *memory-module kits*. Your server uses 168-pin, dual inline Error Correcting Code (ECC) memory modules (DIMMs) to increase system memory.

You install memory-module kits into connectors inside the server. You can install up to 960MB of ECC memory. The memory-module kit sizes available for your server are 16MB, 32MB, 64MB, and 128MB. The available speed for these kits is 70 ns.


Attention: This system does not support channel memory, such as memory expansion adapters.

1. If you have not already done so, remove the covers as described in “Removing Both the Front and Side Covers” on page 5-10.
2. You may wish to remove the CPU bracket if you need more access. Loosen three screws (do not remove) to remove CPU bracket.

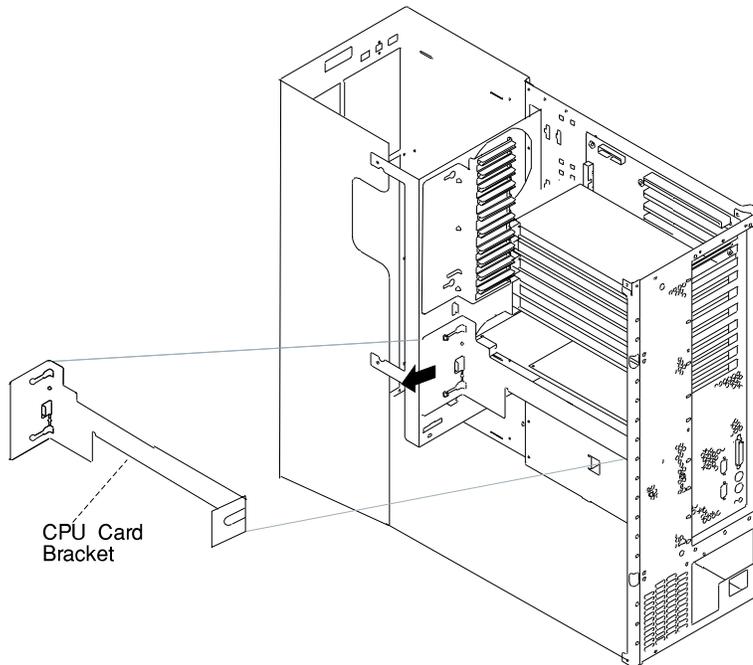

3. With one hand, touch any metal surface of the chassis to minimize static electrical charges, and then pick up a memory-module kit.


4. Locate the memory module connectors on the system board. Some memory modules are already installed in your server.

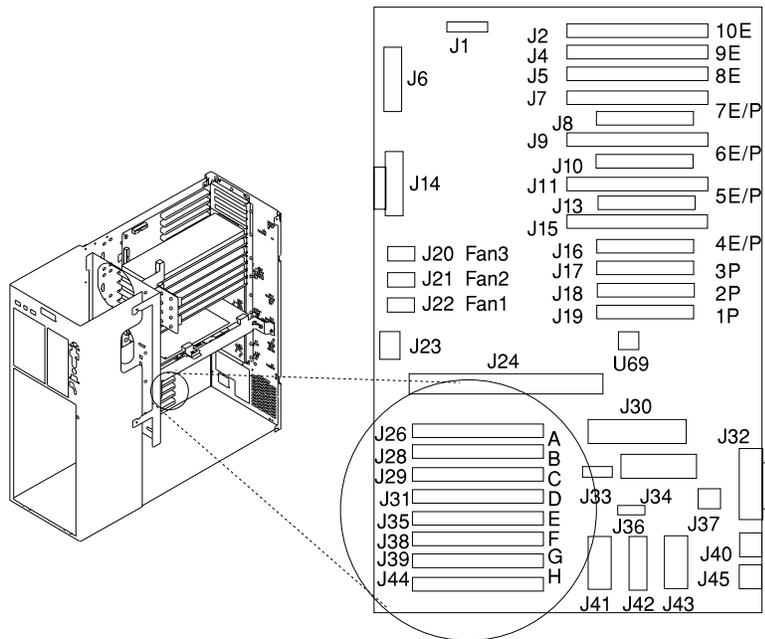


5. Install the memory module.

Note: On a system with the 133MHz CPU card installed, a 128MB memory module cannot be installed in slot A (J26) due to mechanical interference.

- a. The memory modules are keyed so that they can only be inserted one way. Align the memory module notches with the keys in the memory-module kit connectors.

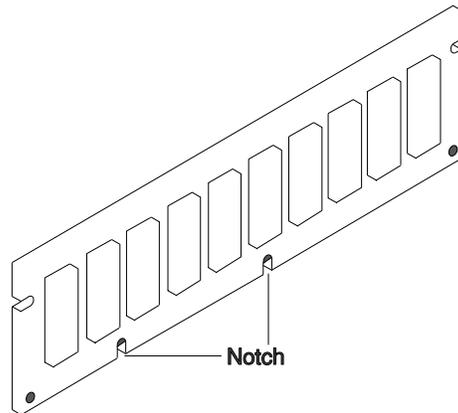

- b. Insert the memory module into the next unused memory module connector. Ensure that the tabs are in the unlocked position as shown prior to memory module insertion. After insertion, the tabs should be in the locked position (up).

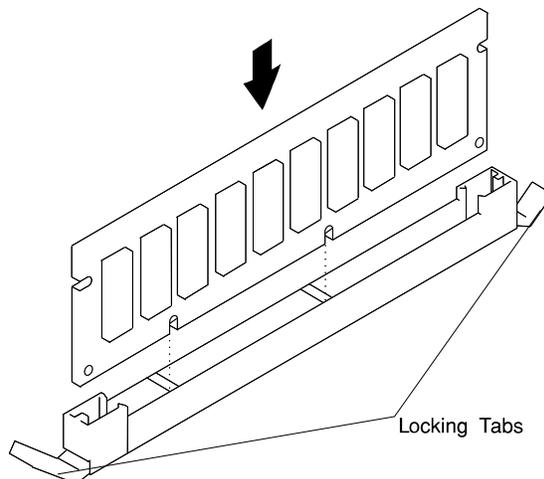


Attention: Inserting the memory-module kit diagonally may damage the memory-module kit.


6. Go to “Device Records” on page A-2 to record the size of the memory-module kit and the connector into which it is installed; then return here to determine your next step.
7. Install the CPU bracket if removed previously.
8. If you have other procedures to perform, refer to “Option List” on page 5-16.
9. If you do not have any other procedures to perform, replace the covers as described in “Replacing Both the Front and Side Covers” on page 5-109.

Removing Memory-Module Kits


1. If you have not already done so, remove the covers as described in “Removing Both the Front and Side Covers” on page 5-10.
2. You may wish to remove the CPU bracket if you need more access. Loosen three screws (do not remove) to remove CPU bracket.

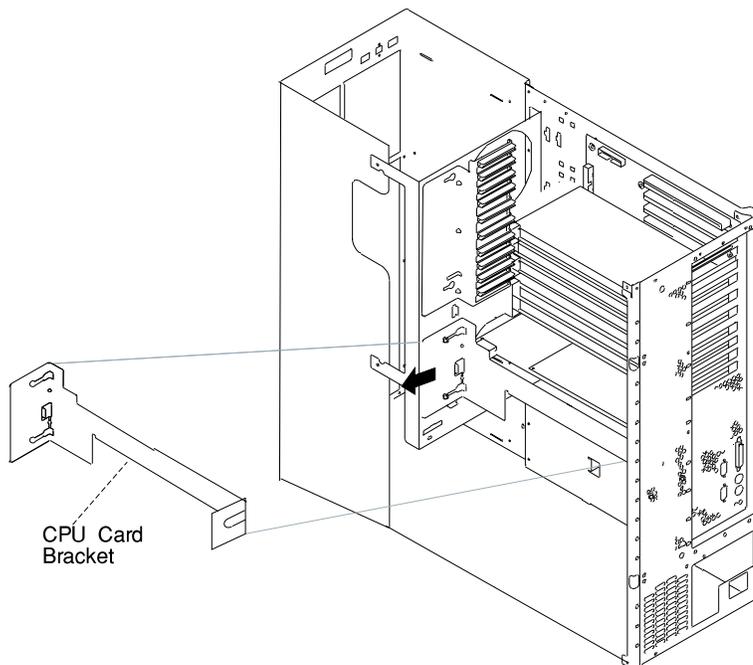

3. Locate the memory module connectors and determine which memory modules you want to remove.

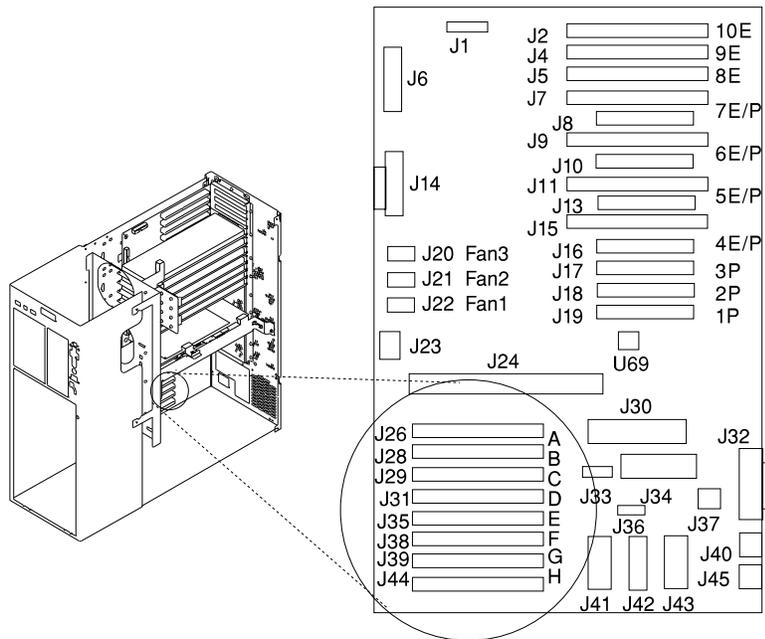

4. Remove the memory modules by pushing the tabs out on the memory connectors as shown.

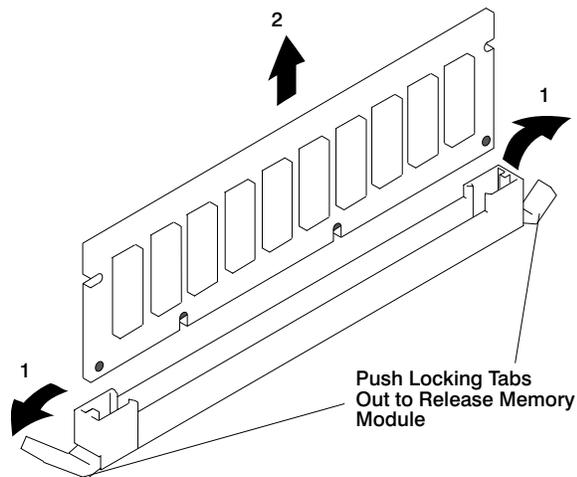

5. Store any memory modules you are no longer using in a static-protective package. Make a note of the kit size and speed for future reference.




6. Install the CPU bracket if removed previously.
7. If you are not installing memory modules in the empty connectors, go to "Device Records" on page A-2 to update the memory information; then return here to determine your next step.
8. If you have other procedures to perform, refer to "Option List" on page 5-16.
9. If you do not have any other procedures to perform, replace the covers as described in "Replacing Both the Front and Side Covers" on page 5-109.

Upgrading the CPU Card


1. If you have not already done so, remove the covers as described in “Removing Both the Front and Side Covers” on page 5-10.

Attention: Make sure you have unplugged the power cord and the standby power (Power Enabled LED) is Off before installing the service processor.

2. Loosen the three screws (do not remove) and remove the CPU card bracket.

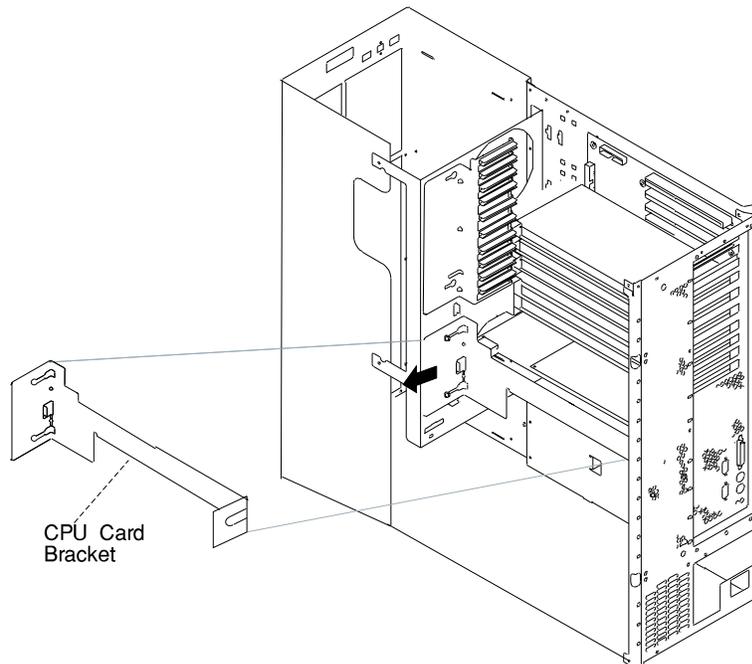


3. Locate the CPU card connector.

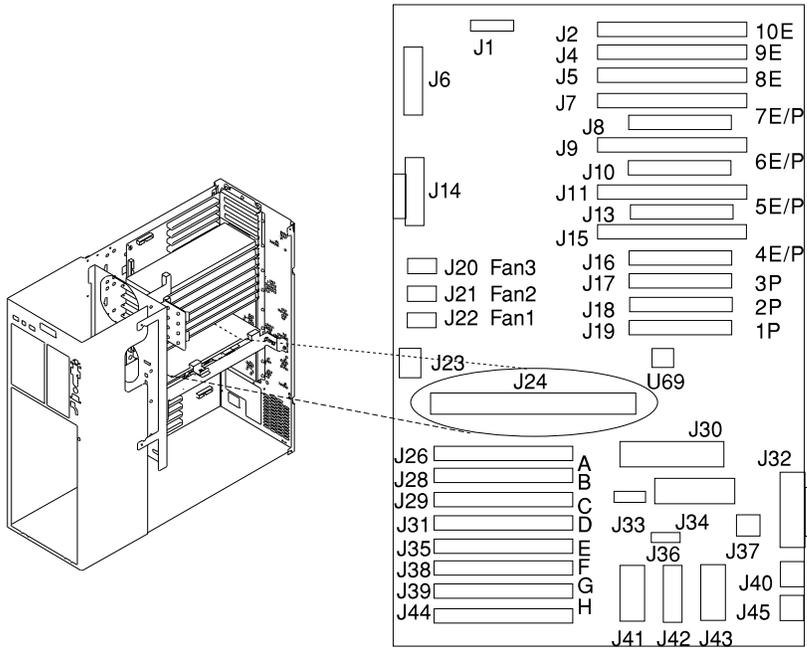

4. Remove the CPU card.

5. Install the new CPU card.

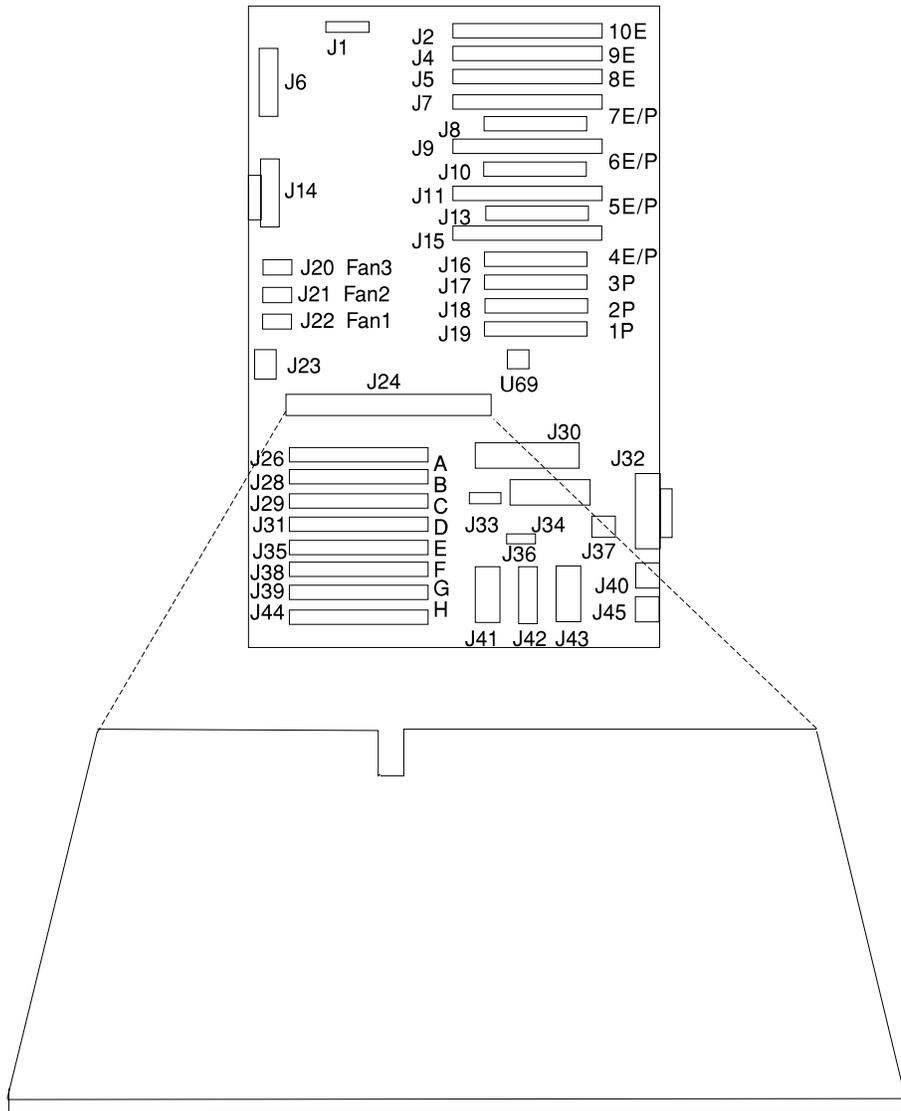


6. Install the CPU card bracket making sure that the CPU card is held in place by the CPU card bracket.
7. Tighten the three screws that secure the CPU bracket to the system chassis.
8. If you have other procedures to perform, refer to "Option List" on page 5-16.
9. If you do not have any other procedures to perform, replace the covers as described in "Replacing Both the Front and Side Covers" on page 5-109.


Installing Adapters

Adding an adapter, such as audio, communication, or specialized graphics, extends the capabilities and power of your server. Your server has ten *expansion slots* for connecting adapters. The expansion slots are numbered on the back of the server as shown below. You can install ISA and PCI adapters.


Memory adapters cannot be installed in your server, because it does not support channel memory.

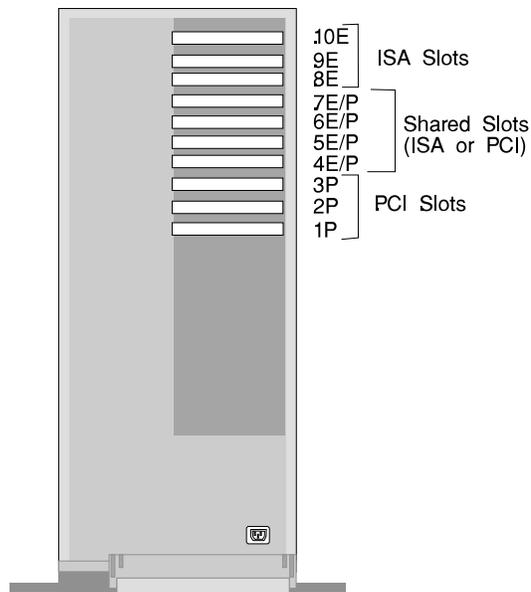

1. If you have not already done so, remove the covers as described in "Removing Both the Front and Side Covers" on page 5-10.
2. Determine which expansion slot you will use for the adapter. Check the instructions that came with the adapter for any requirements or restrictions. If there are no restrictions, you can use any empty slot that matches your adapter type (PCI, or ISA).

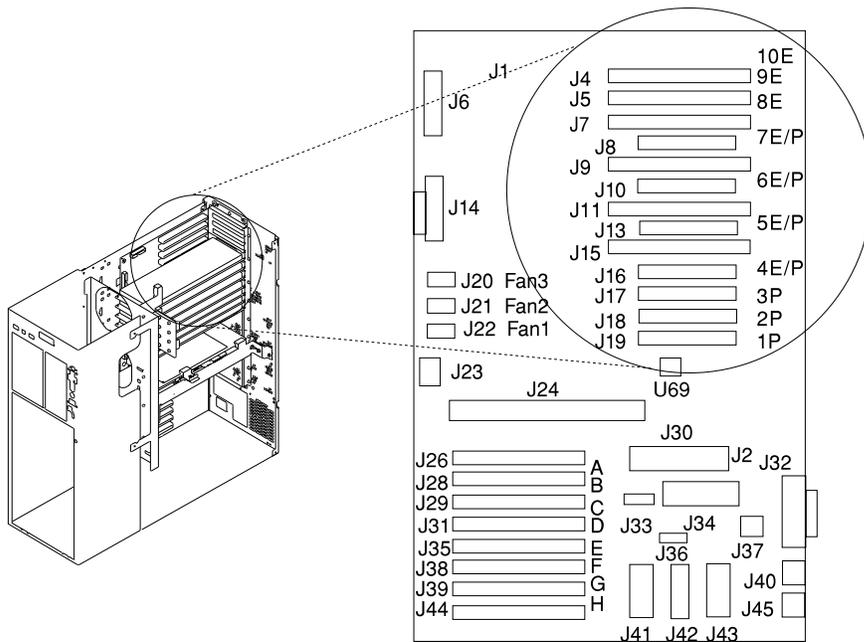


3. Remove the expansion-slot cover:
 - a. Loosen and remove the screw with a screwdriver.
 - b. Slide the expansion-slot cover out of the server.
 - c. Store the expansion-slot cover in a safe place for future use.
 - d. Save the screw for use in securing the adapter.

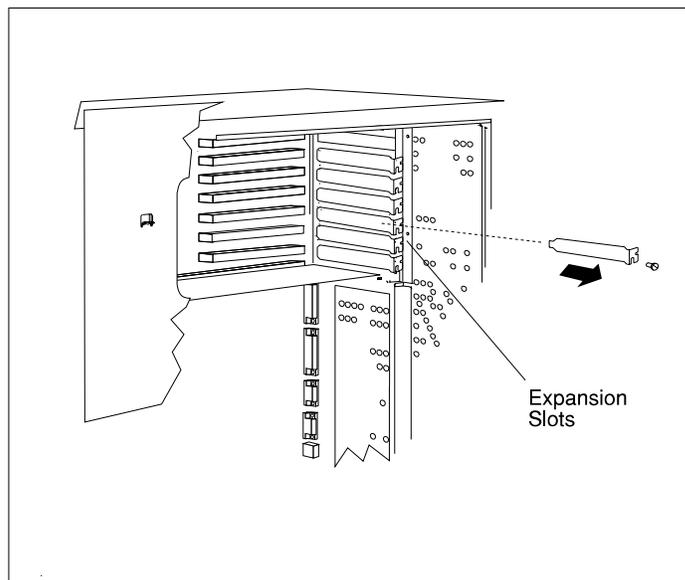


4. Install the adapter:

- a. If you are installing a long adapter, align and insert the rear of the adapter into the adapter retaining guide while installing the adapter card.

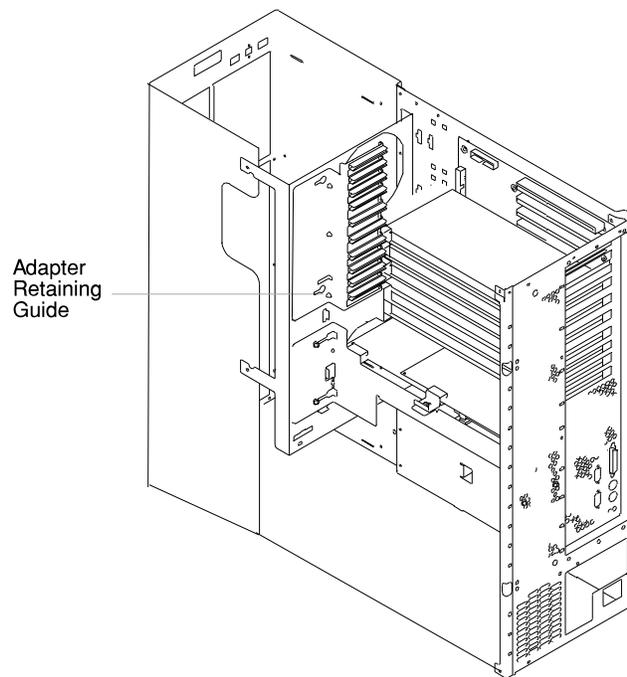


- b. Carefully grasp the adapter and align the adapter with the expansion slot connector.
- c. Press the adapter *firmly* into the expansion slot.

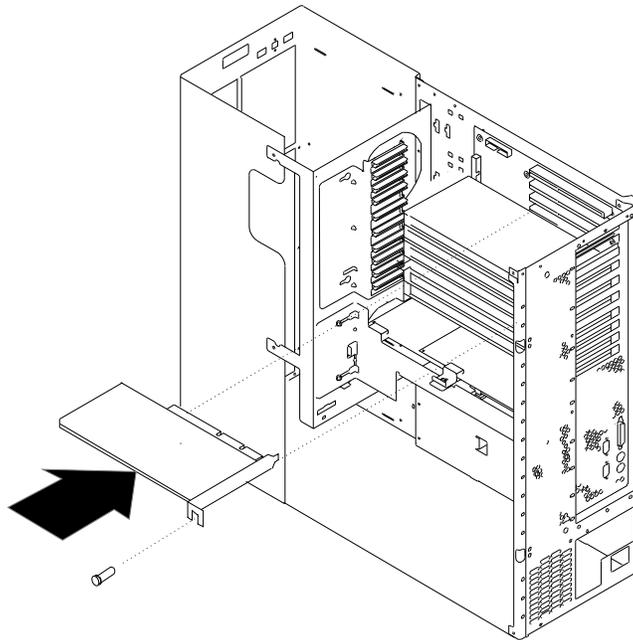


- d. Install and tighten the expansion-slot screw you removed earlier.
5. Go to “Device Records” on page A-2 and write the adapter name next to the slot into which it is installed; then return here to determine your next step.
6. If you have other procedures to perform, refer to “Option List” on page 5-16.
7. If you do not have any other procedures to perform, replace the covers as described in “Replacing Both the Front and Side Covers” on page 5-109.

Removing Adapters


1. If you have not already done so, remove the covers as described in “Removing Both the Front and Side Covers” on page 5-10
2. Remove the adapter:
 - a. Note the slot number of the adapter you are removing.
 - b. If there are any cables attached to the adapter, disconnect them.
 - c. Remove the screw for the adapter.

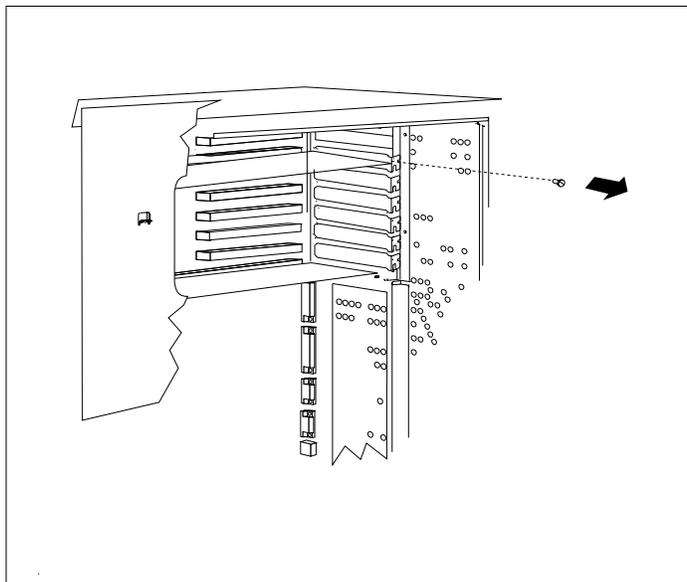

d. Carefully pull the adapter out of the server.

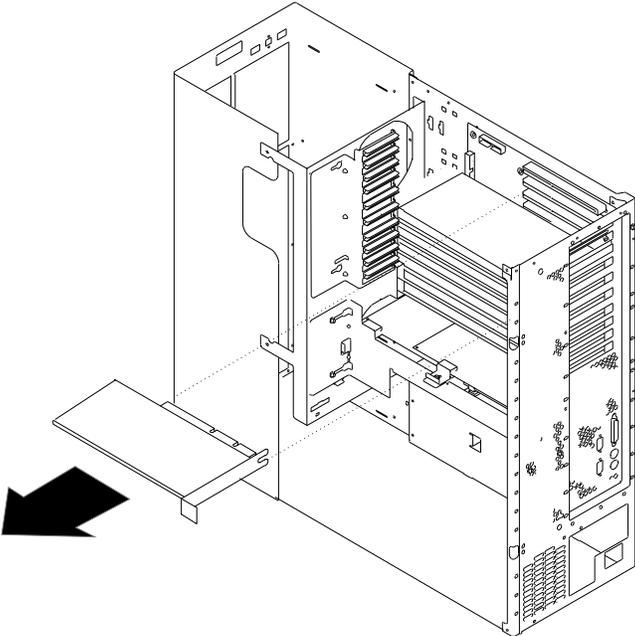

3. If you are not installing another adapter in this expansion slot, reinstall the expansion-slot cover:
 - a. Slide the cover over the open expansion slot.
 - b. Install the screw and tighten with a screwdriver.
 - c. If the adapter removed had cables that are no longer required, you may want to remove them.

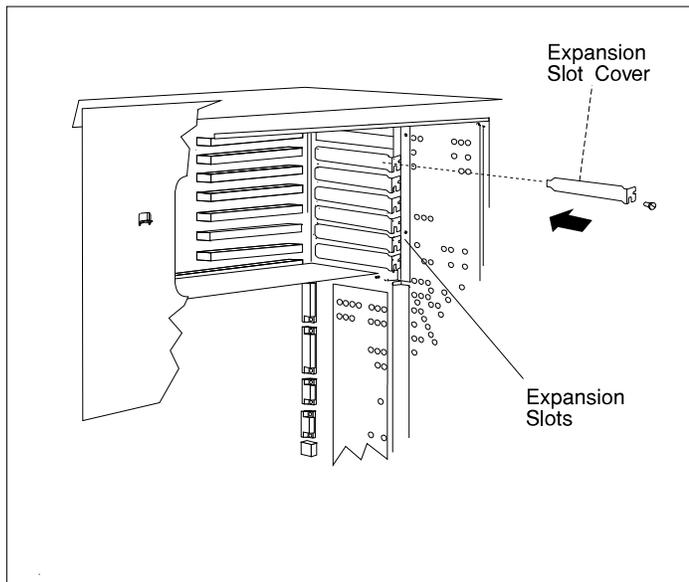

4. Go to "Device Records" on page A-2 and delete the name of the adapter you removed; then return here to determine your next step.
5. If you have other procedures to perform, refer to "Option List" on page 5-16.
6. If you do not have any other procedures to perform, replace the covers as described in "Replacing Both the Front and Side Covers" on page 5-109.

Installing Internal Drives

If you add different types of drives, your system can read multiple types of media and store more data. Several types of drives are available, such as:

- Diskette
- Disk drive
- CD-ROM
- Tape


Note: If you are installing a CD-ROM drive, refer to “Laser Safety Information” on page xxi before installing the drive.

Your server has hardware that lets you add, remove, or replace a disk drive without turning off the server. Therefore, you have the advantage of continuing to operate your system while a disk drive is removed or installed. These drives are also known as *hot-swappable* drives.

Caution should be used when handling all hard drives. Drives are more likely to be damaged during installation and service. Bumping or handling drives roughly causes latent failures. Don't stack drives and always use appropriate ESD practices. A drop of as little as a 1/4 inch can cause latent failures. Media can take 30 seconds to spin down, so ensure at least a 30 second delay after switching off the hot-swappable drives for removal.

Internal drives are installed in *bays*. A diskette drive is preinstalled in bay A2 and a CD-ROM drive is preinstalled in bay A1 in all models. You can install a media drive in bay B1 or B2. You can install hot-swappable disk drives into the bays in banks C, D, and E only. Banks C, D, and E each contain six bays. You can install up to six disk drives in bank C, bank D, or bank E.

Note: The bank letter-designations are located on both vertical rails on the front of the server. The bay-slot numbers are located on the top of bank C and the bottom of bank E.

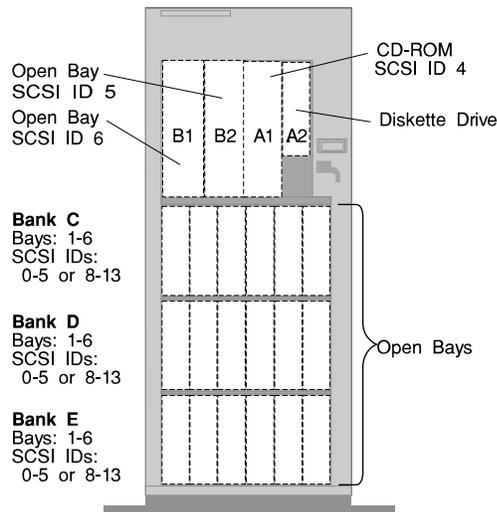

Considerations

Bay A comes with one 3.5-inch, 1.44MB diskette drive in A2 and a CD-ROM in A1.

Bay B supports two 5.25-inch, half-high, removable-media devices.

You cannot install hot-swappable drives in bays A or B.

Banks C, D, and E can accommodate six slim-high drives or three half-high drives, or a combination of both drive sizes. If you use a combination, remember that one half-high drive uses the equivalent space of two slim-high drives.

Your server supports eighteen 3.5-inch, slim-high, hot-swappable disk drives or nine 3.5-inch, half-high disk drives in the bottom three banks (C, D, and E) or a combination of slim and half-high drives.


If you are installing hot swap drives in bank D or E for the first time, you must:

1. Install a disk drive *backplane* in banks D or E. Each backplane has six connectors, to support up to six disk drives.
2. Install a power cable. (Instructions are given in "Installing a SCSI Backplane in Bank D or E." on page 5-60.)
3. Install an additional SCSI-2 adapter and cable. (Instructions are given in "Installing Adapters" on page 5-29.)

Preinstallation Steps (All Bays)

Note: All internal drives in this server are mounted vertically.

1. Touch the static-protective bag containing the drive to any unpainted metal surface on the server; then remove the drive from the bag.

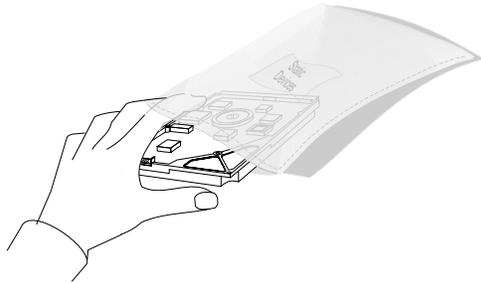


2. Check the instructions that came with the drive to see if you need to set any switches or jumpers on the drive, or if you need to attach a tray to the drive.

Notes:


- Automatic SCSI ID setting applies only to hot-swappable disk drives. Therefore, if you install a SCSI media drive (in bay B), you must set a SCSI ID for that drive. See Table A-2 on page A-4 in Appendix A for SCSI ID's.
 - Remove the terminator from the media drive you plan to install in bay B. The cable that connects to bays A and B already has a terminator.
3. Choose the location in which you want to install the drive. Hot-swappable drives can only be installed in banks C, D, or E.
 - To install a disk drive, tape drive, or CD-ROM in bay A or Bay B, go to page 5-41.
 - To install a SCSI disk drive in bank C, D, or E, go to page 5-52.
 - To install an SSA disk drive in bank C, D, or E, go to page 5-56.

Installing a Disk Drive, Tape Drive, or CD-ROM in Bay A or Bay B

1. If you have not already done so, remove the covers as described in “Removing Both the Front and Side Covers” on page 5-10.
2. Each device you install in bay B must have a tray like that shown below. If your drive came with a different tray, remove it and install the correct tray. (Your server has extra tray's in the bay.)

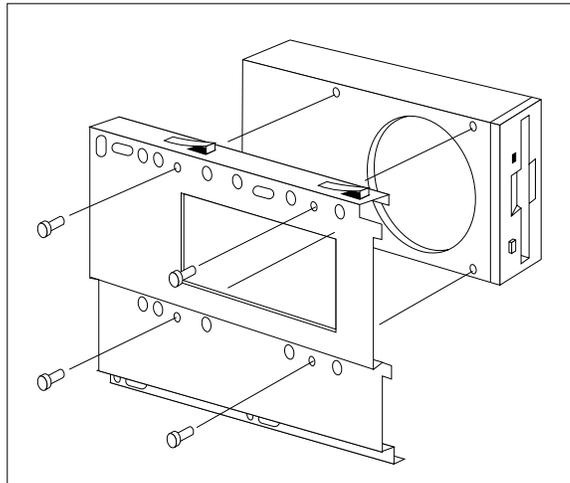


3.5-inch drive

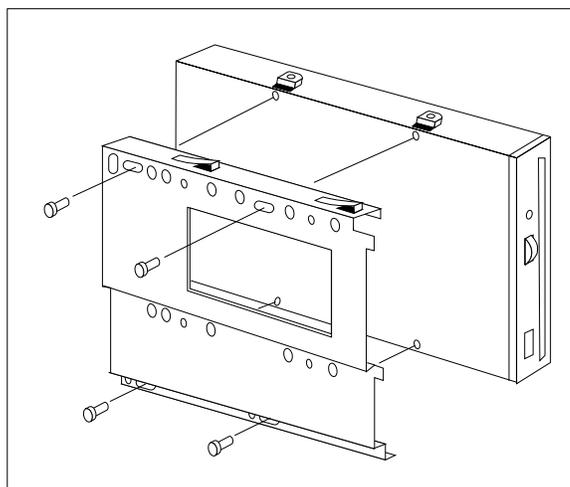


5.25-inch device

3. When installing a boot disk in Bay B1 or Bay B2 install the disk drive into the disk carrier.

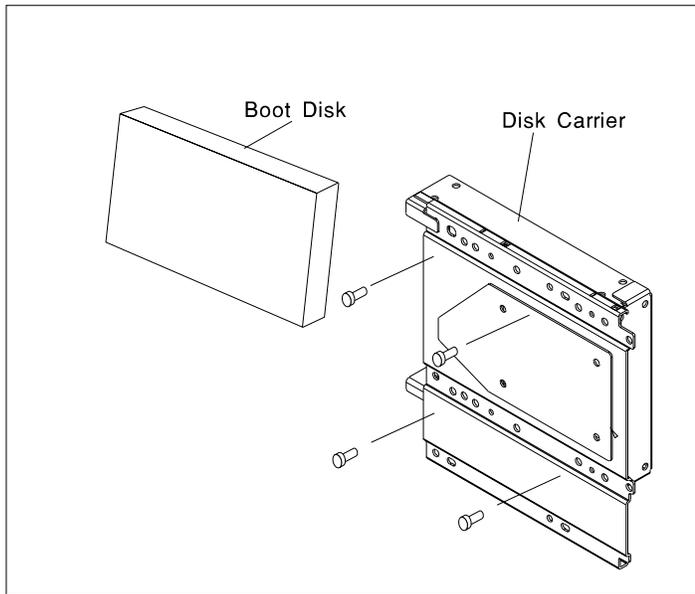


SCSI Ultra Boot Disk

4. You must also install the two gaskets that are shipped with the disk carrier if they were not previously installed. Make sure the gaskets are installed as shown behind the front lip. One gasket goes above the mounting hole and one gasket goes below the mounting hole.

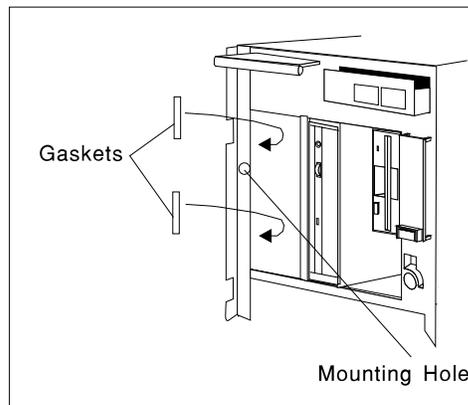



5. Connect the 16-bit to 8-bit interposer that came with your SCSI device to the drive.

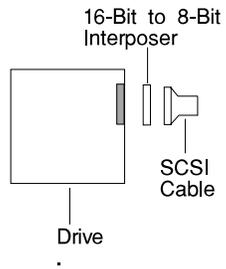


6. Check and place SCSI ID jumpers in correct position on the drive for correct ID. See Table A-2 on page A-4 for SCSI ID addresses.

7. Install the device:


- a. Position the device vertically, with the connectors facing the rear of the server.
- b. Align the device with the guides on the bottom of the bay and slide it to the rear of the bay until it stops.

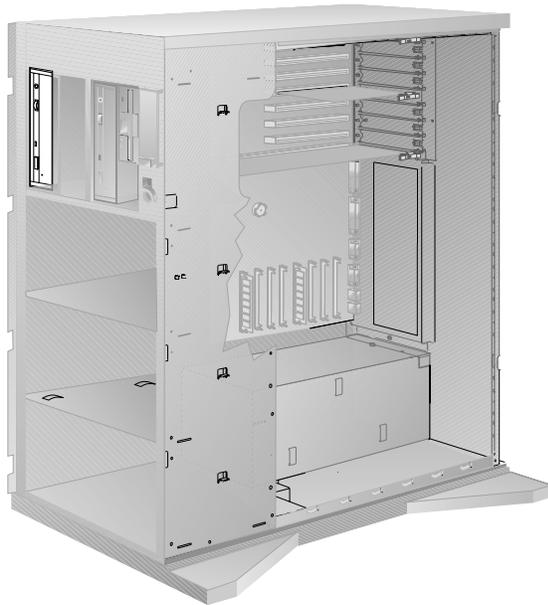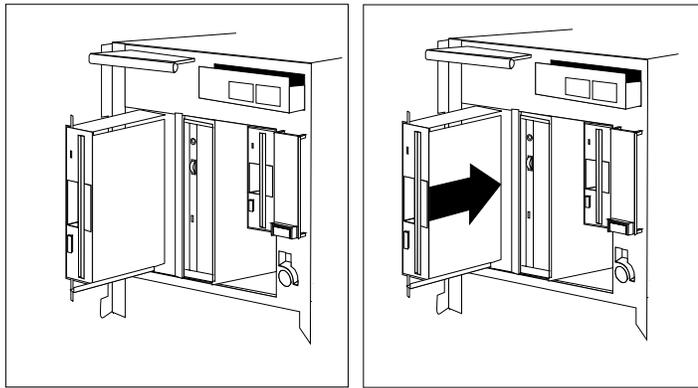

8. Slide the diskette drive and the CD-ROM drive forward in their guides to allow more room for connecting cables to the new drive. If you still don't have enough room to connect the cables to the new drive, remove the fan assembly as described in the following steps:
 - a. Loosen the three screws (do not remove) and remove the CPU card bracket.

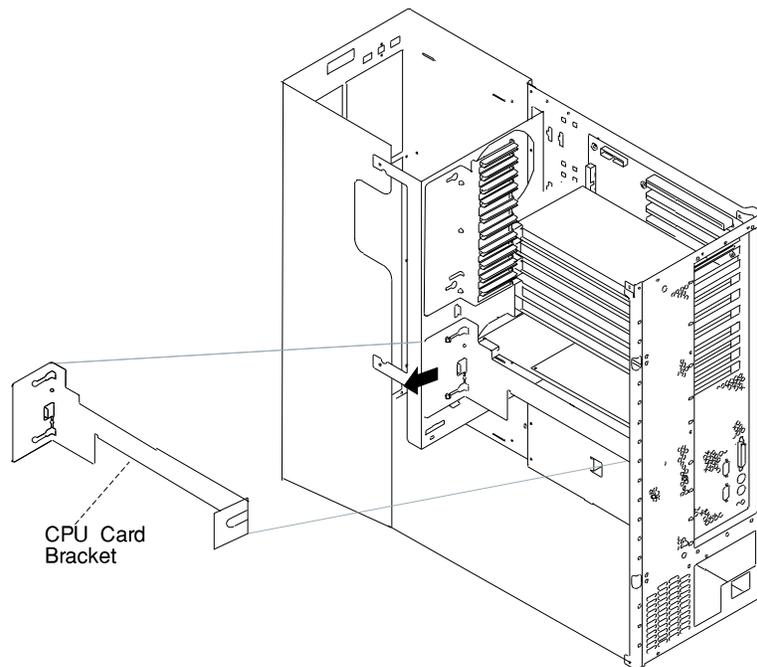


- b. Disconnect the fan assembly cable from the connectors (Fan 3, Fan 2, Fan 1) located on the system board.
- c. Remove the two screws that hold the fan assembly in place.
- d. Remove the fan assembly by lifting it up and pulling it out.

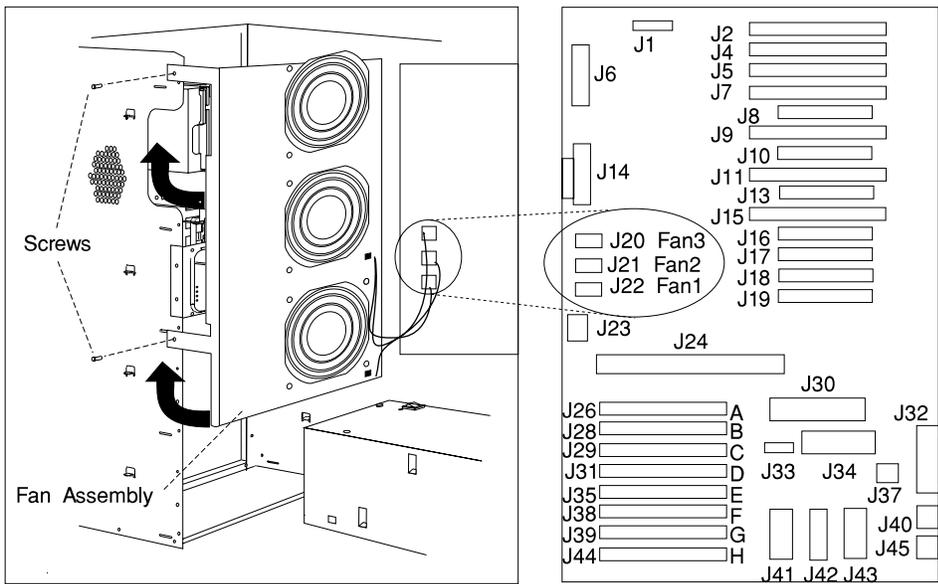


9. Connect the cables:

- a. If you are installing a SCSI drive, locate an unused SCSI drive connector at the back of the bay. Connect the SCSI drive connector to the drive.

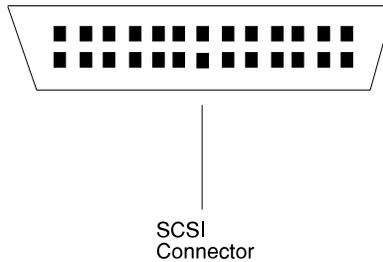

- b. Connect the power cable connector to the 4-pin connector on the drive.


Note: If you are installing a 24/48GB DDS-2 4-mm Tape Autoloader, connect the power cable connector to the 2-drop power cable previously installed on the drive.

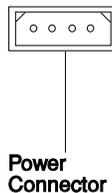

- c. The following illustrations show the possible cable connectors and routing for backplane C and the media devices in bay A and bay B. The diskette, CD-ROM and backplane C are factory installed.

- Cable connections for connecting the integrated SCSI on the system board to backplane C.


Note: The SCSI bus is terminated on the system board and the backplane. No termination is needed on the media devices.

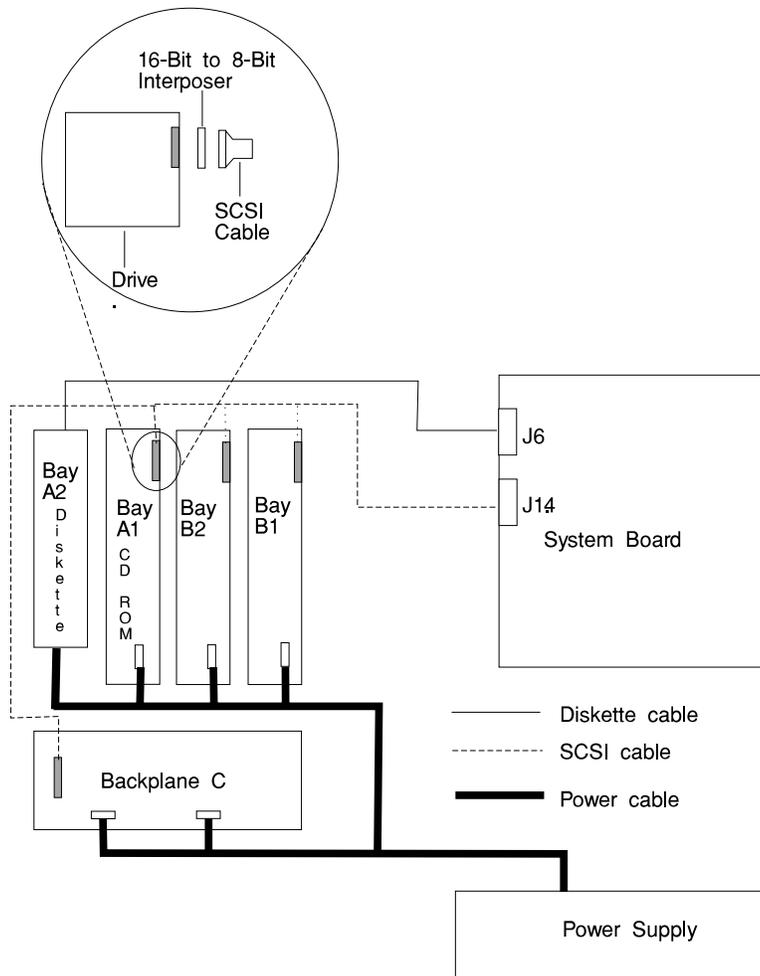

Attention: Route the cables (SCSI-2 and power) at the rear of the media drives so they do not block airflow or bind between the fan assembly and media drives.


- Cable connections for connecting a SCSI adapter to backplane C.

Note: The integrated SCSI bus is terminated on the system board, however, a terminator must be added to the other end of the cable as shown. No termination is needed on the media devices.


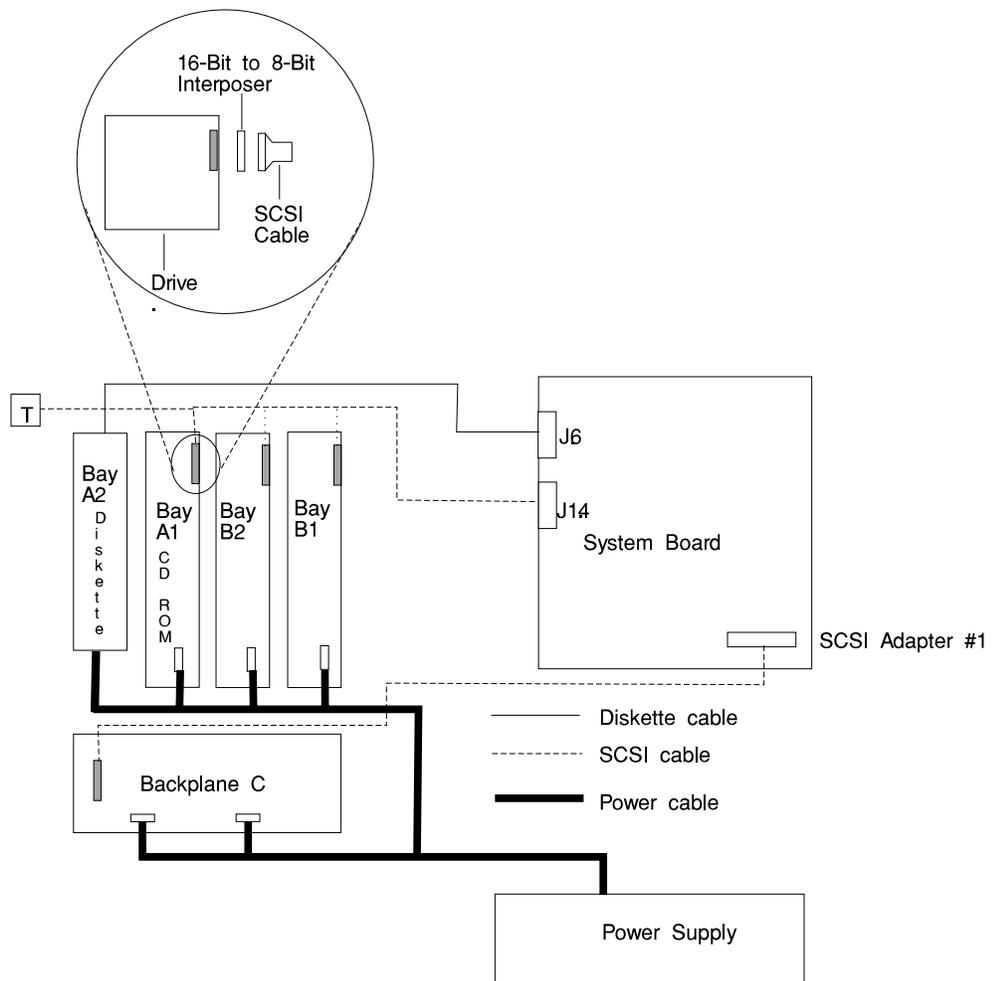


10. If you removed the fan assembly:

- a. Carefully insert and catch the two tabs on the fan assembly into corresponding holes located on the system chassis.
- b. Reinstall the two screws you removed in step 8c on page 5-46.
- c. Replace the CPU card bracket. Refer to step 8a on page 5-45.
- d. Reconnect the fan assembly cables. Be sure to install the three fan connectors in the correct order as shown.

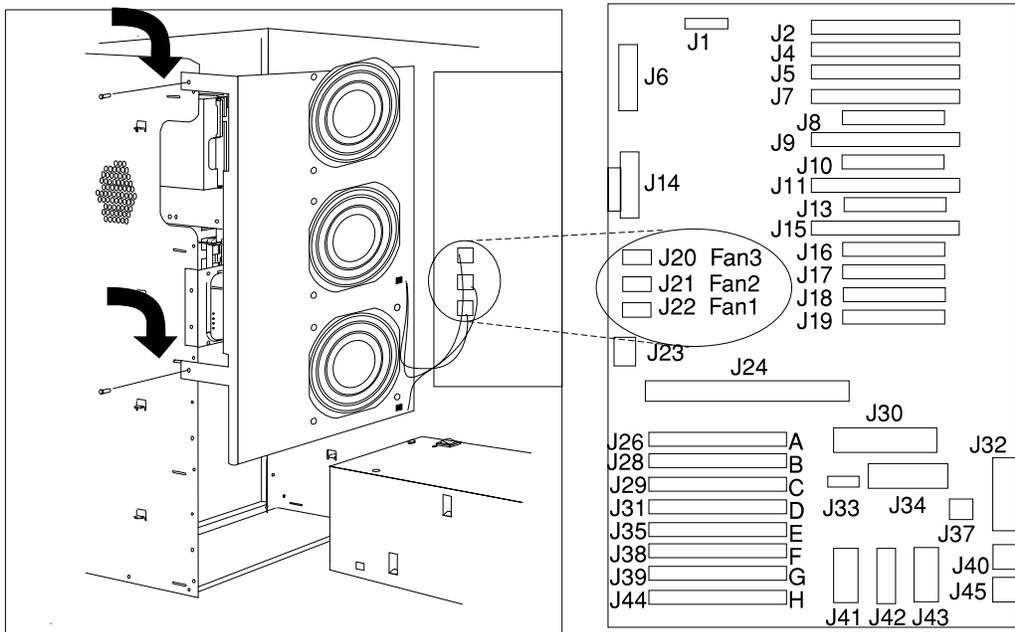

11. If you installed a removable-media drive in bay B1 or bay B2, remove the cover plate from the front cover. A cover plate (complete bezel) is in place in the server's front cover, which you removed earlier. Remove the cover plate by pushing it, gently, out of the front cover.

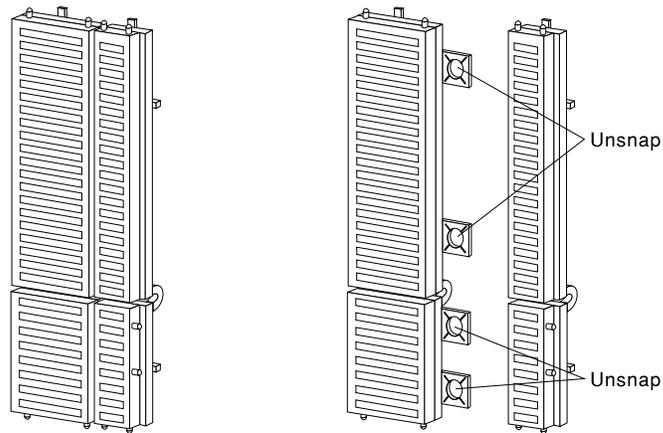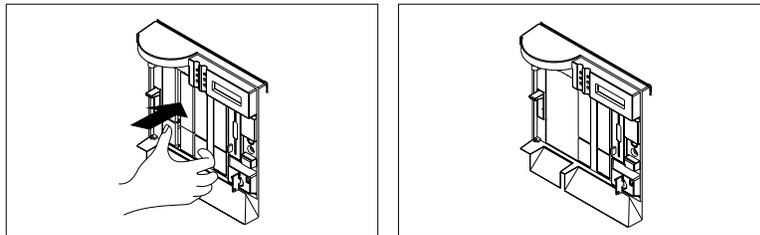

Complete Bezel

12. Go to Table A-2 on page A-4 to record the drive location (diskette interface devices do not require a SCSI ID); then return here to determine your next step.
13. If you have other drives to install, go to page 5-40.
14. If you have other procedures to perform, refer to "Option List" on page 5-16.
15. If you do not have any other procedures to perform, replace the covers as described in "Replacing Both the Front and Side Covers" on page 5-109.

Installing a SCSI Disk Drive in Bank C, D, or E.

Notes:

- Banks C, D, and E support hot-swappable disk drives only.
- SCSI ID's are automatically assigned by the backplane for each bank. Therefore, no address jumpers are required on the drives.
- SCSI disk drives and SSA disk drives are not interchangeable.
- Some 4.5GB SCSI drives and all 9.1GB SCSI drives are 1.6" high, and require two bays for each drive.
- Before installing disk drives in bank D or E, you must also order and install a disk drive backplane at the rear of bank D or E. You must also order and install an additional SCSI-2 adapter. To order, contact your authorized reseller or marketing representative.)
- After the backplane is completely installed, you do not have to turn off the server to install additional hot-swappable disk drives. However, you must turn off the server when performing the steps that involve installing or removing backplanes, cables, power supplies, the fan assembly, CPU card bracket, and adapters.


1. If you have not already done so, remove the front covers as described in "Removing the Front Covers Only" on page 5-6
2. If you are installing drives in bank D or E for the first time, you must install an additional backplane before you can install drives. See "Installing a SCSI Backplane in Bank D or E." on page 5-60 for information on how to install the backplane.
3. Each drive you plan to install in bank C, D, or E must have the hot-swap SCSI disk drive carrier attached.

Attention: Handle the disk drive with care as it is very fragile and can be easily damaged if exposed to shock, electrostatic discharge, or rough handling.

4. It is recommended that you install the disk drive in the next unused position of bank C, D, or E.



Attention: Attaching SCSI address jumpers on the drive rather than using the automatic ID furnished by the backplane is not advised. Attaching jumpers can cause service problems, multiple drives at the same address, or confusion locating the correct drive.

- a. Rotate the carrier latch to the open position.

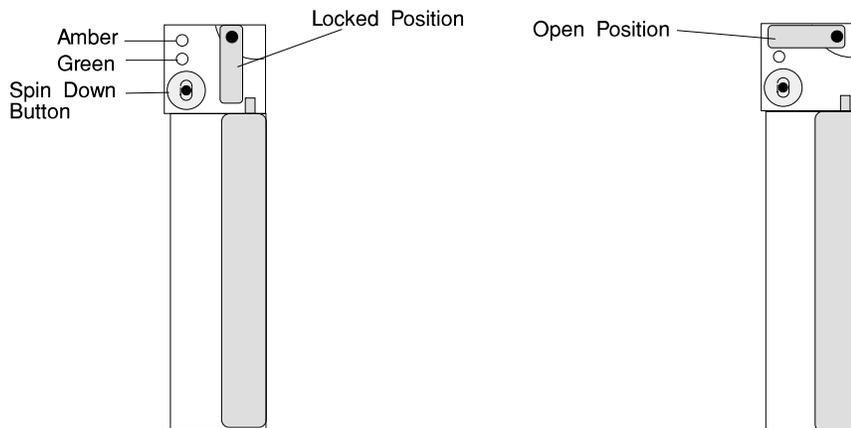


- b. Position the drive carrier assembly vertically, with the connector facing the rear of the server.

- c. Align the side of the carrier with the raised guides on the bottom of the bay.
- d. Slide the carrier into the bay gently to keep from damaging the disk drive. Slide the carrier to the rear of the bay until it stops.

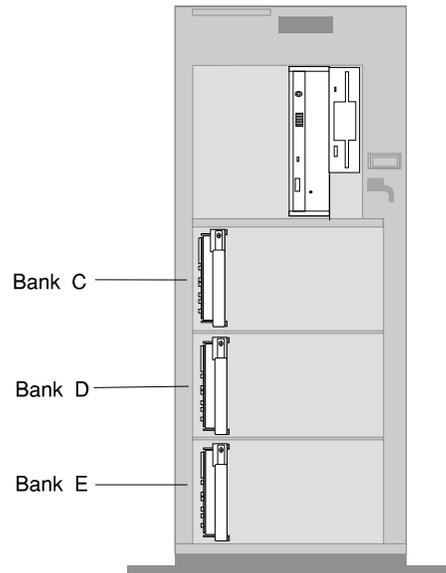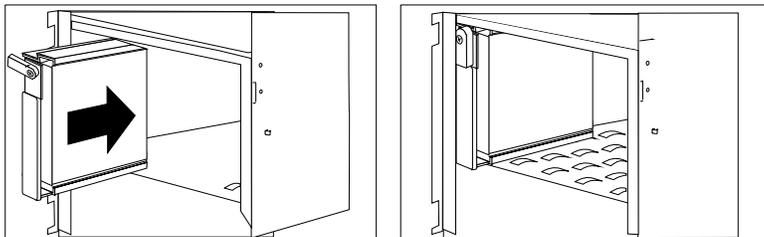

- e. Move the carrier latch to the locked position. If the carrier does not lock, check that the drive carrier is fully seated in the backplane. When the drive carrier is fully seated and power is turned on, the green LED on the drive carrier illuminates.

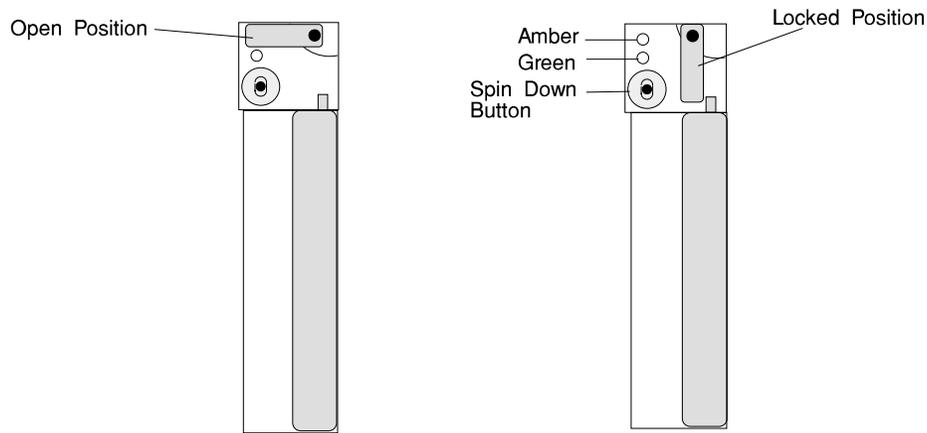

5. See "Disk Drive Status LED States" on page 2-19 for information on disk drive lights.
6. Go to Table A-2 on page A-4 to record the drive location for the drive; then return here to determine your next step.
7. If you have other drives to install, go to page 5-40.
8. If you have other procedures to perform, refer to "Option List" on page 5-16.
9. If you do not have any other procedures to perform, replace the covers as described in "Replacing the Front Covers" on page 5-106.

Installing an SSA Disk Drive in Bank C, D, or E.

Notes:

- Banks C, D, and E support hot-swappable disk drives only.
- SSA disk drive carriers and SCSI disk drive carriers are not interchangeable.
- 9.1GB SSA drives are 1.6" high, and require two bays for each drive.
- Before installing SSA disk drives in bank D or E, you must also order and install an SSA disk drive backplane at the rear of bank D or E. You must also order and install an SSA adapter. To order, contact your authorized reseller or marketing representative.)
- After the backplane is completely installed, you do not have to turn off the server to install additional hot-swappable disk drives. However, you must turn off the server when performing the steps that involve installing or removing backplanes, cables, power supplies, the fan assembly, CPU card bracket, and adapters.


1. If you have not already done so, remove the front covers as described in “Removing the Front Covers Only” on page 5-6
2. If you are installing drives in bank D or E for the first time, you must install an additional backplane before you can install drives. See “Installing an SSA Backplane in Bank D or E.” on page 5-76 for information on how to install the backplane.
3. Each drive you plan to install in bank C, D, or E must have the hot-swap SSA disk drive carrier attached.

Attention: Handle the disk drive with care as it is very fragile and can be easily damaged if exposed to shock, electrostatic discharge, or rough handling.

4. It is recommended that you install the disk drive in the next unused position of bank C, D, or E.



Attention: SSA backplanes must be fully populated. Each bay must have a disk drive or a blank carrier installed at all times. If you are installing a disk drive in a bay that was not previously utilized, you must remove the blank carrier prior to installing the disk drive.

- a. Rotate the carrier latch to the open position.

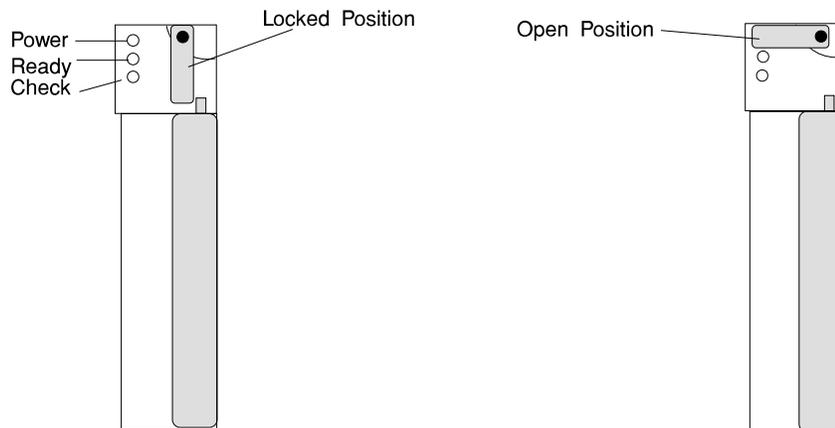


- b. Position the drive carrier assembly vertically, with the connector facing the rear of the server.

- c. Align the side of the carrier with the raised guides on the bottom of the bay.
- d. Slide the carrier into the bay gently to keep from damaging the disk drive. Slide the carrier to the rear of the bay until it stops.

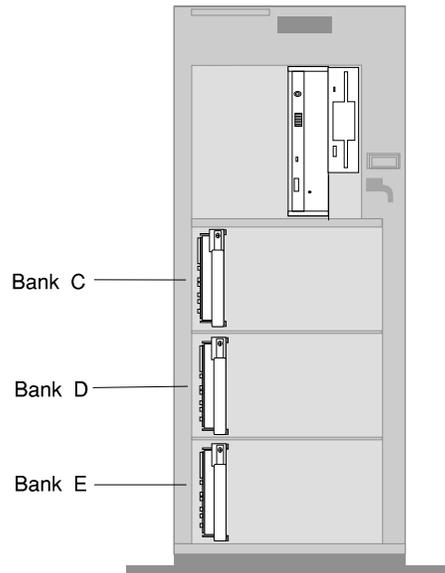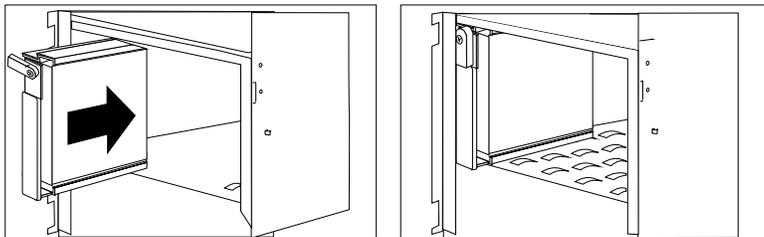

- e. Move the carrier latch to the locked position. If the carrier does not lock, check that the drive carrier is fully seated in the backplane. When the drive carrier is fully seated and power is turned on, the Ready LED on the drive carrier illuminates.

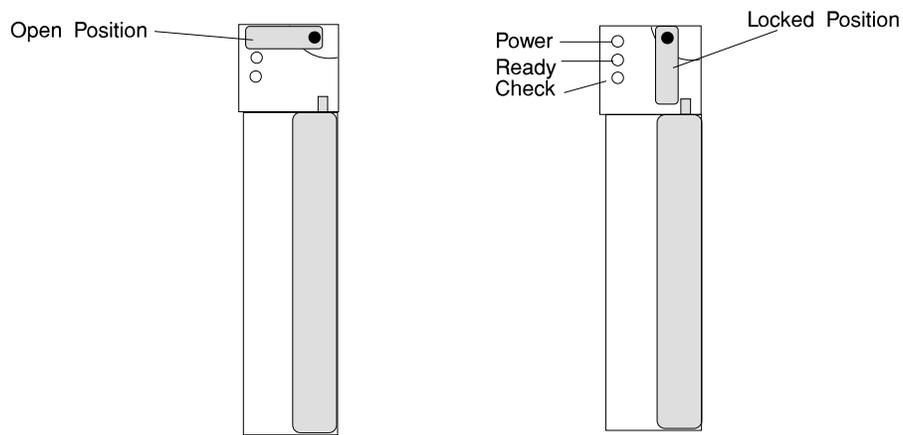


5. See "Disk Drive Status LED States" on page 2-19 for information on disk drive lights.
6. Go to Table A-2 on page A-4 to record the drive location for the drive; then return here to determine your next step.
7. If you have other drives to install, go to page 5-40.
8. If you have other procedures to perform, refer to "Option List" on page 5-16.
9. If you do not have any other procedures to perform, replace the covers as described in "Replacing the Front Covers" on page 5-106.

Installing a SCSI Backplane in Bank D or E.

Notes:

- Banks C, D, and E support hot-swappable drives only.
- Before installing SCSI disk drives in bank D or E, you must also order and install a SCSI disk drive backplane at the rear of bank D or E. You must also order and install an additional SCSI-2 adapter. To order, contact your authorized reseller or marketing representative.)
- After the backplane is completely installed, you do not have to turn off the server to install additional hot-swappable drives. However, you must turn off the server when performing the steps that involve installing or removing backplanes, cables, power supplies, the fan assembly, CPU card bracket, and adapters.


1. Inventory your parts and tools.
 - a. backplane
 - b. power cable
 - c. one screw (with backplane)
 - d. SCSI-2 adapter
 - e. SCSI-2 cable
 - f. Long flat blade screwdriver
2. If you have not already done so, remove the covers as described in "Removing Both the Front and Side Covers" on page 5-10.
3. Remove any long adapter cards.
4. Loosen (do not remove) the three screws and remove the CPU card bracket.

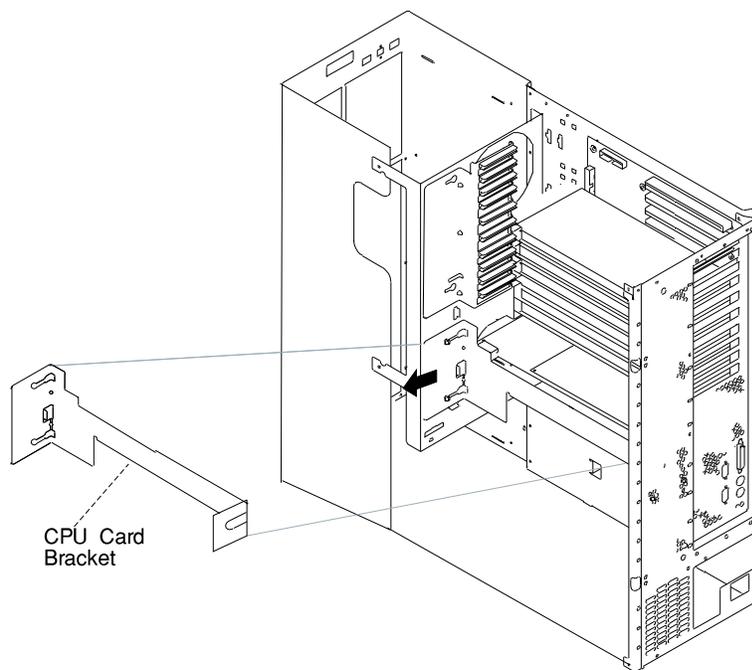

5. Disconnect the fan assembly cables from the connectors (Fan 3, Fan 2, Fan 1) located on the system board.


Attention: To avoid damage and ensure proper server operation, handle the fan assembly carefully.

6. Remove the two screws that hold the fan assembly in place.
7. Remove the fan assembly by lifting it up and pulling it out.

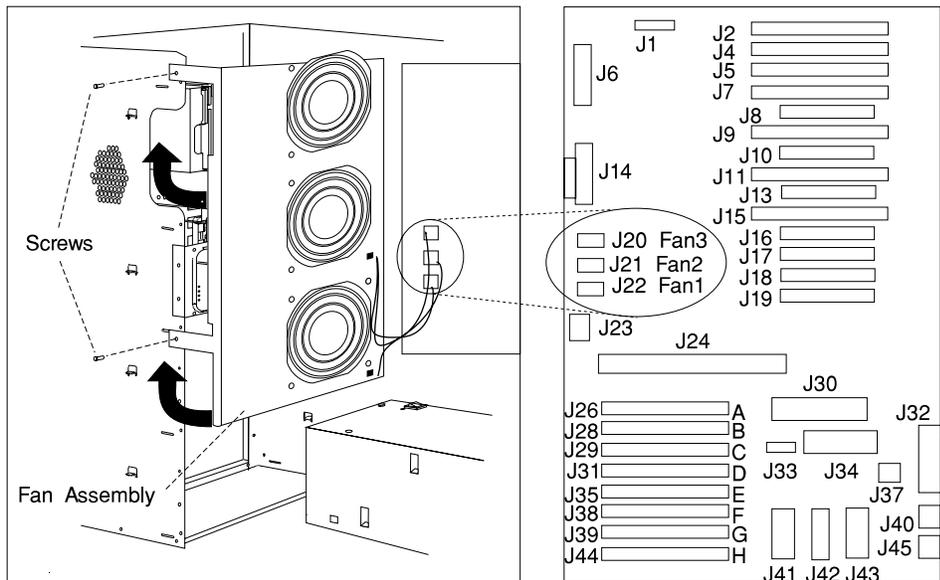


8. If you are installing a backplane in bank D, go to step 9 on page 5-63. If you are installing a backplane in bank E, go to step 14 on page 5-84.

9. Locate the new backplane (D).
10. Check the jumpers on the new backplane for proper setting. The jumpers should be set as shown.

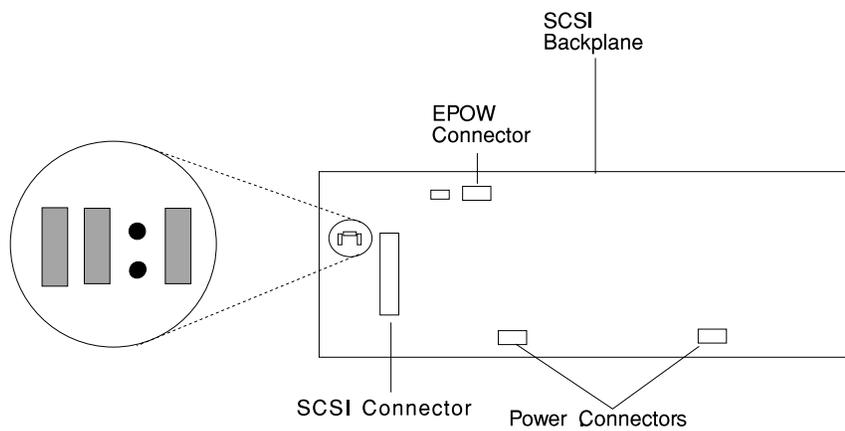


11. Install the backplane at the rear of bank D:
 - a. Align the top screw hole on the left side of the backplane with the top screw hole on the left side of bank D, making sure the dimples on the backplane line up with the holes on the frame of the server.
 - b. Secure the backplane with one screw.

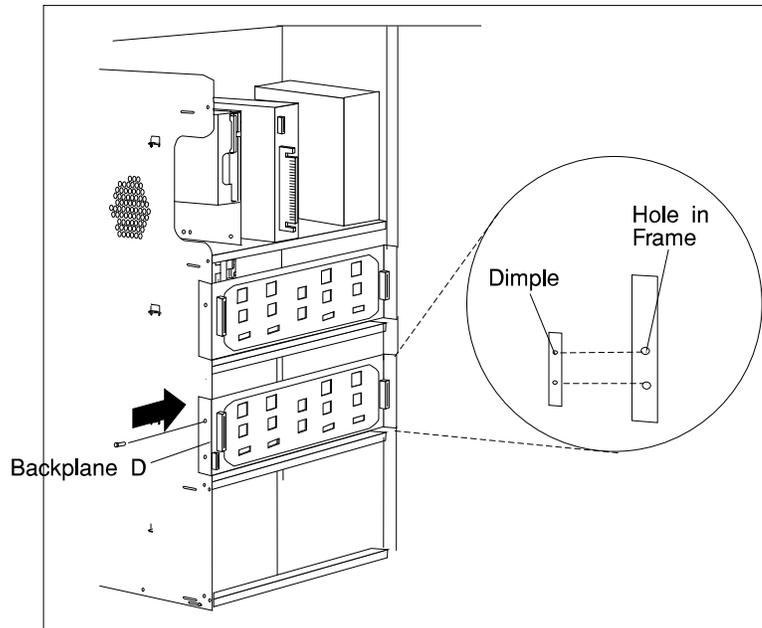


12. Install an additional SCSI-2 adapter in one of the empty PCI expansion slots. Refer to “Installing Adapters” on page 5-29 for installation instructions; then continue to the next step.

13. Attach cables to backplane D.

a. Connect the connector from the EPOW cable to backplane D as shown.

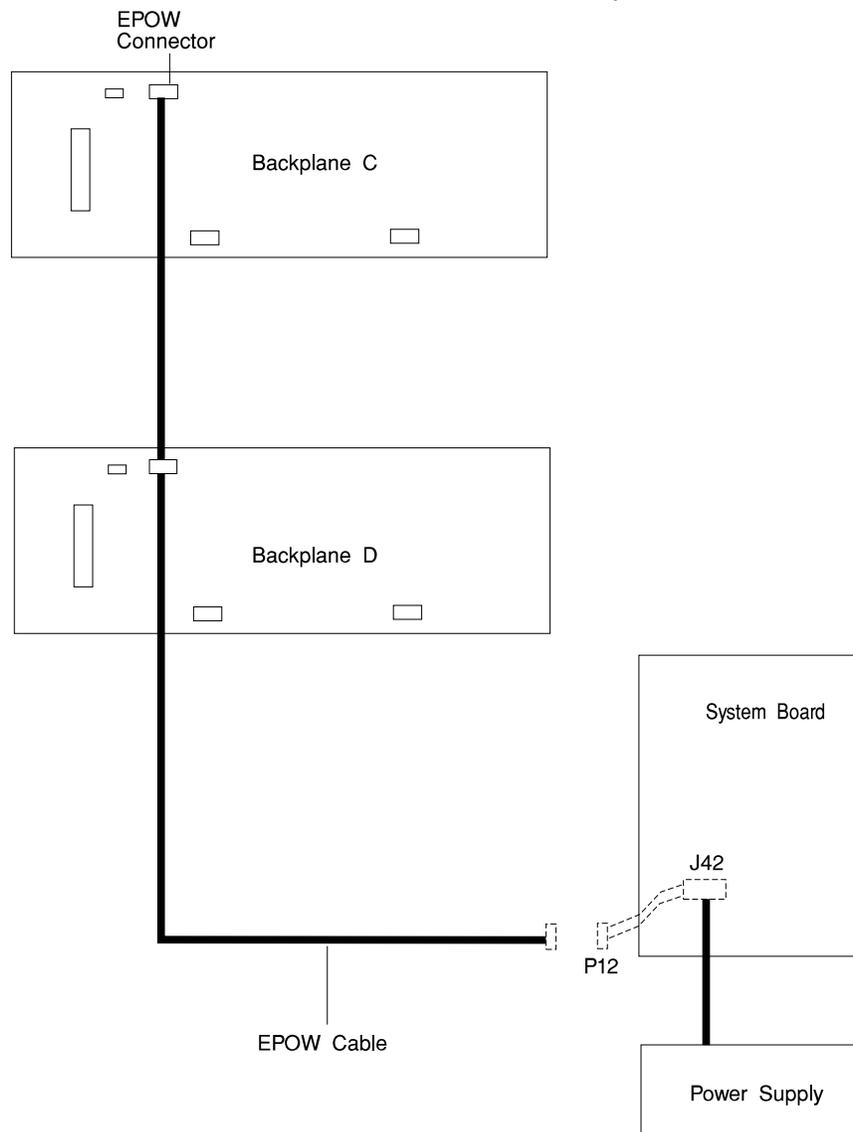


b. Attach the new power cable to backplane D.

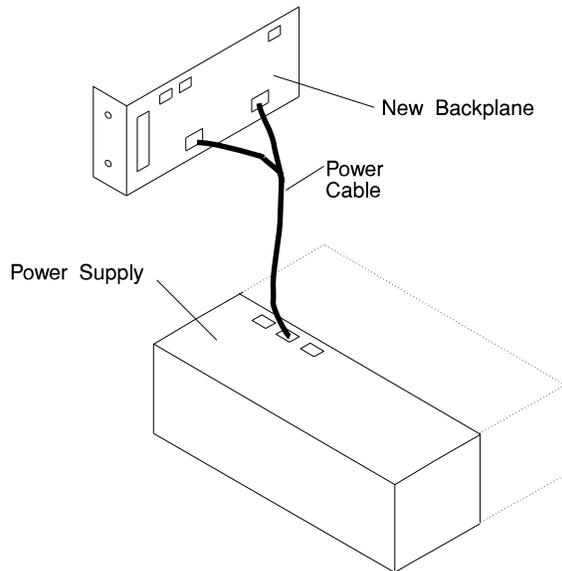


c. Connect the other end of the power cable to the power supply.

d. Locate the SCSI cable.

e. Before connecting the SCSI cable, fill in your SCSI cable labels. Fill in the bank identifier (D) and the adapter slot (such as 1P, 2P, 3P). Refer to the following illustration to help you label your cable properly.

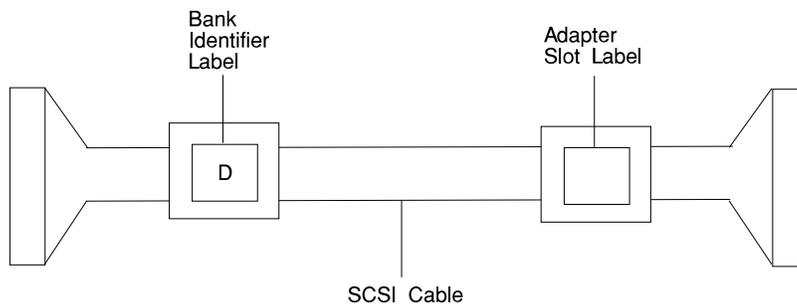


- f. Connect the SCSI cable from the SCSI adapter you just installed to the new backplane (D). Refer to the following illustrations to help you connect the cables properly. The cable should be routed up and placed in the two cable holders mounted under the top of the system and routed above the fan assembly.

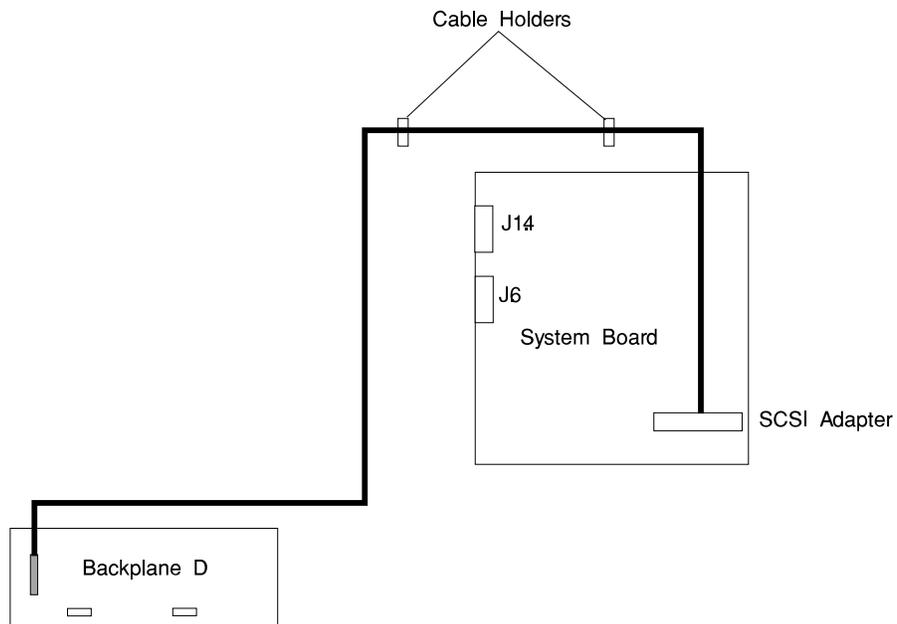

14. Continue with step 20 on page 5-72.


15. Locate the new backplane (E).

16. Check the jumpers on the backplane for proper setting. The jumpers should be set as shown.

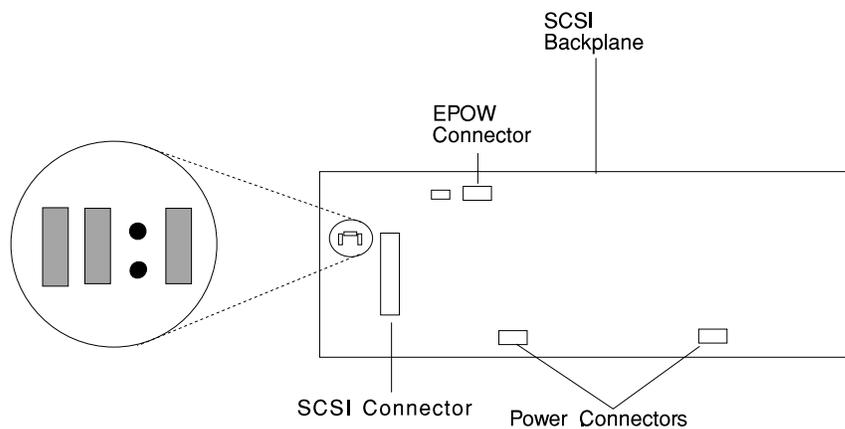

17. Install a backplane at the rear of bank E:


- a. Align the top screw hole on the left side of the backplane with the top screw hole on the left side of bank E, making sure the dimples on the backplane line up with the holes on the frame of the server.
- b. Secure the backplane with one screw.

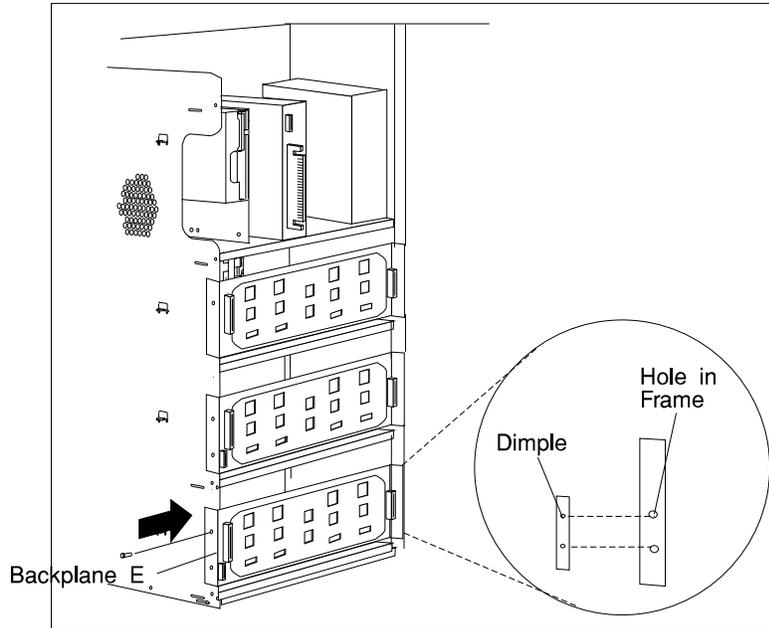


18. Install an additional SCSI-2 adapter in one of the empty PCI expansion slots. Refer to "Installing Adapters" on page 5-29 for installation instructions; then continue to the next step.

19. Attach cables to backplane E.

a. Connect the connector from the EPOW cable to backplane E as shown.

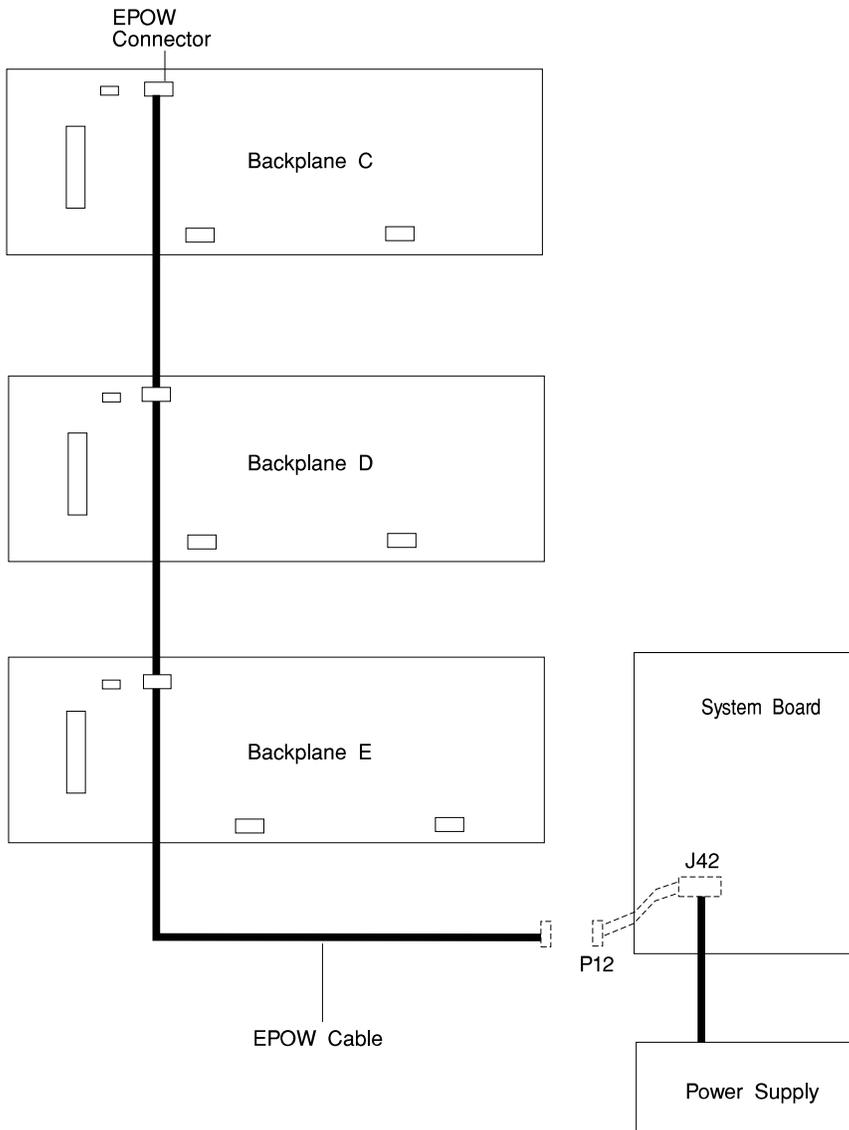


b. Attach the new power cable to backplane E.

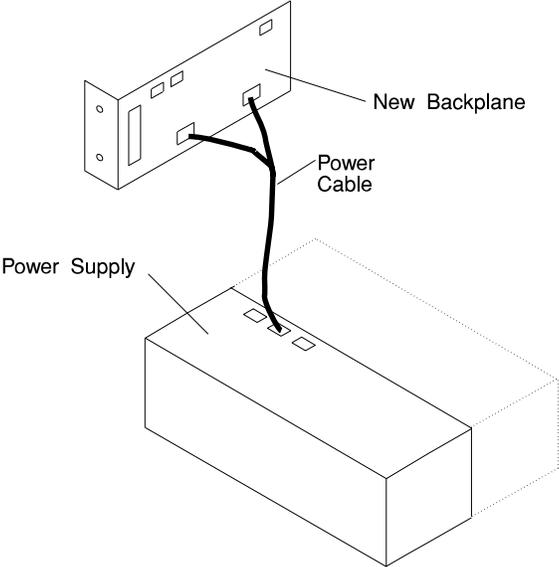


c. Connect the other end of the power cable to the power supply.

d. Locate the SCSI cable.

e. Before connecting the SCSI cable, fill in your SCSI cable labels. Fill in the bank identifier (E) and the adapter slot (such as 1P, 2P, 3P). Refer to the following illustration to help you label your cable properly.

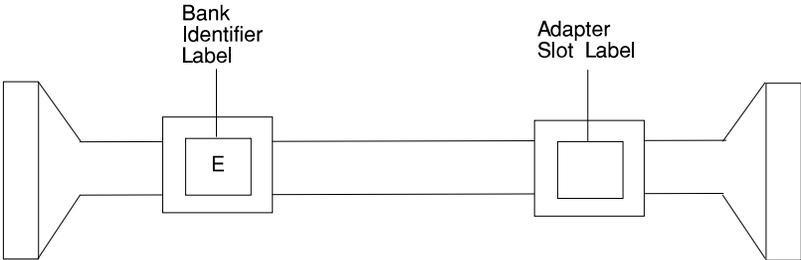


- f. Connect the SCSI cable from the SCSI adapter you just installed to the new backplane (E). Refer to the following illustrations to help you connect the cables properly. The cable should be routed up and placed in the two cable holders mounted under the top of the system and routed above the fan assembly.

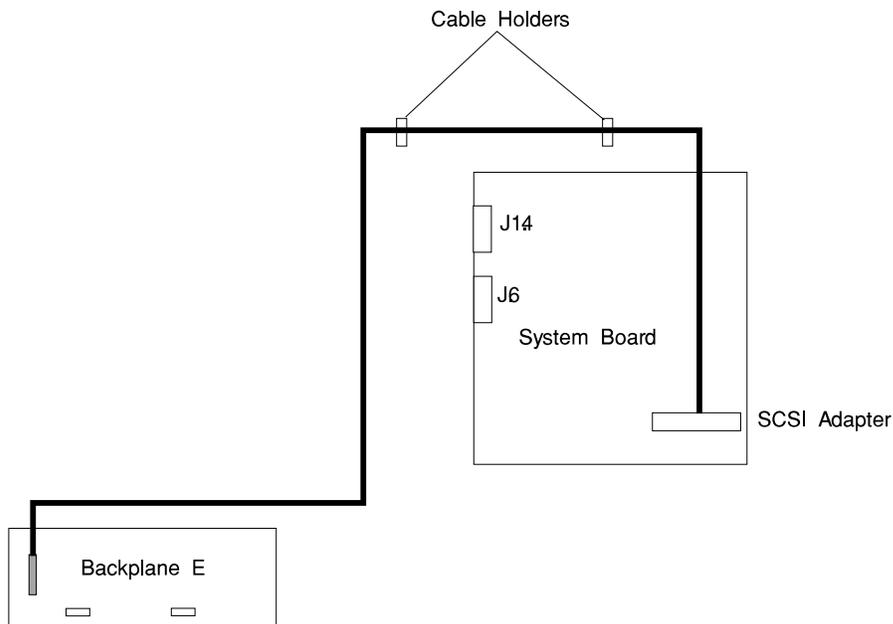

20. Carefully insert and catch the two tabs on the fan assembly into corresponding holes located on the system chassis.
21. Reinstall the fan assembly screws you removed in step 6 on page 5-62.


22. Reconnect the fan assembly cables that you disconnected in step 5 on page 5-62.

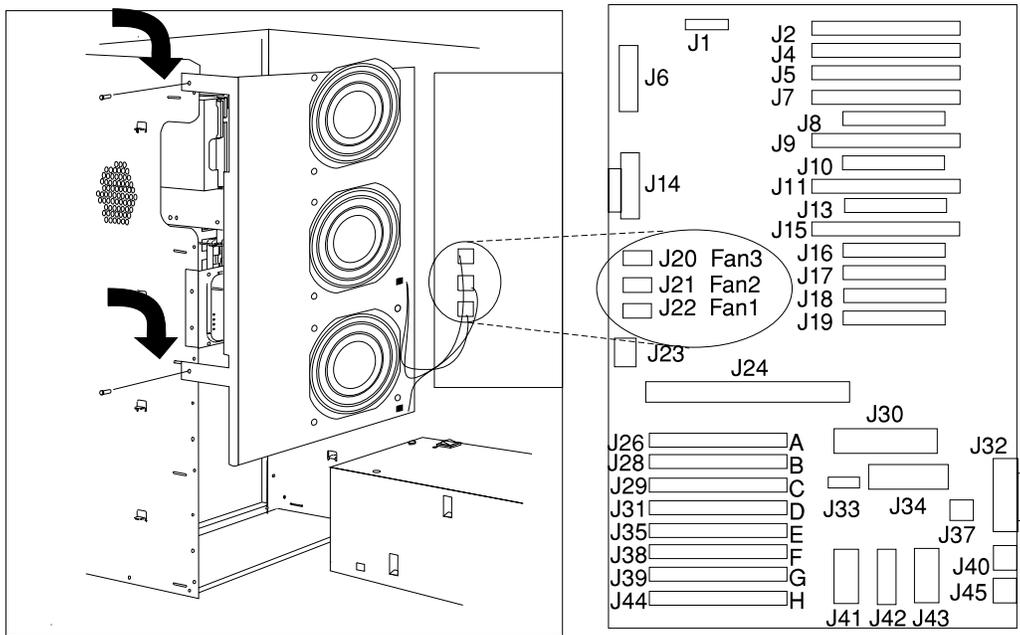

23. Reinstall the CPU card bracket you removed in step 4 on page 5-61.

24. Fill in the bank label. The bank label is located in the front of the server at the right side of the machine. Use the following table to help you determine the proper numbers to enter on the label.

Physical Slot of SCSI Adapter	Bank Label
7E/P	04 - 07
6E/P	04 - 06
5E/P	04 - 05
4E/P	04 - 04
3P	04 - 03
2P	04 - 02
1P	04 - 01
Integrated SCSI	04 - C0

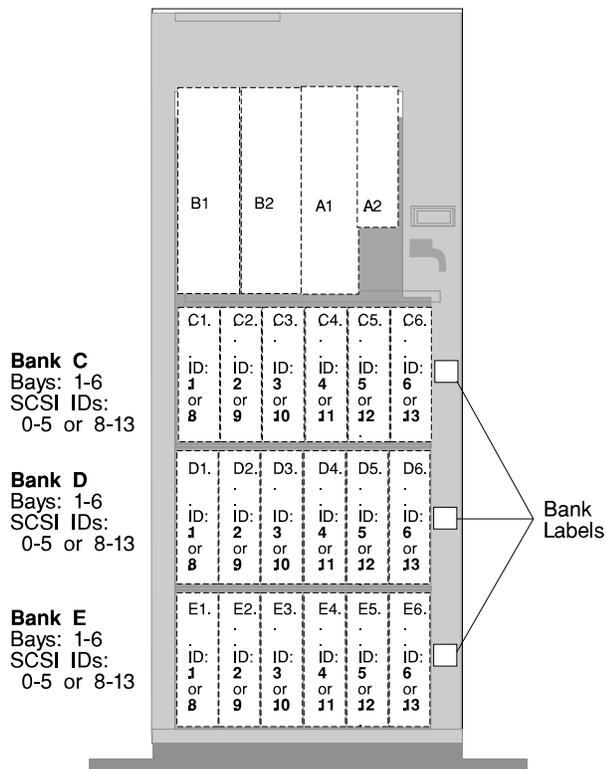


25. If you have other drives to install, go to page 5-40.
26. If you have other procedures to perform, refer to "Option List" on page 5-16.
27. If you do not have any other procedures to perform, replace the covers as described in "Replacing Both the Front and Side Covers" on page 5-109.

Installing an SSA Backplane in Bank D or E.

Notes:

- Banks C, D, and E support hot-swappable drives only.
- Before installing SSA disk drives in bank D or E, you must also order and install an SSA disk drive backplane at the rear of bank D or E. If bank C is not SSA, you must also order and install an SSA adapter. To order, contact your authorized reseller or marketing representative.)
- After the backplane is completely installed, you do not have to turn off the server to install additional hot-swappable drives. However, you must turn off the server when performing the steps that involve installing or removing backplanes, cables, adapters, memory power supplies, the fan assembly, CPU card and bracket.


1. Inventory your parts and tools.
 - a. SSA backplane
 - b. power cable
 - c. SSA daisy chain cable (only needed if more than one SSA backplane is installed)
 - d. one screw (with backplane)
 - e. SSA adapter
 - f. SSA internal cable
 - g. SSA documentation
 - h. Long flat blade screwdriver
2. If you have not already done so, remove the covers as described in “Removing Both the Front and Side Covers” on page 5-10.
3. Remove any long adapter cards.
4. Loosen (do not remove) the three screws and remove the CPU card bracket.

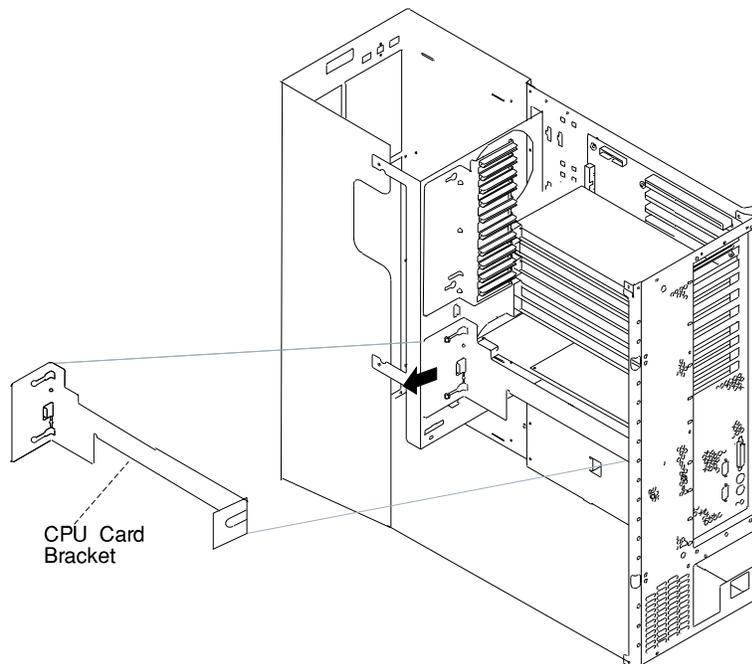

5. Disconnect the fan assembly cables from the connectors (Fan 3, Fan 2, Fan 1) located on the system board.


Attention: To avoid damage and ensure proper server operation, handle the fan assembly carefully.

6. Remove the two screws that hold the fan assembly in place.
7. Remove the fan assembly by lifting it up and pulling it out.
8. Install an SSA adapter in one of the empty PCI expansion slots. Refer to "Installing Adapters" on page 5-29 for installation instructions; then continue to the next step.

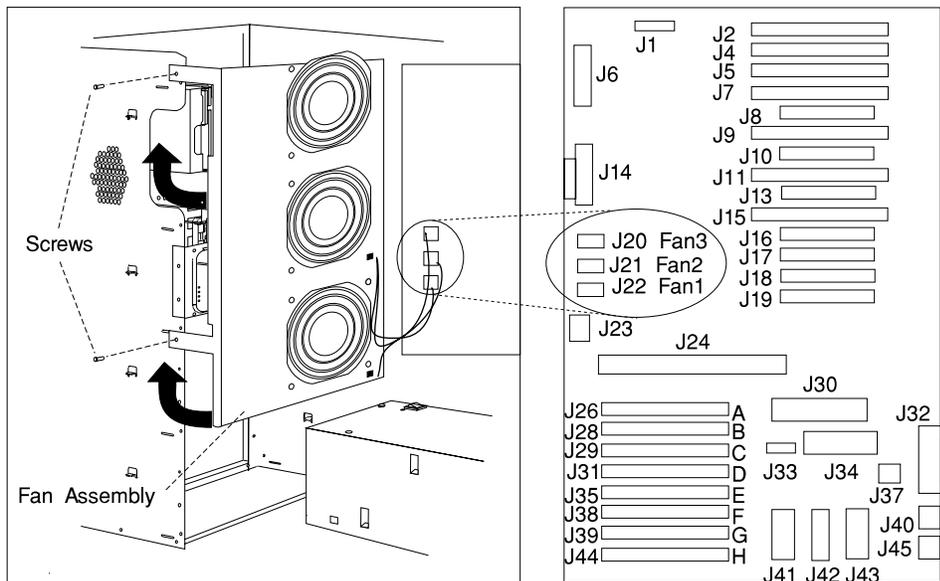


9. If you are installing a backplane in bank D, go to step 10 on page 5-79. If you are installing a backplane in bank E, go to step 14 on page 5-84.

10. Locate the new backplane (D).

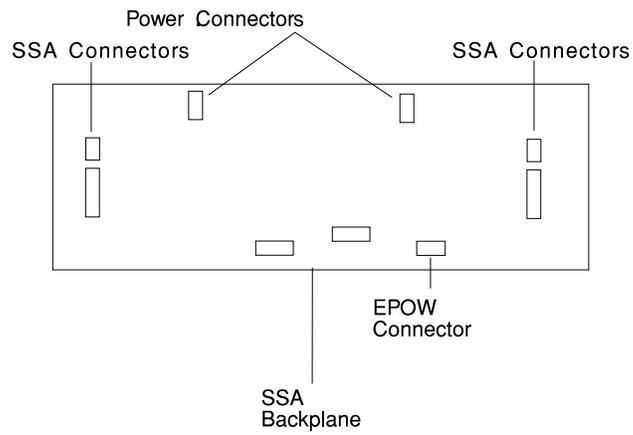


11. Attach cables to backplane D.

- a. Connect the connector from the EPOW cable to backplane D as shown.

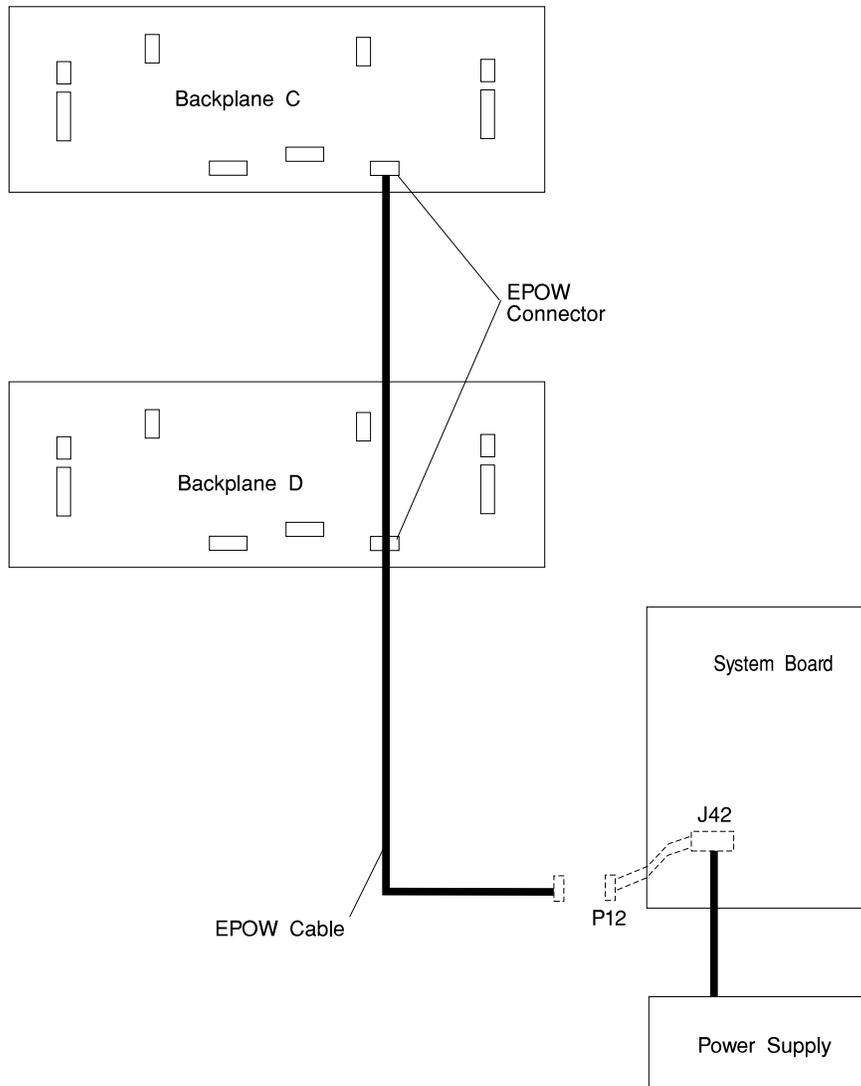


b. Attach the new power cable to backplane D.

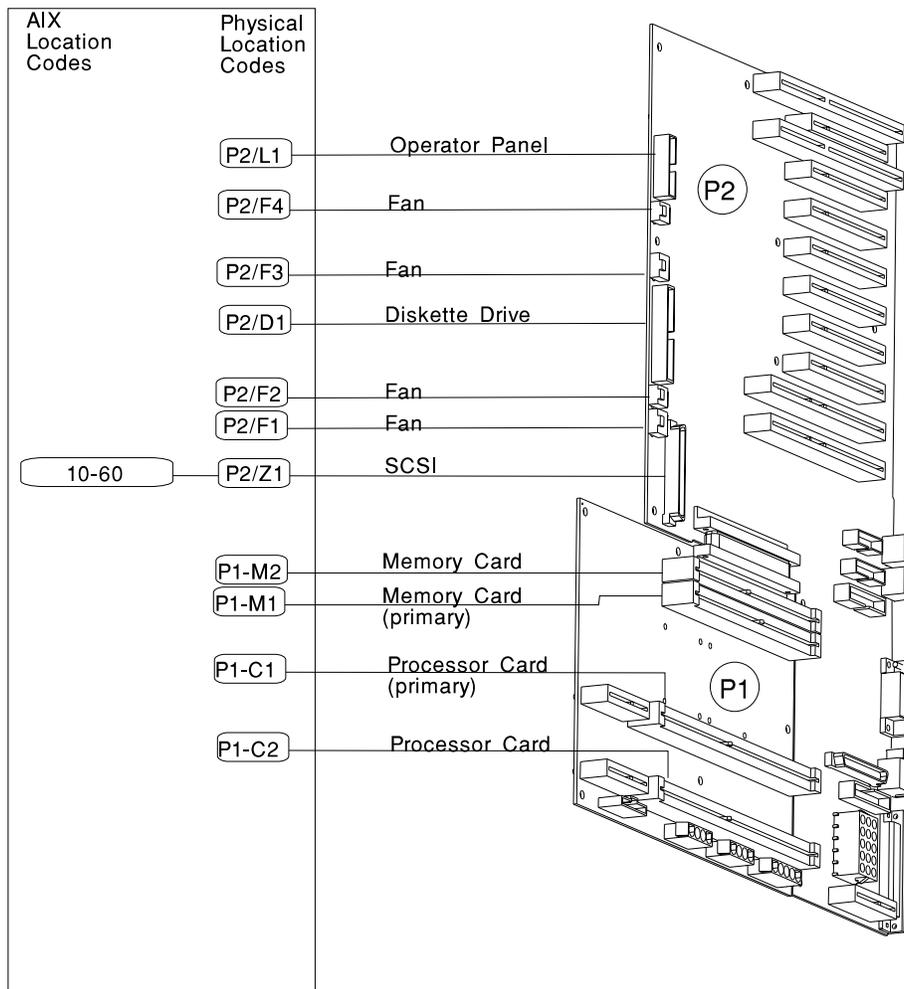


c. Connect the other end of the power cable to the power supply.

d. Locate the SSA cable.

e. Connect the SSA cables from the SSA adapter you just installed to the new backplane (D). Refer to the following illustrations to help you connect the cables properly. The cable should be routed up and placed in the two cable holders mounted under the top of the system and routed above the fan assembly.

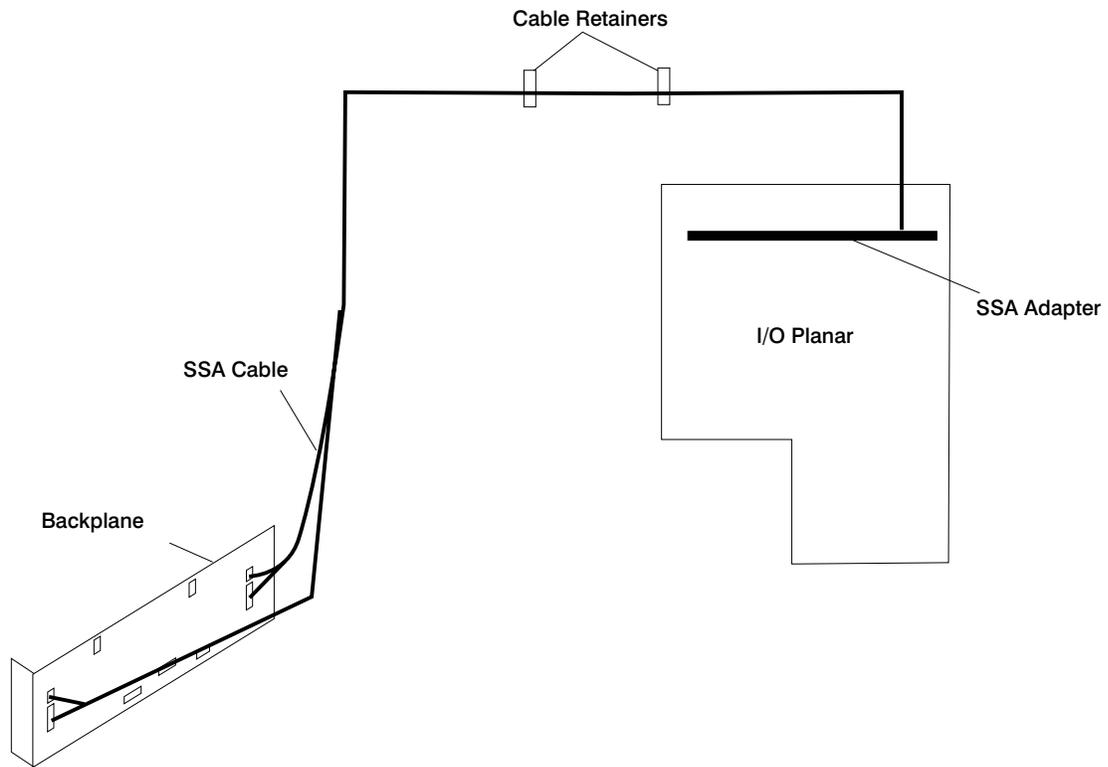


12. Install the backplane at the rear of bank D:
 - a. Align the top screw hole on the left side of the backplane with the top screw hole on the left side of bank D, making sure the dimples on the backplane line up with the holes on the frame of the server.
 - b. Secure the backplane with one screw.

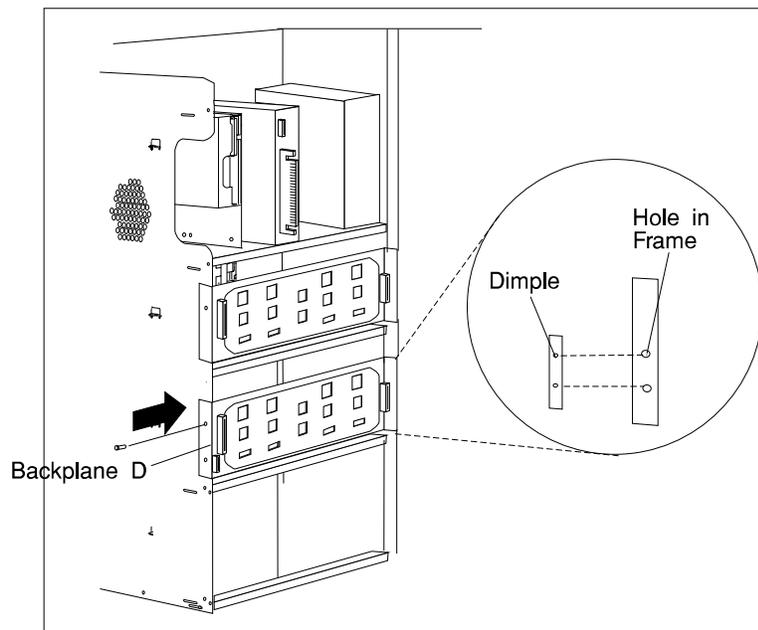


13. If you are installing a backplane in bank E, go to step 14 on page 5-84, otherwise continue with step 18 on page 5-88.


14. Remove the outside SSA cable from Backplane D. This cable is attached later in these procedures. One end of the SSA daisy chain cable connects here.

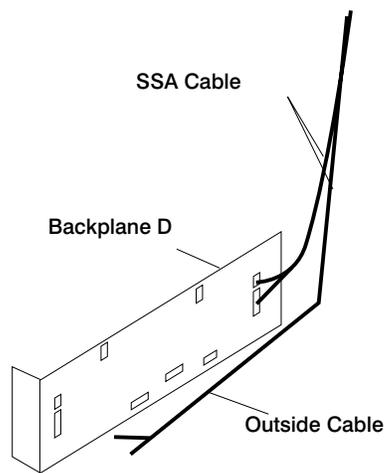


15. Locate the new backplane (E).

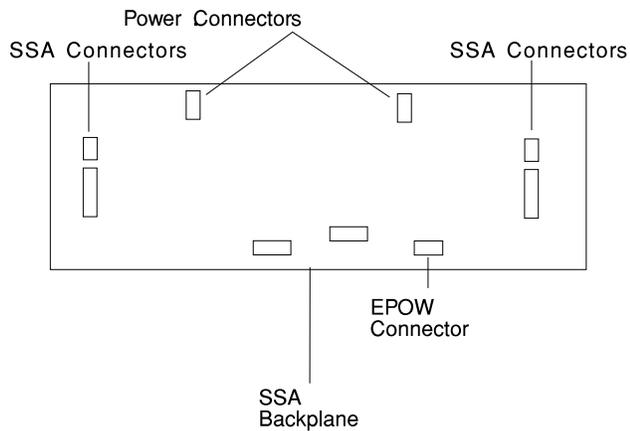

16. Attach cables to backplane E.
- Connect the connector from the EPOW cable to backplane E as shown.

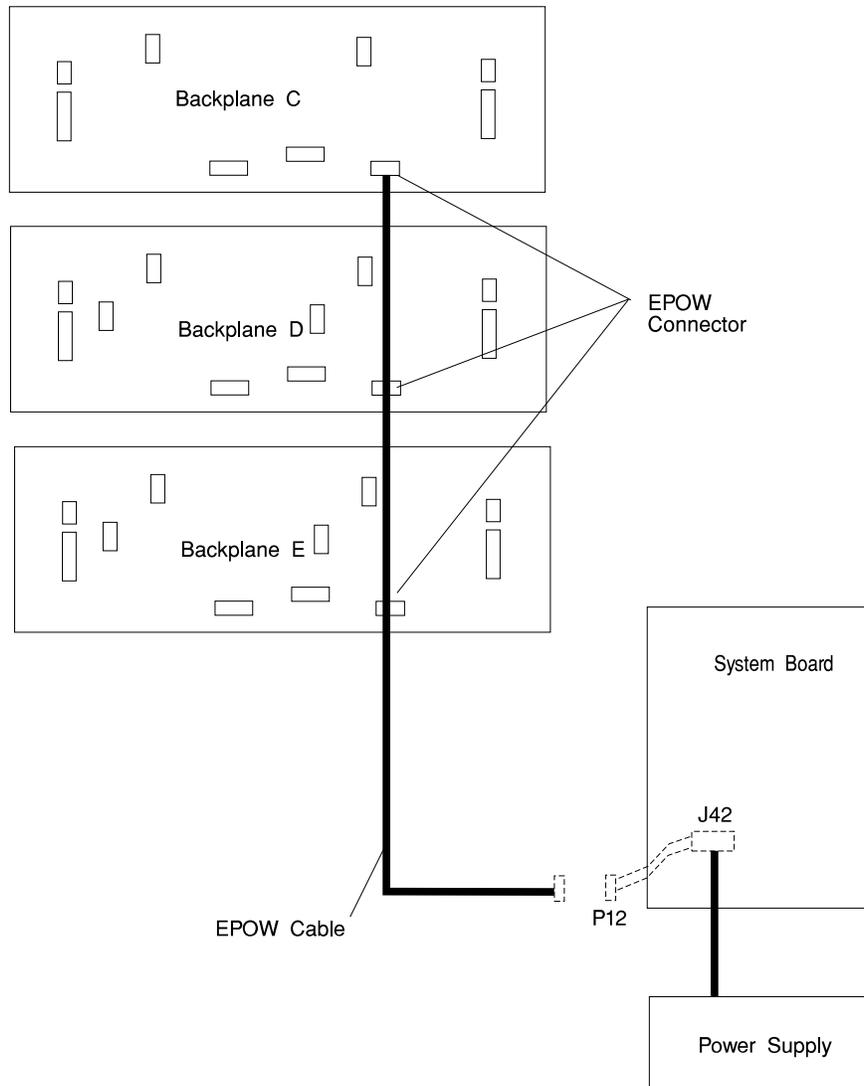


b. Attach the new power cable to backplane E.

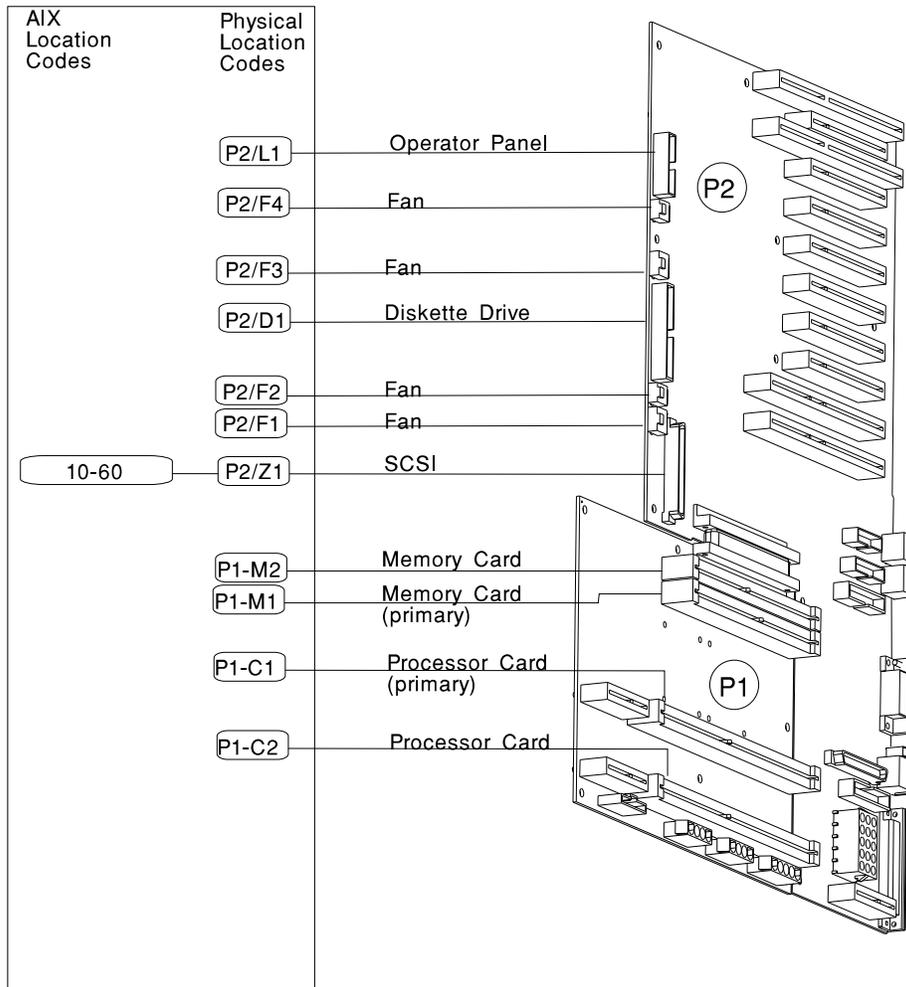


c. Connect the other end of the power cable to the power supply.

d. Locate the SSA cable.

- e. Connect the SSA cables that were removed from backplane D to the outside SSA connector on backplane E.

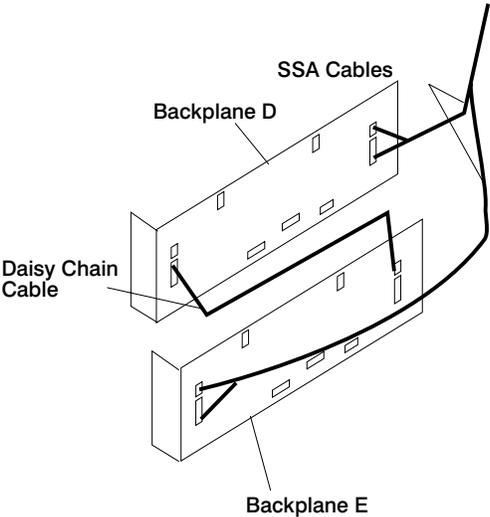


- f. SSA cables connected to backplanes C, D, and E is shown below.

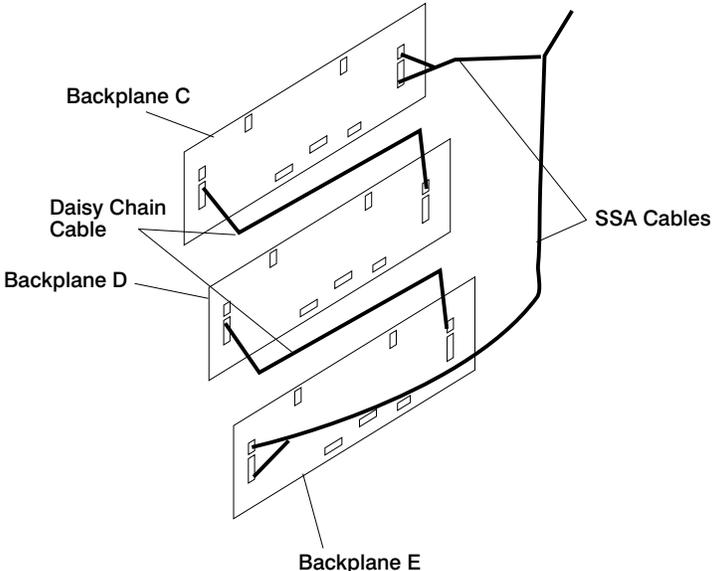

17. Install the backplane at the rear of bank E:


- a. Align the top screw hole on the left side of the backplane with the top screw hole on the left side of bank E, making sure the dimples on the backplane line up with the holes on the frame of the server.
- b. Secure the backplane with one screw.

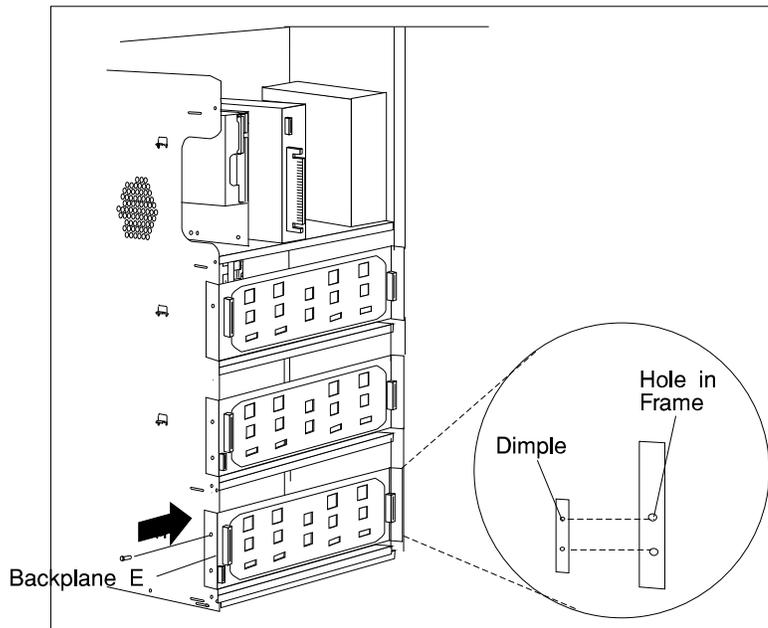

18. Carefully insert and catch the two tabs on the fan assembly into corresponding holes located on the system chassis.

19. Reinstall the fan assembly screws you removed in step 6 on page 5-78.

20. Reconnect the fan assembly cables that you disconnected in step 5 on page 5-78.

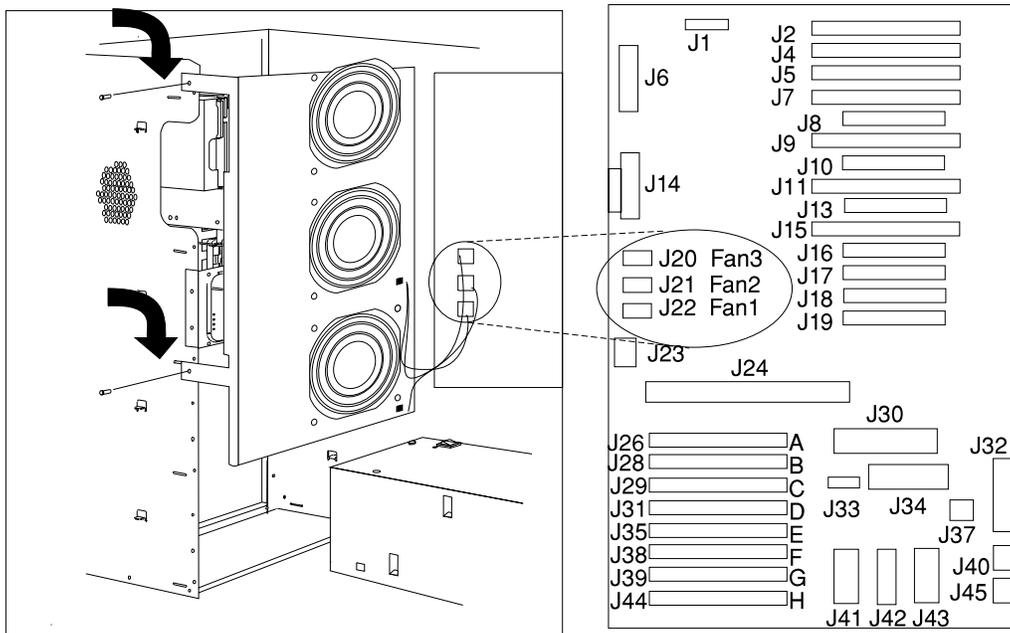


21. Reinstall the CPU card bracket you removed in step 4 on page 5-77.
22. If you have other drives to install, go to page 5-40.
23. If you have other procedures to perform, refer to "Option List" on page 5-16.
24. If you do not have any other procedures to perform, replace the covers as described in "Replacing Both the Front and Side Covers" on page 5-109.

Removing Internal Drives

Where are you removing the drive?

- To remove a disk drive, tape drive, or CD-ROM from bay A or bay B, go to page 5-91.
- To remove a drive from bank C, D, or E, go to page 5-92.

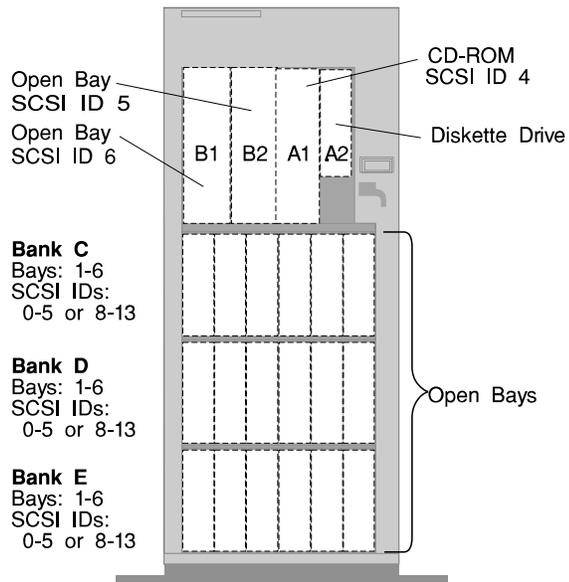

Removing a Disk Drive, Tape Drive, or CD-ROM from Bay A or Bay B

Note: To locate bay A or bay B, see the illustration given on page 5-90.

To remove a drive from bay A or bay B, do the following steps:

1. If you have not already done so, remove the covers as described in “Removing Both the Front and Side Covers” on page 5-10.
2. Locate the drive you want to remove.
3. Slide the drive halfway out of the front of the bay.
4. Disconnect the cables from the back of the drive.
5. If you have difficulty in reaching the cables at the rear of bay A or B, the fan assembly can be removed to allow easier access. Refer to step 7 on page 5-78.
6. Remove the drive from the bay. Store the drive in a safe place.
7. Go to Table A-2 on page A-4 and update the drive information; then return here to determine your next step.
8. If you are removing another internal drive from bay A or bay B, return to step 2.
9. If you are installing another internal drive in bay A or bay B, go to step “Installing a Disk Drive, Tape Drive, or CD-ROM in Bay A or Bay B” on page 5-41.
10. If you removed the fan assembly, reinstall it now. Refer to step 18 on page 5-88.
11. If you have other procedures to perform, refer to “Option List” on page 5-16.
12. If you do not have any other procedures to perform, replace the covers as described in “Replacing Both the Front and Side Covers” on page 5-109.

Removing a SCSI Disk Drive from Bank C, D, or E

Notes:


- To locate banks C, D, and E, see the illustration given on page 5-90.
- You do not have to turn off the server to remove a drive from banks C, D, and E.

The lights on the disk drive provide status of the drives. See “Disk Drive Status LED States” on page 2-19 for a definition of the disk drive status.

Attention: An application procedure unique to your operating system must be followed which logically removes the drive from the system and spins it down. If you remove a drive while it is in use, your server may lose valuable data.



To remove a drive from bank C, D, or E, do the following steps:

1. If you have not already done so, remove the covers as described in “Removing the Front Covers Only” on page 5-6.
2. Locate the drive you want to remove.
3. Ensure that you have selected the correct drive.
4. Press the spin down button on the drive carrier to remove power from the drive. The green LED should flash.
5. Unlock the drive by turning the carrier latch 90 degrees clockwise to the open position.

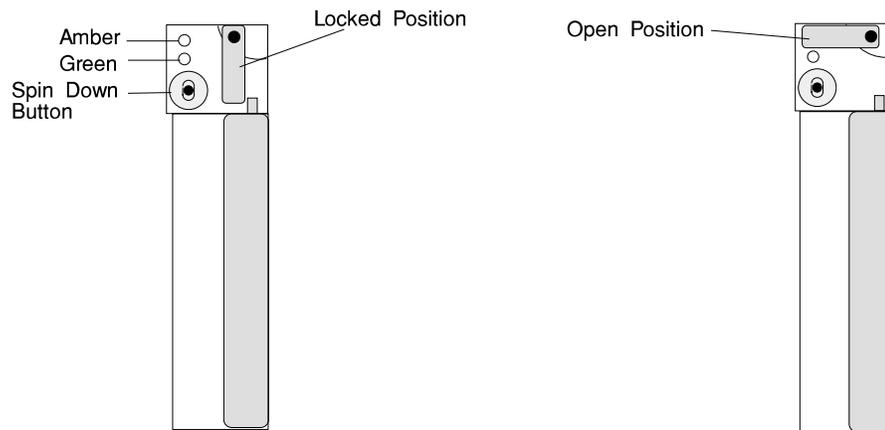

6. Disconnect the drive from the connector on the backplane, by grasping the handle on the drive tray and carefully pulling the drive out of the server. Store the drive in a safe place.

Attention: Handle the disk drive with care as it is very fragile and can be easily damaged if exposed to shock, ESD, or rough handling.

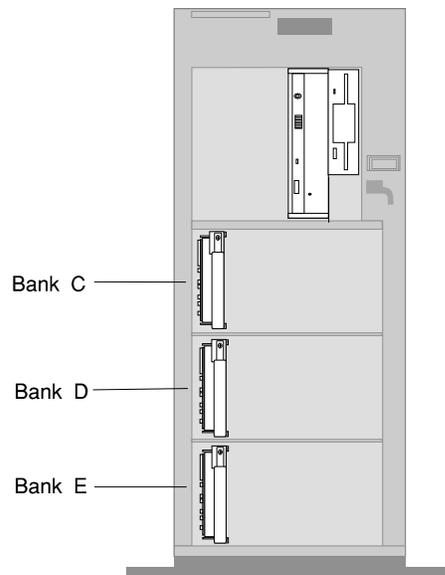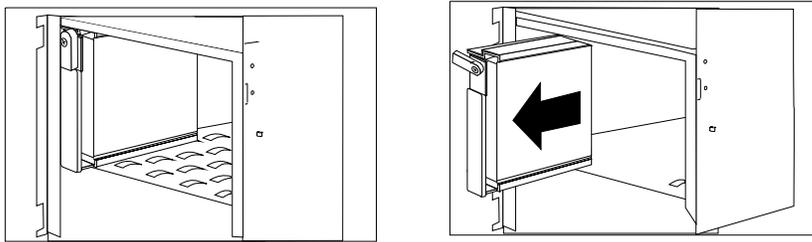

7. If you are removing another SCSI disk drive, return to step 2 on page 5-93.
8. If you are installing another SCSI disk drive in bank C, D, or E, go to “Installing a SCSI Disk Drive in Bank C, D, or E.” on page 5-52.
9. Go to Table A-2 on page A-4 and update the drive information; then return here to determine your next step.
10. If you have other procedures to perform, refer to “Option List” on page 5-16.
11. If you do not have any other procedures to perform, replace the covers as described in “Replacing the Front Covers” on page 5-106.

Removing an SSA Disk Drive from Bank C, D, or E

Notes:



- To locate banks C, D, and E, see the illustration given on page 5-90.
- You do not have to turn off the server to remove a drive from banks C, D, and E.

The lights on the disk drive provide status of the drives. See "Disk Drive Status LED States" on page 2-19 for a definition of the disk drive status.

Attention: An application procedure unique to your operating system must be followed which logically removes the drive from the system and spins it down. If you remove a drive while it is in use, your server may lose valuable data.

To remove a drive from bank C, D, or E, do the following steps:



1. If you have not already done so, remove the covers as described in “Removing the Front Covers Only” on page 5-6.
2. Locate the drive you want to remove.
3. Ensure that you have selected the correct drive (the check LED is flashing).
4. Unlock the drive by turning the carrier latch 90 degrees clockwise to the open position.

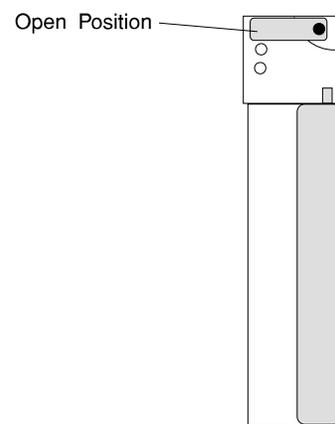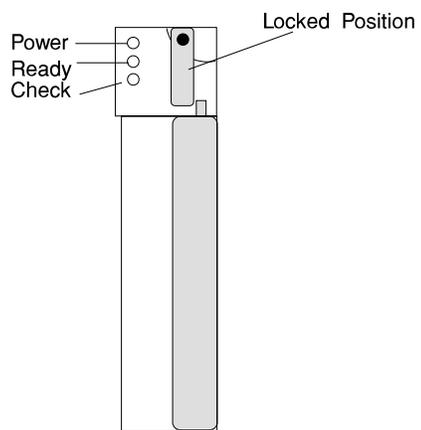

Attention: SSA backplanes must be fully populated. Each backplane connector must have a disk drive or a blank carrier installed at all times. If you remove a disk drive from a bay and do not replace it with another disk drive, you must install a blank carrier in that bay.

5. Disconnect the drive from the connector on the backplane, by grasping the handle on the drive tray and carefully pulling the drive out of the server. Store the drive in a safe place.

Attention: Handle the disk drive with care as it is very fragile and can be easily damaged if exposed to shock, ESD, or rough handling.

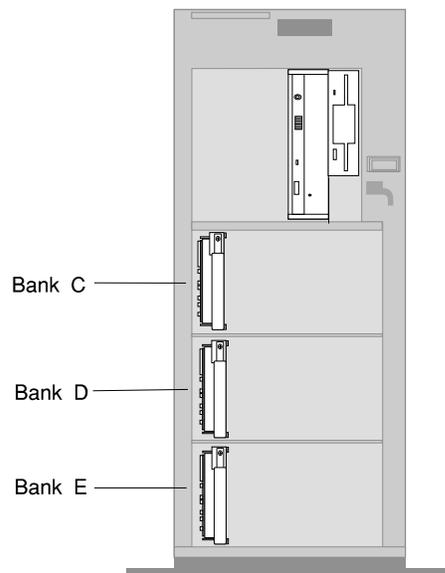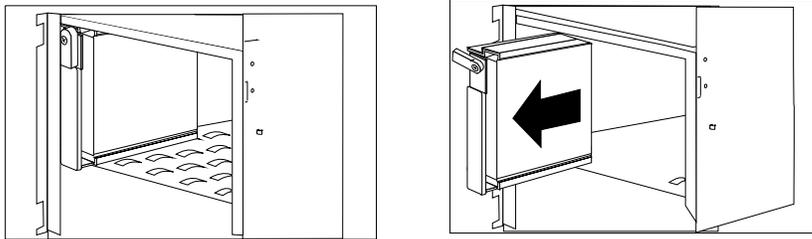


6. If you are removing another SSA disk drive, return to step 2 on page 5-97.
7. If you are installing another SSA disk drive in bank C, D, or E, go to “Installing an SSA Disk Drive in Bank C, D, or E.” on page 5-56.
8. Go to Table A-2 on page A-4 and update the drive information; then return here to determine your next step.
9. If you have other procedures to perform, refer to “Option List” on page 5-16.
10. If you do not have any other procedures to perform, replace the covers as described in “Replacing the Front Covers” on page 5-106.

Installing a Service Processor


1. Refer to the *Service Processor Installation and User's Guide* before installing the service processor.
2. If you have not already done so, remove the covers as described in "Removing Both the Front and Side Covers" on page 5-10.

Attention: Make sure you have unplugged the power cord and the standby power (Power Enabled LED) is Off before installing the service processor.


3. Loosen the three screws (do not remove) and remove the CPU card bracket.

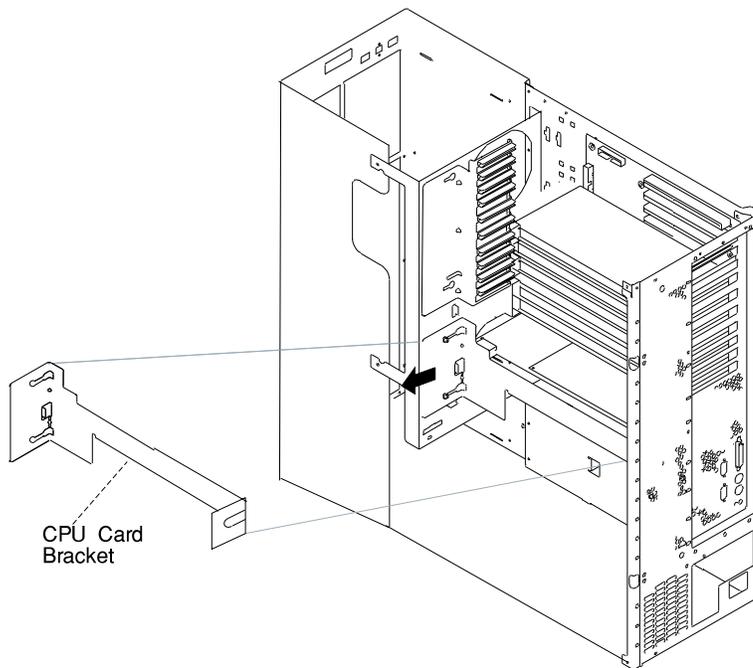

4. Locate the service processor connector.

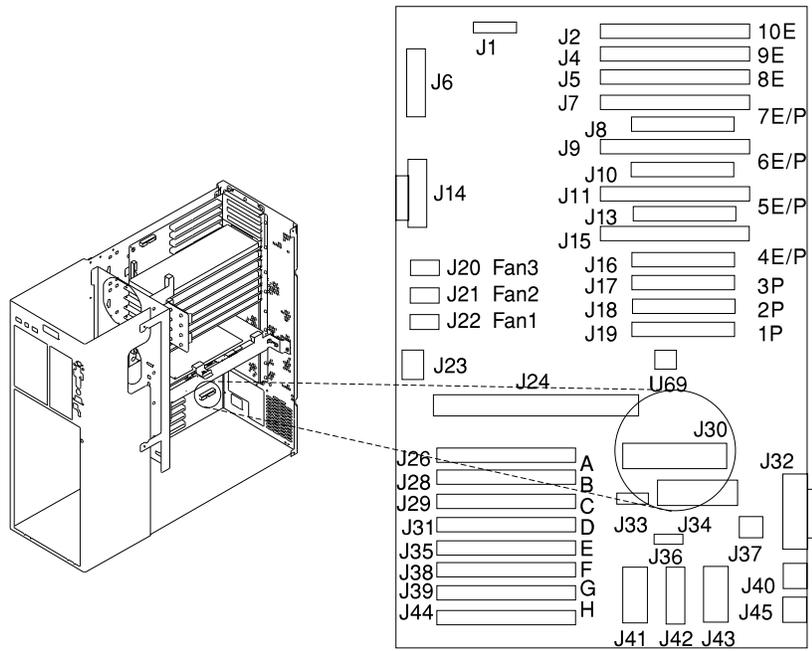

5. Install the service processor.

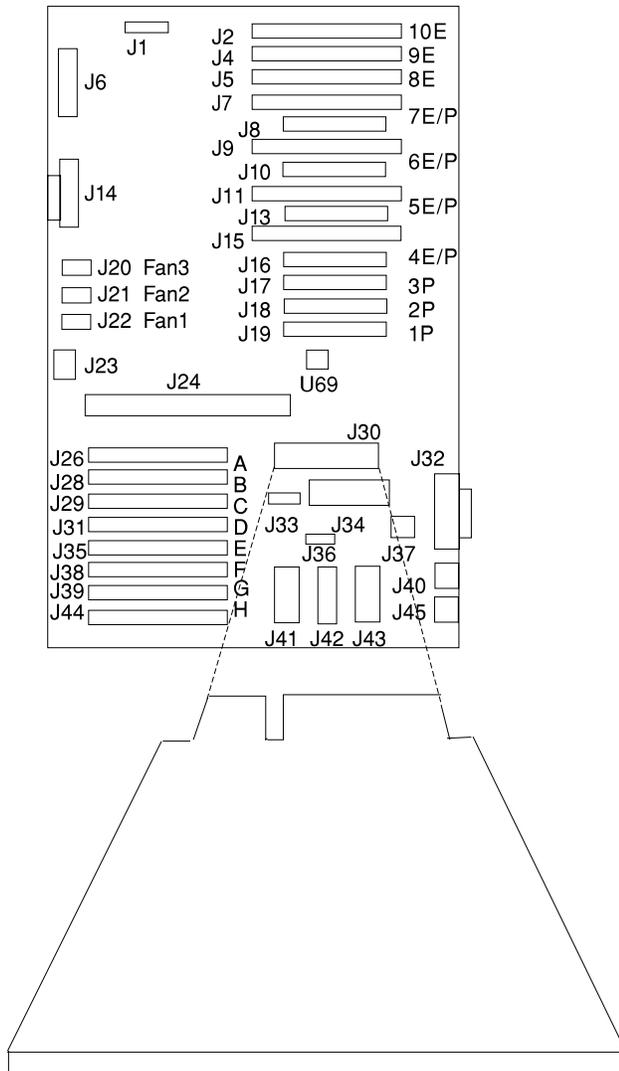

6. Install the CPU card bracket making sure that the service processor is held in place by the CPU card bracket.
7. Tighten the three screws that secure the CPU bracket to the system chassis.
8. If you have other procedures to perform, refer to "Option List" on page 5-16.
9. If you do not have any other procedures to perform, replace the covers as described in "Replacing Both the Front and Side Covers" on page 5-109.
10. Return to the documentation that you received with your service processor to verify proper installation.


Installing a U-Bolt

Before you begin, be sure you have:



- A 19 mm (3/4 in.) U-bolt or wire rope (similar to National Manufacturing No. 3230, STK No. 176-735).
- A security cable.
- A lock, such as a combination lock or padlock.
- Remove the server covers as described in “Removing Both the Front and Side Covers” on page 5-10.

1. Install the U-bolt:


- a. Use a screwdriver to remove the two plastic inserts, if present, from the U-bolt opening in the rear panel.

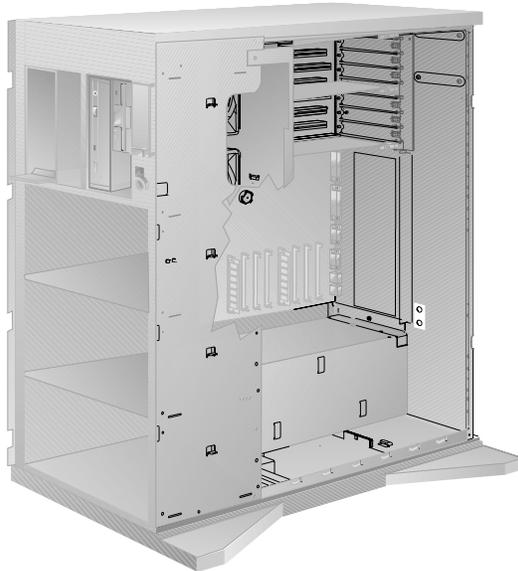

- b. Insert the U-bolt through the holes and secure it in place with the nuts.

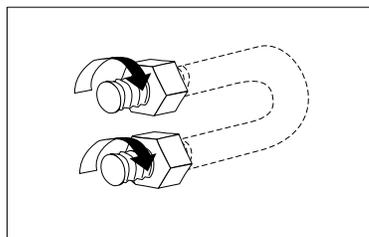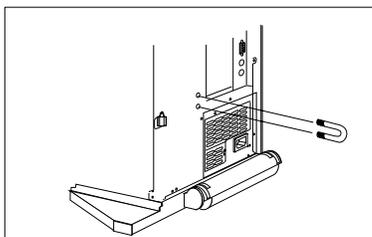

2. Reinstall the server's side and front covers, and attach the cables (see "Replacing Both the Front and Side Covers" on page 5-109).
3. Insert the security cable through the U-bolt. Loop the cable around (or through) an object from which it cannot be removed; then fasten the cable ends together with the lock.

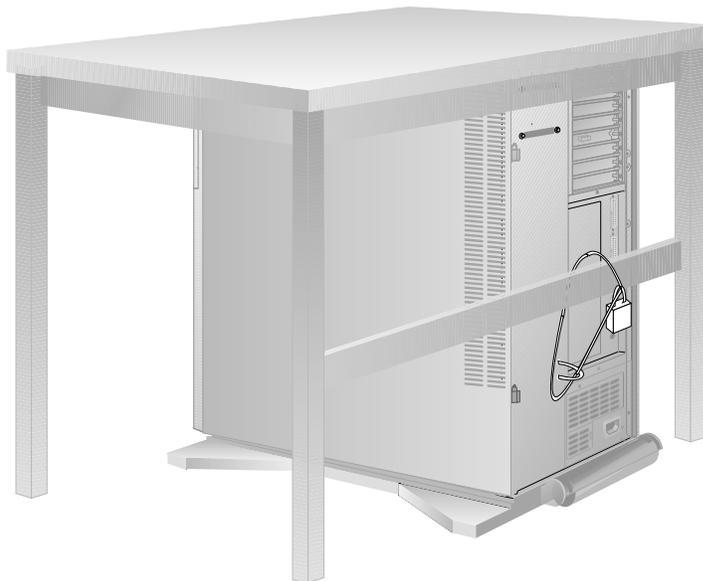


Replacing the Front Covers


1. Reinstall the front cover:

Note: Before installing the front cover, verify that the side cover is installed correctly. If the side cover is not properly installed, the front cover will not align correctly when you attempt to install it.


- a. Align the bottom of the front cover with the bottom of the server.
- b. Fit the front cover's bottom hooks into the grooves located on the bottom of the server.
- c. Make sure the keylock is in the unlocked position.
- d. Pivot the front cover upward and press the top of the cover into the top of the server until they snap together and the latch on the left side catches.

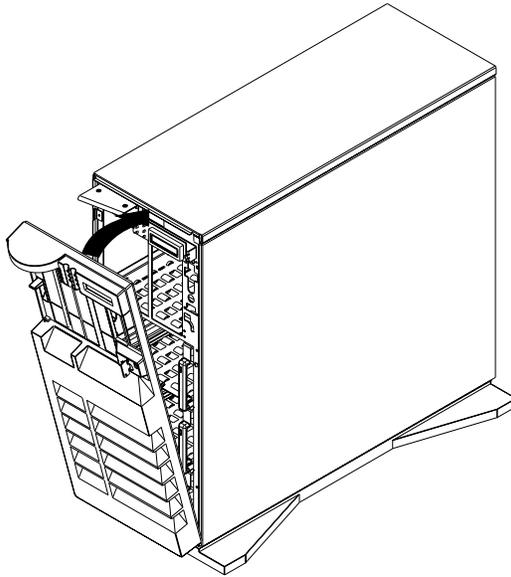


- e. Lock the keylock on the front cover.
- f. Close the latch located on the left side of the front cover.

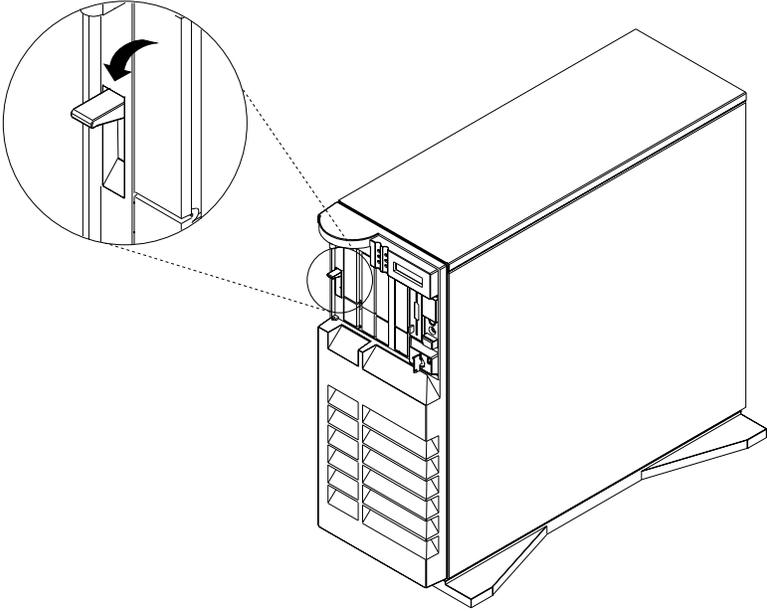

2. Reinstall the door at the front of the server by aligning the pins with the hinges, and sliding the door down.

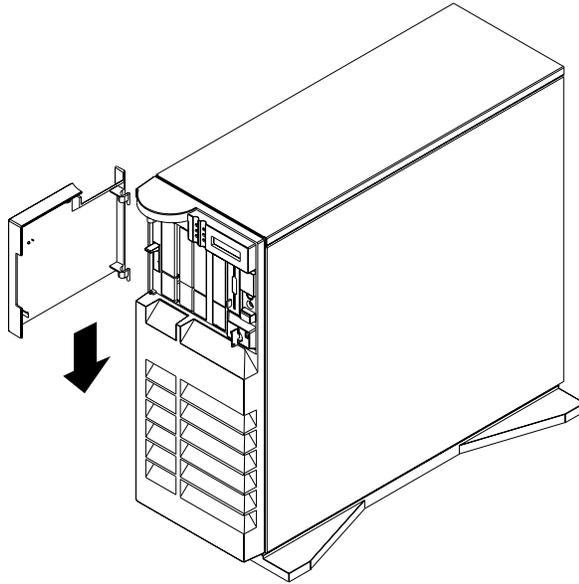


3. Close the door.

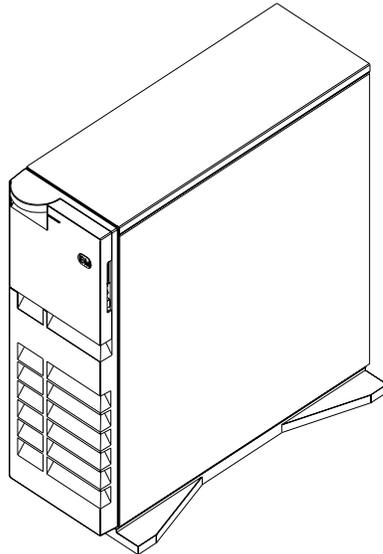

Attention: Be sure to maintain a clearance of at least 51 mm (2 inches) on all sides of the server to allow for air circulation.

Replacing Both the Front and Side Covers


1. Reinstall the side cover:
 - a. Align the pins on the rear of the side cover with the two hinges on the rear of the server. Open the side cover to a 90 degree angle.
 - b. Slide the side cover down.
 - c. Push the side cover to close it.

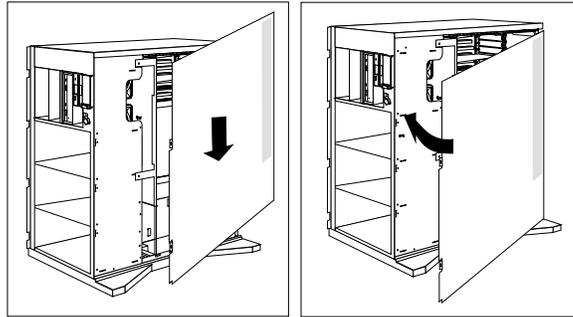


2. Reinstall the front cover:

Note: Before installing the front cover, verify that the side cover is installed correctly. If the side cover is not properly installed, the front cover will not align correctly when you attempt to install it.


- a. Align the bottom of the front cover with the bottom of the server.
- b. Fit the front cover's bottom hooks into the grooves located on the bottom of the server.
- c. Make sure the keylock is in the unlocked position.
- d. Pivot the front cover upward and press the top of the cover into the top of the server until they snap together and the latch on the left side catches.

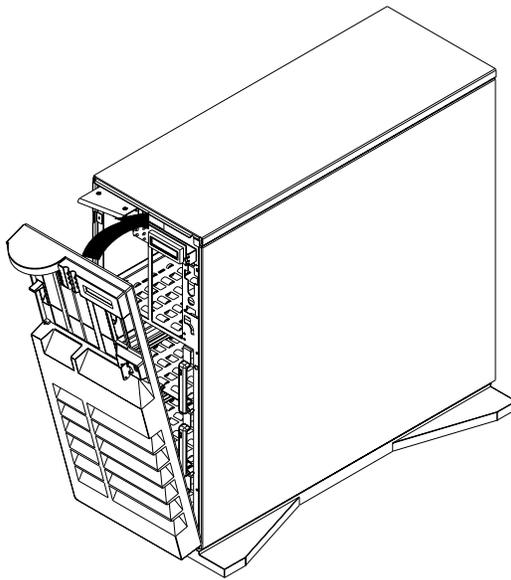


- e. Lock the keylock on the front cover.
- f. Close the latch located on the left side of the front cover.

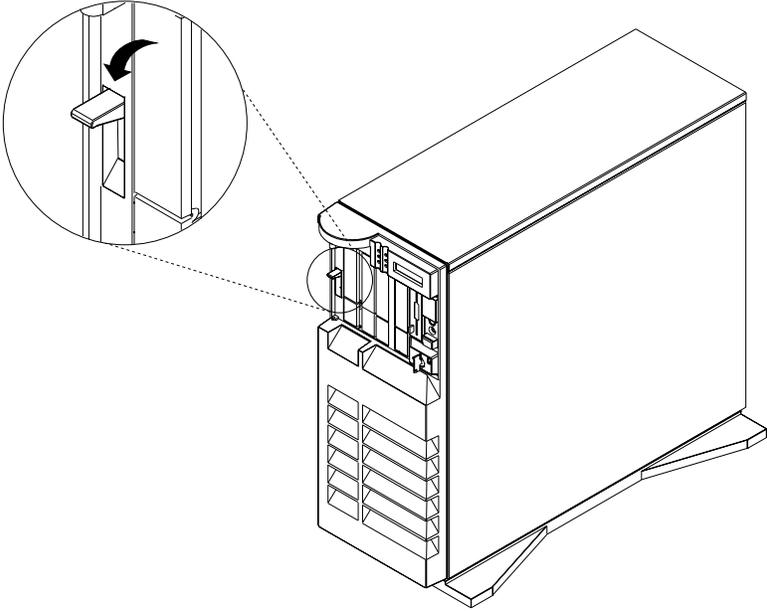

3. Reinstall the door at the front of the server by aligning the pins with the hinges, and sliding the door down.

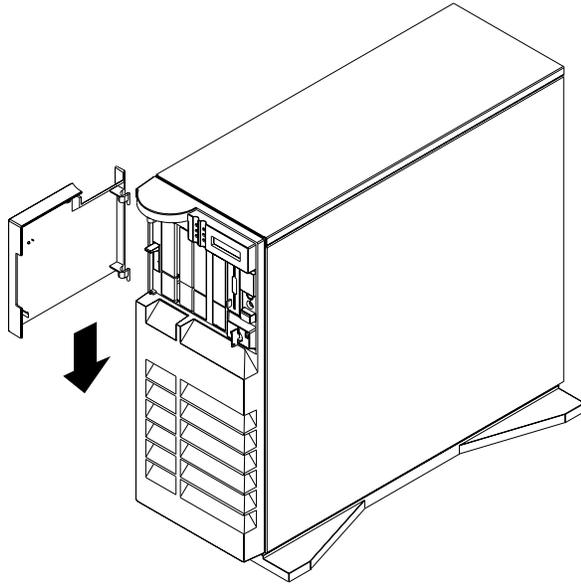


4. Close the door.

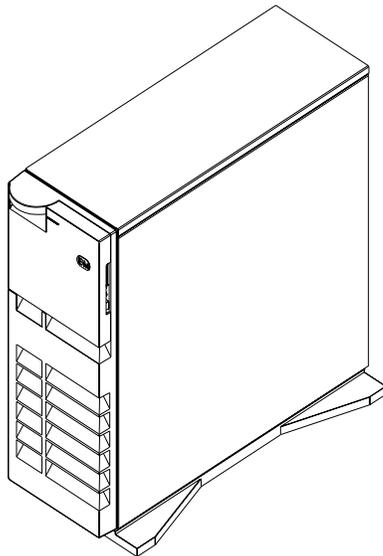

Attention: Be sure to maintain a clearance of at least 51 mm (2 inches) on all sides of the server to allow for air circulation.

5. Connect all cables to the back of the server, then plug all power cords into properly grounded electrical outlets.

Note: If you are in the United Kingdom and have a modem or fax machine attached to your server, reconnect the telephone line *after* you plug in the power cords.

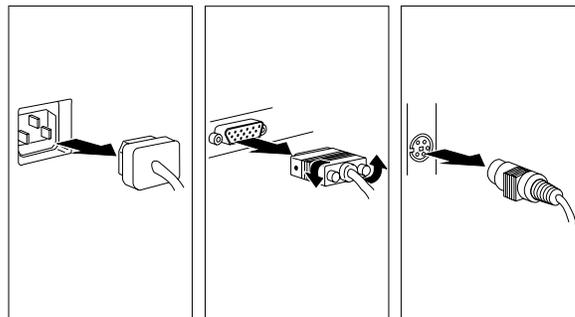

Chapter 6. Using the Standalone and Online Diagnostics

Sources for the Diagnostic Programs

The diagnostics consist of Standalone Diagnostics and Online Diagnostics. Standalone Diagnostics are resident on removable media. They must be booted or mounted before they can be run. If booted, they have no access to the AIX Error Log or the AIX Configuration Data. However, if mounted, they have access to the AIX Error Log and the AIX Configuration Data.

Online Diagnostics, when installed, are resident with AIX on the disk or server. They can be booted in single user mode (referred to as service mode), run in maintenance mode (referred to as maintenance mode), or run concurrently (referred to as concurrent mode) with other applications. They have access to the AIX Error Log and the AIX Configuration Data.

Standalone and Online Diagnostics Operating Considerations

The following items identify some things to consider before using the diagnostics.

- Run Online Diagnostics in Service Mode when possible, unless otherwise directed. The Online Diagnostics perform additional functions, compared to Standalone Diagnostics.
- When running Online Diagnostics, device support for some devices may not have been installed. If this is the case, that device will not appear in the resource list.
- When running Standalone Diagnostics, device support for some devices may be contained on supplemental diagnostic media. If this is the case, the device will not appear in the resource list when running diagnostic unless the supplemental media has been processed.
- Support for some tty terminals is optionally installed. If you attach a tty terminal to a system to run diagnostics beware that it may not work properly since the AIX support for the terminal may not be installed.

Selecting a Console Display

When you run Standalone Diagnostics and under some conditions Online Diagnostics, you need to select the console display. The diagnostics display instructions on any graphics display and the terminal attached to the S1 port.

Identifying the Terminal Type to the Diagnostics Programs

Note: This is a different function than selecting a console display.

When you run diagnostics, the diagnostics must know what type of terminal you are using. If the terminal type is not known when the FUNCTION SELECTION menu is displayed, the diagnostics do not allow you to continue until a terminal is selected from the DEFINE TERMINAL option menu. Select lft for adapter-attached displays.

Undefined Terminal Types

If an undefined terminal type from the DEFINE TERMINAL option menu is entered, the menu will prompt the user to enter a valid terminal type, and the menu will be redisplayed until either a valid type is entered or the user exits the DEFINE TERMINAL option.

Resetting the Terminal: If the user enters a terminal type that is valid (according to the DEFINE TERMINAL option menu) but is not the correct type for the ASCII terminal being used, difficulty may be encountered in reading the screen, using the function keys or the Enter key. These difficulties can be bypassed by pressing Ctrl-C to reset the terminal. The screen display which results from this resetting action varies with the mode in which the system is being run:

- Online Normal or Maintenance Mode - The command prompt appears.
- Standalone Mode or Online Service Mode -The terminal type will be reset to "dumb", the Diagnostic Operating Instruction panel will be displayed, and the user will be required to go through the DEFINE TERMINAL process again.

Running Standalone Diagnostics

Consider the following when you run Standalone Diagnostics:

- The diagnostic disc must remain in the CD-ROM drive for the entire time that diagnostics are executing.
- The diagnostic CD-ROM disc cannot be ejected from the CD-ROM drive once the diagnostic programs have loaded. The disc can only be ejected after the system has been powered-Off and then powered-On (Standalone mode) or after the diagnostics program has terminated (Online concurrent mode). The disc must be ejected prior to the system attempting to load the diagnostic programs again.
- The CD-ROM drive from which diagnostics were loaded cannot be tested.
- The SCSI adapter (or circuitry) controlling the CD-ROM drive from which diagnostics were loaded cannot be tested.

Running Online Diagnostics

Consider the following when you run the Online Diagnostics from a server or a disk:

- The diagnostics cannot be loaded and run from a disk until the AIX operating system has been installed and configured. After the installation of the AIX operating system, all three modes of operation are available.
- The diagnostics cannot be loaded on a system (client) from a server if that system is not set up to IPL from a server over a network, or the server has not been setup to send a service mode IPL of the diagnostics. When the system is set up to IPL from a server, the diagnostics are executed in the same manner as they are from disk.
- If the diagnostics were loaded from disk or a server, you must shutdown the AIX operating system before powering the system unit off to prevent possible damage to disk data. This is done in one of two ways:
 - If the diagnostic programs were loaded in Standalone mode, press the F3 key until DIAGNOSTIC OPERATING INSTRUCTIONS displays; then follow the displayed instructions to shutdown the AIX operating system.
 - If the diagnostic programs were loaded in maintenance or concurrent mode, enter the shutdown -F command.
- Under some conditions the system may stop, with instructions displayed on attached displays and terminals. Follow the instructions to select a console display.

Running the Diagnostics from a tty terminal

Consider the following when you run diagnostics using a tty-type terminal as the console display:

- See the operator manual for your type of tty terminal to find the key sequences you need to respond to the diagnostics. For the 3151, refer to the 3151 ASCII Display Station Guide to Operations, form number GA18-2633. For the 3164, refer to the 3164 ASCII Color Display Station Description, form number GA18-2617.
- When the diagnostics present display information through the S1 port, certain attributes are used. These attributes are set as if the diagnostics were using a 3161 display terminal. The following tables list attributes for the 3161 ASCII Display Terminal and for two other ASCII display terminals commonly used with the system.
- If you have a tty terminal other than a 3151, 3161 or 3164 attached to the S1 port, your terminal may have different names for the attributes. Use the attribute descriptions in the following tables to determine the settings for your terminal.

General Attributes Always Required

The following general attributes are the default settings for the diagnostics. Be sure your terminal is set to these attributes.

Note: These attributes should be set before the diagnostics are loaded.

Refer to the following table.

General Setup Attributes	3151 /11/31 /41 Settings	3151 /51/61 Settings	3161 /3164 Settings	Description
Machine mode	3151	3151	3161 or 3164	The diagnostics are set to emulate use of the 3161 ASCII Display Terminal. If your terminal can emulate a 5085, 3161 or 3164 terminal, use the following attribute settings. Otherwise, refer to your operator's manual, compare the following attribute descriptions with those of your terminal, and set your attributes accordingly.
Generated Code Set		ASCII		
Screen	Normal	Normal		Uses the EIA-232 interface protocol.
Row and column	24 x 80	24 x 80		Uses the EIA-232 interface protocol.
Scroll	Jump	Jump	Jump	When the last character on the bottom line is entered, the screen moves down one line.
Auto LF	Off	Off	Off	For the "On" setting, pressing the Return key moves the cursor to the first character position of the next line. For the "Off" setting, pressing the Return key moves the cursor to the first character position of the current line. The CR and LF characters are generated by the New line setting.

General Setup Attributes	3151 /11/31 /41 Settings	3151 /51/61 Settings	3161 /3164 Settings	Description
CRT saver	Off	Off	10	The "10" setting causes the display screen to go blank if there is no activity for 10 minutes. When the system unit sends data or a key is pressed, the display screen contents are displayed again.
Line wrap	On	On	On	The cursor moves to the first character position of the next line in the page after it reaches the last character position of the current line in the page.
Forcing insert	Off	Off		
Tab	Field	Field	Field	The column tab stops are ignored, and the tab operation depends on the field attribute character positions.
Trace			All	Both inbound data (data to the system unit) and outbound data (data from the system unit) to and from the main port can be transferred to the auxiliary port without disturbing communications with the system unit when the Trace key is pressed.

Additional Communication Attributes

The following communication attributes are for the 3151, 3161, and 3164 terminals.

Communication Setup Attributes	3151 /11/31 /41 Settings	3151 /51/61 Settings	3161 /3164 Settings	Description
Operating mode	Echo	Echo	Echo	Data entered from the keyboard on the terminal is sent to the system unit for translation and then sent back to the display screen. Sometimes called conversational mode.
Line speed	9600 bps	9600 bps	9600 bps	Uses the 9600 bps (bits per second) line speed to communicate with the system unit.
Word length (bits)	8	8	8	Selects eight bits as a data word length (byte).
Parity	No	No	No	Does not add a parity bit, and is used together with the word length attribute to form the 8-bit data word (byte).
Stop bit	1	1	1	Places a bit after a data word (byte).
Turnaround character	CR	CR	CR	Selects the carriage return (CR) character as the line turnaround character.
Interface	EIA-232	EIA-232	EIA-232	Uses the EIA-232 interface protocol.
Line control	IPRTS	IPRTS	IPRTS	Uses the permanent request to send' (IPRTS) signal to communicate with system unit.
Break signal (ms)	500	500	500	The terminal sends a break signal' to the system unit within 500 ms after the Break key is pressed.
Send null suppress	On	On		Trailing null characters are not sent to the system unit.

Communication Setup Attributes	3151 /11/31 /41 Settings	3151 /51/61 Settings	3161 /3164 Settings	Description
Send null			On	Trailing null characters are sent to the system unit.
Response delay (ms)	100	100	100	The terminal waits for 100ms for the system unit to respond.

Additional Keyboard Attributes

The following keyboard attributes are for the keyboard attached to the 3151, 3161, and 3164 terminals.

Keyboard Setup Attributes	3151/11/31/41 Settings	3151/51/61 Settings	3161/3164 Settings	Description
Enter	Return	Return	Return	The Enter key functions as the Return key.
Return	New line	New line	New line	The cursor moves to the next line when the Return key is pressed.
New line	CR	CR	CR	The Return key generates the carriage return (CR) and the line feed (LF) characters. The line turnaround occurs after the CR and LF characters are generated.
Send	Page	Page	Page	The contents of the current page are sent to the system unit when the Send key is pressed.
Insert character	Space	Space	Space	A blank character is inserted when the Insert key is pressed.

Additional Printer Attributes

The following printer attributes are for a printer attached to the 3151, 3161, and 3164 terminals.

Printer Setup Attributes	3151/11/ 31/41 Settings	3151 /51/61 Settings	3161 /3164 Settings	Description
Line speed	9600	9600	9600	Uses 19200 or 9600 bps (bits per second) line speed to communicate with the system unit.
Word length (bits)	8	8	8	Selects eight bits as a data word length (byte).
Parity	Even	Even	No	
Stop bit	1	1	1	Places a bit after a data word (byte).
Characters	ALL	ALL		
Line end			CR-LF	
Print			Viewport	
Print EOL			Off	
Print null			Off	

Online Diagnostics Mode of Operation

The Online diagnostics can be run in three modes:

- Service Mode allows checking of most system resources.
- Concurrent Mode allows the normal system functions to continue while selected resources are being checked.
- Maintenance Mode allows checking of most system resources

Service Mode

Service mode provides the most complete checkout of the system resources. This mode also requires that no other programs be running on the system. All system resources except the SCSI adapter, and the disk drives used for paging can be tested. However, note that system memory and the processor are only tested during POST.

Error log analysis is done in service mode when you select *the* Problem Determination option on the DIAGNOSTIC MODE SELECTION menu.

Running the Online Diagnostics in Service Mode (Service Mode IPL)

To run Online diagnostics in service mode, take the following steps:

1. Stop all programs including the AIX operating system (get help if needed).
2. Remove all tapes, diskettes, and CD-ROM discs.
3. Turn the system unit's power off.
4. Turn the system unit's power on.
5. After the first POST indicator appears on the system unit's console, press F6 on the direct attached keyboard or 6 on the tty keyboard to indicate that diagnostics are to be loaded.

Note: The term "POST indicator" refers to the ICONS (graphic display) or device mnemonics (ASCII terminal) that are displayed while the POST are executing.
6. Enter any requested password.
7. Follow any instructions to select a console.
8. After the diagnostic controller loads, DIAGNOSTIC OPERATING INSTRUCTIONS appear on the console display.
9. Follow the displayed instructions to checkout the desired resources.
10. When testing is complete; use the F3 key to return to the DIAGNOSTIC OPERATING INSTRUCTIONS.
11. Press the F3 key (from a defined terminal) or press 99 (for an undefined terminal) to shutdown the diagnostics before turning off the system unit.

Note: Pressing the F3 key (from a defined terminal) produces a "Confirm Exit" popup menu which offers two options: continuing with the shutdown by pressing F3; or returning to diagnostics by pressing Enter.

For undefined terminals, pressing 99 will produce a full screen menu which offers two options: continuing with the shutdown by pressing 99 and then Enter; or returning to diagnostics by pressing Enter.

Concurrent Mode

Concurrent mode provides a way to run Online diagnostics on some of the system resources while the system is running normal system activity.

Because the system is running in normal operation, some of the resources cannot be tested in concurrent mode. The following resources cannot be tested in concurrent mode:

- SCSI adapters connected to paging devices
- The disk drive used for paging
- Some display adapters
- Memory
- Processor.

There are three levels of testing in concurrent mode:

- The **share-test level** tests a resource while the resource is being shared by programs running in the normal operation. This testing is mostly limited to normal commands that test for the presence of a device or adapter.
- The **sub-test level** tests a portion of a resource while the remaining part of the resource is being used in normal operation. For example, this test could test one port of a multiport device while the other ports are being used in normal operation.
- The **full-test level** requires the device not be assigned to or used by any other operation. This level of testing on a disk drive may require the use of the **varyoff** command. The diagnostics display menus to allow you to vary off the needed resource.

Error log analysis is done in concurrent mode when you select *the* Problem Determination option on the DIAGNOSTIC MODE SELECTION menu.

To run the Online diagnostics in concurrent mode you must be logged onto the AIX operating system and have proper authority to issue the commands (if needed, get help).

The **diag** command loads the diagnostic controller and displays the Online diagnostic menus.

Running the Online Diagnostics in Concurrent Mode

To run Online diagnostics in concurrent mode, take the following steps:

- Log on to the AIX operating system as root or superuser.
- Enter the diag command.
- When the DIAGNOSTIC OPERATING INSTRUCTIONS are displayed, follow the instructions to check out the desired resources.

- When testing is complete; use the F3 key to return to the DIAGNOSTIC OPERATING INSTRUCTIONS. Then press the F3 key again to return to the AIX operating system prompt. Be sure to vary on any resource you had varied to off.
- Press the Ctrl-D key sequence to log off from root or superuser.

Maintenance Mode

Maintenance mode runs the Online diagnostics using the customer's version of the AIX operating system. This mode requires that all activity on the AIX operating system be stopped so the Online diagnostics have most of the resources available to check. All of the system resources except the SCSI adapters, memory, processor, and the disk drive used for paging can be checked.

Error log analysis is done in maintenance mode when you select *the Problem Determination* option on the *DIAGNOSTIC MODE SELECTION* menu.

The **shutdown -m** command is used to stop all activity on the AIX operating system and put the AIX operating system into maintenance mode. Then the **diag** command is used to invoke the diagnostic controller so you can run the diagnostics. After the diagnostic controller is loaded, follow the normal diagnostic instructions.

Running the Online Diagnostics in Maintenance Mode

To run the Online diagnostics in maintenance mode you must be logged on to the customer's version of the AIX operating system as *root* or *superuser* and use the **shutdown -m** and **diag** commands. Use the following steps to run the Online diagnostics in maintenance mode:

1. Stop all programs except the AIX operating system (get help if needed).
2. Log onto the AIX operating system as *root* or *superuser*.
3. Enter the **shutdown -m** command.
4. When a message indicates the system is in maintenance mode, enter the **diag** command.

Note: It may be necessary to set *TERM* type again.

5. When *DIAGNOSTIC OPERATING INSTRUCTIONS* is displayed, follow the displayed instructions to checkout the desired resources.
6. When testing is complete; use the F3 key to return to *DIAGNOSTIC OPERATING INSTRUCTIONS*. Then press the F3 key again to return to the AIX operating system prompt.
7. Press Ctrl-D to log off from *root* or *superuser*.

Standalone Diagnostic Operation

Standalone Diagnostics provide a method to test the system when the Online Diagnostics are not installed and a method of testing the disk drives and other resources that can not be tested by the Online Diagnostics.

Error Log Analysis is not done by the Standalone Diagnostics.

If running from CD-ROM, the CD-ROM drive and the SCSI controller that controls it cannot be tested by the Standalone Diagnostics.

Running the Standalone Diagnostics

To run Standalone Diagnostics in service mode, take the following steps:

1. Stop all programs including the AIX operating system (get help if needed).
2. Remove all tapes, diskettes, and CD-ROMs.
3. Turn the system unit's power off.
4. Set the key mode switch to the service position.
5. Turn the system unit's power on.
6. Insert the diagnostic media drive.
7. When the keyboard POST indicator appears, press the F5 key on the direct attached keyboard, or the number 5 key on the tty keyboard.
8. Enter any requested passwords.
9. Follow any instruction to select the console.
10. After the diagnostic controller loads, DIAGNOSTIC OPERATING INSTRUCTIONS appear on the console display.
11. Follow the displayed instructions to checkout the desired resources.
12. When testing is complete; use the F3 key to return to the DIAGNOSTIC OPERATING INSTRUCTIONS.

General Information About Multiple Systems

This chapter presents guideline information for anyone needing to run the diagnostic programs on a system unit that is attached to another system. These guidelines are intended for both the operator of the system and the service representative.

This guideline is presented by adapter type or by system configuration type.

These considerations and actions are not detailed step-by-step instructions, but are used to ensure that you have considered the attached system before you run diagnostics on this system unit.

You are directed to the detailed procedures for the various activities as needed.

These guidelines generally present considerations for the following:

- Starting and stopping the communications with the other system.
- Considerations before running diagnostics on the system.
- Analyzing the error log information.
- Using the wrap plugs with the diagnostics.

When this system unit is attached to another system, be sure you isolate this system unit before stopping the operating system or running diagnostic programs. Some system cabling changes (such as installing wrap plugs or removing a device from the configuration) may require action by the operator of the attached system before making the cabling changes on this system.

High-Availability SCSI

A high-availability SCSI configuration consists of two system units or CPU drawers connected to a common set of SCSI devices. The configuration provides high-availability because either system unit or CPU drawer can continue to access the common devices while the other system is unavailable.

The actions needed to isolate a particular system unit or device from the configuration depends on the software controlling the systems and devices. Therefore, be sure you use the documentation with the software to prepare the configuration before turning a system unit or device off.

High-Availability Cabling

Refer to *IBM RS/6000 Adapter, Device, and Cable Information for Multiple Bus Systems*.

Diagnostic Summary

Memory and Processor Testing

- Memory and Fixed-Point Processors are only tested during POST.
- A complete memory test is run during POST.
- The POST will only halt and report problems that prevent the system from booting.
- All other problems are logged into Residual Data and are only analyzed and reported if the Base System or Memory Diagnostic is run.
- The Base System Diagnostic also tests the Floating Point Processor.

Residual Data Analysis

Residual Data is only analyzed if the Base System or Memory Diagnostic is run.

- Residual Data Analysis report problems that are logged by ROS (firmware) during boot.

Error Log Analysis

- Error Log Analysis is analysis of the AIX Error Log.
- Error Log Analysis is part of the diagnostic applications and is invoked by selecting a device from the DIAGNOSTIC SELECTION menu, by using the **diag** command, or selecting the Run Error Log Analysis task.

- Error Log Analysis is only preformed when running online diagnostics.
- Error Log Analysis is NOT preformed when running from removable media except for mounted CD-ROM.
- Error Log Analysis will only report problems if the errors have reached defined thresholds. Thresholds can be from 1 to 100 depending upon the error.
- Permanent errors do not necessarily mean a part should be replaced.
- Automatic Error Log Analysis (diagela) provides the capability to do error log analysis whenever a permanent hardware error is logged.

Diagnostic Modes: The Diagnostic Modes consist of Problem Determination Mode and System Verification Mode. The only difference between the two modes is one performs ELA and the other does not.

- Problem Determination Mode will run all tests unless the resource is being used. If a problem is not found, then Error Log Analysis is performed.
- In Problem Determination Mode, Error Log Analysis is performed even if a resource is being used.
- A screen will always appear informing the user that the resource needs to be freed if a resource is being used.
- System Verification Mode does not do ELA. This mode should be run when doing a repair verification.
- Residual Data Analysis is done in either mode.

4.2 Diagnostic Changes

Tasks are operations that can be performed on a resource. Running Diagnostics, Displaying VPD, or Formatting a Device, are examples of tasks. Service Aid functionality should also be considered a task.

Resources are devices used by the system unit. Diskette Drive, and CD ROM Drive are examples of resources.

The FUNCTION SELECTION menu was enhanced with two new selections allowing either all resources, or all tasks to be displayed. When Task Selection is made and a task has been selected a list of supporting resources will be displayed. Alternatively, when Resource Selection is made, and a resource or group of resources are selected, a list of supporting common tasks are displayed. Also, to aid with backward compatibility the FUNCTION SELECTION menu contains 'Diagnostic' and 'Advanced Diagnostic'.

The 'Display or Change Diagnostic Run Time Options' task can be used to set advanced mode diagnostics, looping capability, and ELA mode when running diagnostics from the Task Selection menu.

The following sections describe the 4.2 Diagnostic Subsystem.

diag Command Line Options:

COMMAND LINE OPTIONS:

diag Command line flags are as follows:

- a Perform missing device analysis.
- c Machine is unattended. No prompts should be displayed.
- d resource Test the named resource.
The "resource" parameter is the /dev entry.
- e Error Log Analysis.
Checks the error log for device specified in "resource"
of the -d option.
- s Test the system.
- A Advanced Diagnostics
- B Base system test
- S Test the Test Suite Group
- v System Verification mode.
 - 1 - Base system
 - 2 - I/O Devices
 - 3 - Async Devices
 - 4 - Graphics Devices
 - 5 - SCSI Devices
 - 6 - Storage Devices
 - 7 - Commo Devices
 - 8 - Multimedia Devices

Entering `diag -h` from the command line prints out an appropriate usage statement.

Default execution mode is non-advanced mode.

Location Codes

The basic format of the system unit's location code is:

```
AB-CD-EF-GH    non-SCSI
                G,H   SCSI
```

For planars, cards, and non-SCSI devices the location code is defined as:

```
AB-CD-EF-GH
|   |   |   |
|   |   |   | Device/FRU/Port ID
|   |   |   | Connector ID
|   |   |   | Slot or Adapter Number
|   |   |   | Bus Type
```

AB identifies a bus type, CD identifies a slot or adapter number, EF a connector identifier, and GH is a port identifier, address, memory module, device, or FRU. Adapters/cards are identified with just AB-CD.

The possible values for AB are as follows:

```
00    for processor bus
01    for ISA buses
04    for PCI buses
05    for PCMCIA buses (not supported)
```

The possible values for CD depend on the adapter or card. For pluggable adapters/cards this is a two digit slot number in the range from 01 to 99. However, in the case of ISA cards these numbers do not actually correspond to the physical slot numbers. They are simply based on the order the ISA cards are defined/configured either by SMIT or the ISA Adapter Configuration Service Aid.

For integrated adapters the first character in CD is a letter in the range from A to Z. This letter is based on the order that the integrated adapters are defined in residual data and ensures unique location codes for the integrated adapters. The D is set to 0.

EF is the Connector ID. It is used to identify the adapter connector that a resource is attached too.

GH is a port identifier, address, memory module, device, or FRU. It identifies a port, device, or a FRU. GH has several meanings depending upon the resource type. They are:


- For memory cards GH defines a memory module. Values for GH are 1 through 16.

For systems that have memory modules that plug directly into the system planar the location code is 00-00-00-GH where GH is the memory module slot. For system that have memory cards with memory modules, the location code is 00-CD-EF-GH where CD is the card slot and GH is the memory module slot.

- For caches GH defines the cache. Values for GH are 01 through 16.
- For PCMIAs GH defines the PCMIA. Values for GH are 01 through 16.
- For async devices GH defines the port on the fanout box. Values are 00 to 15.
- For a diskette drive H defines which diskette drive 1 or 2. G is always 0.
- For all other devices GH is equal to 00.

For integrated adapters, EF-GH will be the same as the definition for a pluggable adapter. For example, the location code for a diskette drive will be 01-A0-00-00.

For SCSI the Location Code is defined as:

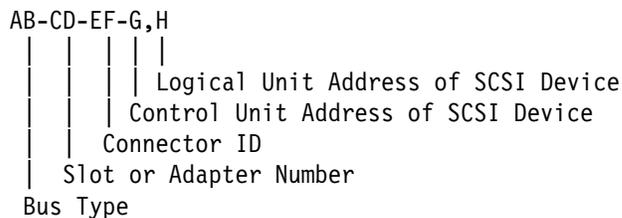

Where AB-CD-EF are the same as non-SCSI devices.

G defines the control unit address of the device. Values of 0 to 15 are valid.

H defines the logical unit address of the device. Values of 0 to 255 are valid.

Examples:

Processor-PCI bus	
00-00	PCI bus
Memory module in system planar	
00-00-00-01	
Memory module in card	
00-0A-00-01	
Integrated PCI adapters for	
04-A0	ISA bus (Integrated PCI-ISA bridge)
04-B0	Secondary PCI bus (Integrated PCI-PCI bridge)
04-C0	Integrated PCI SCSI controller
Non-integrated PCI adapters	
04-01	Any PCI card in slot 1
04-02	Any PCI card in slot 2
Integrated ISA adapters	
01-A0	Diskette adapter
01-B0	Parallel port adapter
01-C0	Serial port 1 adapter
01-D0	Serial port 2 adapter
01-E0	Keyboard adapter
01-F0	Mouse adapter
Non-integrated ISA adapters	
01-01	First ISA card defined/configured
01-02	Second ISA card defined/configured
01-03	Third ISA card defined/configured
01-04	Fourth ISA card defined/configured
Device attached to SCSI controller	
04-C0-01-4,0	Device attached to Integrated PCI SCSI controller

Chapter 7. Introduction to Tasks and Service Aids

The AIX Diagnostic Package contains programs that are referred to as either Tasks or Service Aids. These programs are accessed differently depending on the level of AIX diagnostics installed. If you are running AIX Diagnostics version 4.2 or later, the programs are called Tasks. Tasks perform a given function; while service aids act as a subset of the chosen task.

To perform a Task, use the following from the Function Selection Menu:

- Task Selection (Diagnostics, Advanced Diagnostics, Service Aids, etc).

This selection lists the tasks supported by these procedures. Once a task is selected, a resource menu may be presented showing all resources supported by the task.

If you are running AIX Diagnostics prior to and including version 4.1.x, the programs are called Service Aids.

To perform a Service Aid, use the following from the Function Selection Menu:

- Service Aids

This selection looks at the machine configuration, exercises external interfaces, formats media, looks at past diagnostic results, controls what resources are tested, checks out media, etc.

Tasks

Service Aids are invoked via a task selection from the following list:

Note:

- Add or Delete Drawer Configuration
- Add Resource to Resource List
- AIX Shell Prompt
- Backup and Restore Media
- Change Hardware Vital Product Data
- Check Spare Sectors Service
- Configure Dials and LPFKeys
- Configure ISA Adapters
- Configure Ring Indicate Power On

- Configure Service Processor
- Create Customized Diagnostic Configuration Diskette
- Delete Resource from Resource List
- Disk Maintenance
- Disk Media
- Display/Alter Bootlist
- Display Configuration and Resource List
- Display Hardware Error Report
- Display Hardware Vital Product Data
- Display Machine Check Error Log
- Display or Change Diagnostic Run Time Options
- Display Previous Diagnostic Results
- Display Resource Attributes
- Display Service Hints
- Display Software Product Data
- Display Test Patterns
- Generic Microcode Download
- Local Area Network Analyzer
- Microcode Download
- Periodic Diagnostics
- PCI RAID Physical Disk Identify
- Process Supplemental Media
- Run Diagnostics
- Run Error Log Analysis
- SCSI Bus Analyzer
- SCSI Device Identification and Removal
- SCSI Tape Utility
- SSA Service Aid
- Update Disk Based Diagnostics
- 7135 RAIDiant Array Service Aids

- 7318 Serial Communication Network Server

AIX Shell Prompt Service Aid

This service aid allows access to the AIX command line. In order to use this service aid the user must know the root password (when a root password has been established).

Backup/Restore Media Service Aid

This service aid allows verification of backup media and devices. It presents a menu of tape and diskette devices available for testing and prompts for selection of the desired device. It then presents a menu of available backup formats and prompts for selection of the desired format. The supported formats are tar, backup, and cpio. After the device and format are selected, the service aid backs up a known file to the selected device, restores that file to /tmp, and compares the original file to the restored file. The restored file is also left in /tmp to allow for visual comparison. All errors are reported.

Configure Ring Indicate Power On Service Aid

This service aid allows the user to display and change the NVRAM settings for the Ring Indicate Power On capability of the service processor.

The settings allows the user to:

- Enable/Disable power on from Ring Indicate
- Read/Set the number of rings before power on

Configure Service Processor Service Aid

This service aid allows you to display and change the NVRAM settings for the service processor.

Enter one of the following service aids:

- Surveillance Setup
- Modem Configuration
- Call In/Call Out Setup
- Site Specific Call In/Call Out Setup

Surveillance Setup Service Aid

This service aid allows you to display and change the NVRAM settings for the surveillance capability of the service processor.

The settings allow you to:

- Enable/disable surveillance
- Set the surveillance time interval, in minutes
- Set the surveillance delay, in minutes

The current settings are read from NVRAM and displayed on the screen. Any changes made to the data shown are written to NVRAM.

Modem Configuration Service Aid

Use this service aid when setting the NVRAM for a modem attached to any of the Service Processor's serial ports. The user inputs the file name of a modem configuration file and the serial port number. The formatted modem configuration file is read, converted for NVRAM then loaded into NVRAM. Refer to the "Service Processor Installation and User's Guide" for more information.

Call In/Out Setup Support Service Aid

This service aid allows the user to display and change the NVRAM settings for the Call In/Call Out capability of the service processor.

The settings allows the user to:

- Enable/Disable call in on either serial port.
- Enable/Disable call out on either serial port.
- Set the line speed on either serial port.

Site Specific Call In/Out Setup Support Service Aid

This service aid allows you to display and change the NVRAM settings that are site specific for the call in/call out capability of the service processor.

The site specific NVRAM settings allow you to:

- Set the phone number for the service center
- Set the phone number for the customer administration center
- Set the phone number for a digital pager

- Set the phone number for the customer system to call in
- Set the phone number for the customer voice phone
- Set the customer account number
- Set the call out policy
- Set the customer RETAIN id
- Set the customer RETAIN password
- Set the remote timeout value
- Set the remote latency value
- Set the number of retries while busy
- Set the system name

The current settings are read from NVRAM and displayed on the screen. Any changes made to the data shown are written to NVRAM.

Create Customized Diagnostic Configuration Diskette

This service aid provides a means of creating a diagnostic diskette from the diagnostics on the disk. This service aid is only supported on version 2.x.

Diagnostic Package Utility Service Aid

The Diagnostic Package Utility Service Aid allows the user to perform the following actions:

- Format a 1, 2, or 4MB diskette

This function was moved to the Format Media Task at version 4.2.

- Create a Standalone Diagnostic Package Configuration Diskette

The Standalone Diagnostic Package Configuration Diskette allows the following to be changed from the console:

- Default refresh rate for a LFT

The refresh rate used by the standalone diagnostic package is 60Hz. If the display's refresh rate is 77Hz, then set the refresh rate to 77.

- Different async terminal console

A console configuration file that allows a terminal attached to any RS232 or RS422 adapter to be selected as a console device can be created using this

service aid. The default device is a RS232 tty attached to the first standard serial port (S1).

Dials and LPFK Configuration Service Aid

This service aid provides a tool for configuring and removing dials/LPFKs to the standard serial ports.

Since version 4.1.3 a tty must be defined on the async port before the Dials and LPFKs can be configured on the port. Before version 4.2 the Dials and LPFKs could only be configured on the standard serial ports. At version 4.2 the Dials and LPFKs can be configured on any async port.

Dials and LPFKs Configuration Service Aid Before version 4.2

The Dials and LPFKs Configuration Service Aid provides a tool for configuring and removing dials/LPFKs to the standard serial ports.

Configure Dials and LPFKs Task Version 4.2+

The Dials and LPFKs can be configured on any async port. A tty must be in the available state on the async port before the Dials and LPFKs can be configured on the port. The task allows an async adapter to be configured, then a tty port defined on the adapter, and then Dials and LPFKs can be defined on the port.

Disk Based Diagnostic Update Service Aid and Update Disk Based Diagnostic Task

This service aid allows fixes (APARs) to be applied.

Disk Based Diagnostic Update Service Aid Before Version 4.2

Prior to version 4.2 this service aid is used to update the diagnostics on the disk drive. The updates may be new diagnostics or an update to the existing diagnostics. It uses the **installp** command to do this.

Update Disk Based Diagnostic Task Version 4.2

Beginning with version 4.2 this service aid is replaced by the Update Disk Based Diagnostics task. The task invokes the SMIT Update Software by Fix (APAR) task. The task allows the input device and APARs to be selected. Any APAR can be installed using this task.

Disk Media Service Aids

This service aid consists of a Format, Certify, and Erase service aid for each type of hard disk supported, and Optical Disk service aid for supported optical disks.

- Certify

Certify reads all of the ID and data fields. It checks for bad data and counts all errors encountered. If more than 10 hard data errors or more than 1 hard equipment error is found, the user is prompted to replace the drive. One or less recovered data errors per megabyte is normal. More than one recoverable data error per megabyte indicates that the disk should be formatted and certified. Disk errors are not logged during certify.

- Format

Format writes all the disk. The pattern put on the disk is device dependent, i.e. some drives may put all 0s, while some may put hexadecimal number 5F. No bad block reassignment occurs

- Format and Certify

Format and Certify does the same as format does. After the Format is completed, Certify is run. This Certify reassigns all bad blocks encountered.

- Erase Disk

This option can be used to overwrite (remove) all data currently stored in user-accessible blocks of the disk. The Erase Disk option writes one or more patterns to the disk. An additional option allows data in a selectable block to be read and displayed on the system console.

To use the Erase Disk option, specify the number (0-3) of patterns to be written. Select the patterns to be written; the patterns are written serially. That is, the first pattern is written to all blocks. Then the next pattern is written to all blocks, overlaying the previous pattern. A random pattern is written by selecting the "Write random pattern?" option.

The Erase Disk service aid has not been certified as meeting the Department of Defense or any other organizations security guidelines. The following steps should be followed if the data on the drive is to be overwritten:

1. Run the "Erase Disk" Service Aid to overwrite the data on the drive.
2. Do a format without certify.
3. Run a second pass of the erase service aid.

For a newly installed drive, you can insure that all blocks on the drive are overwritten with your pattern if you use the following procedure:

1. Format the drive.
2. Check the defect map by running the Erase Disk Service Aid.
Note: If you use the "Format and Certify" option, there may be some blocks which get placed into the grown defect map.
3. If there are bad blocks in the defect map, record the information presented and ensure that this information is kept with the drive. This data is used later when the drive is to be overwritten.
4. Use the drive as you would normally.
5. When the drive is no longer needed and is to be erased, run the same version of the Erase Disk Service Aid which was used in step 2.
Note: Using the same version of the service aid is only critical if there were any bad blocks found in step 3.
6. Compare the bad blocks which were recorded with the drive in step 3 with those which now appear in the grown defect map.
Note: If there are differences between the saved data and the newly obtained data, then all of the sectors on this drive cannot be overwritten. The new bad blocks are not overwritten.
7. If the bad block list is the same, continue running the service aid to overwrite the disk with the chosen pattern(s).

Before version 4.2 the Disk Media Service Aid is entered via the Disk Media selection from the Service Aid Selection Menu. At version 4.2+ the Disk Media service aid is entered via the Format Media or Certify Media options from the Task Selection Menu.

Optical Disk Service Aids

The Optical Disk Service Aids consist of Initialize, Format and Certify, and Spare Sector Availability service aids.

- Initialize

This service aid is used to format the optical disk without certifying it. This option does not reassign the defective sectors; however, it is a quick way of formatting after cleaning the disk.

- Format and Certify

This service aid is used to format the optical disk and certify it. The certification process is drive specific and performs the surface analysis of all user data and spare sectors. The defective sectors are reassigned.

- Spare Sector Availability

This service aid checks the number of spare sectors available on the optical disk. The spare sectors are used to reassign when defective sectors are encountered during normal usage or during a format and certify operation. Low availability of spare sectors indicates that the disk needs to be backed up and replaced. Formatting the disk does not improve the availability of spare sectors.

Disk Maintenance Service Aid

- Disk to Disk Copy Service Aid
- Display/Alter Sector Service Aid

Disk to Disk Copy Service Aid

The service aid allows you to recover data from an old drive when replacing it with a new drive. The service aid only supports copying from a drive to another drive of similar size. This service aid cannot be used to update to a different size drive. The **migratepv** command should be used when updating drives. The service aid recovers all LVM software reassigned blocks. To prevent corrupted data from being copied to the new drive, the service aid aborts if an unrecoverable read error is detected. To help prevent possible problems with the new drive, the service aid aborts if the number of bad blocks being reassigned reaches a threshold.

The procedure for using this service aid requires that both the old and new disks be installed in or attached to the system with unique SCSI addresses. This requires that the new disk drive SCSI address must be set to an address that is not currently in used and the drive be installed in an empty location. If there are no empty locations, then one of the other drives has to be removed. Once the copy is complete, only one drive may remain installed. Either remove the target drive to return to the original configuration, or perform the following procedure to complete the replacement of the old drive with the new drive.

1. Remove both drives.
2. Set the SCSI address of the new drive to the SCSI address of the old drive.
3. Install the new drive in the old drive's location.
4. Install any other drives that were removed into their original location.

To prevent problems that may occur when running this service aid from disk, it is suggested that this service aid be run from the diagnostics that are loaded from removable media when possible.

Display/Alter Sector Service Aid

This service aid allows the user to display and alter information on a disk sector. Care must be used when using this service aid because inappropriate modification to some disk sectors may result in total loss of all data on the disk. Sectors are addressed by their decimal sector number. Data is displayed both in hex and in ASCII. To prevent corrupted data from being incorrectly corrected, the service aid does not display information that cannot be read correctly.

Diskette Media Service Aid

This service aid provides a way to verify the data written on a diskette. When this service aid is selected, a menu asks you to select the type of diskette being verified. The program then reads all of the ID and data fields on the diskette one time and displays the total number of bad sectors found. Diskette format support was added in version 4.2.

Prior to version 4.2 the Diskette Media Service Aid was entered via the Diskette Media selection from the Service Aid Selection Menu. At version 4.2 and later the Diskette Media Service Aid is entered via the Format Media or Certify Media options from the Task Selection Menu.

Display/Alter Bootlist Service Aid

This service aid allows the bootlists to be displayed, altered, or erased.

The system attempts to perform an IPL from the first device in the list. If the device is not a valid IPL device or if the IPL fails, the system proceeds in turn to the other devices in the list to attempt an IPL.

Display or Change Configuration or Vital Product Data (VPD) Service Aid

This service aid allows the user to display, change configuration, data and vital product data (VPD).

Prior to version 4.2 this service aid was entered via the Service Aid Selection Menu. From version 4.2 on, this service aid is entered via the Task Selection Menu.

The following are the task selections which appear on the Task Selection Menu:

- Display Configuration and Resource List
- Display Hardware Vital Product Data
- Change Hardware Vital Product Data
- Add or Delete Drawer configuration

Display Vital Product Data (VPD) Service Aid and Display Hardware Vital Product Data Task

This service aid displays all installed resources along with any VPD for those

resources. Use this service aid when you want to look at the VPD for a specific resource.

Display Software Product Data Prior to Version 4.2

This service aid displays information about the installed software.

Display Software Product Data beginning with Version 4.2

This service aid displays information about the installed software and provides the following functions:

- List Installed Software
- List Applied but Not Committed Software Updates
- Show Software Installation History
- Show Fix (APAR) Installation Status
- List Fileset Requisites
- List Fileset Dependents
- List Files Included in a Fileset
- List File Owner by Fileset

Display Configuration Service Aid and Display Configuration and Resource List Task

This service aid displays the item header only for all installed resources. Use this service aid when there is no need of seeing the VPD. (No VPD is displayed.)

Change Hardware Vital Product Data Task

Use this service aid to display the Display/Alter VPD Selection Menu. The menu lists all resources installed on the system. When a resource is selected a menu is displayed that lists all the VPD for that resource.

Note: The user cannot alter the VPD for a specific resource unless it is not machine readable.

Add Resource to Resource List Task

Use this task to add resources back to the resource list.

Delete Resource from Resource List Task

Use this task to delete resources from the resource list.

Change Configuration Service Aid and Add or Delete Drawer Configuration Task

Use this service aid to add or delete features to the system configuration.

Note: Drawers are the only features that can be added or deleted.

Add or Delete Drawer Configuration Task

This task provides the following options:

- List all Drawers
- Add a Drawer
- Remove a Drawer

The supported drawer types are:

- Media SCSI Device Drawer
- DASD SCSI DASD Drawer

Display and Change Diagnostic Test List Service Aid

Note: Beginning with version 4.2 this service aid is no longer supported. The Display Configuration and Resource List, Add Resource to Resource List, and Delete Resource from Resource List Tasks have replaced it.

This service aid provides a way to:

- Display the Diagnostic Test List

This selection lists all of the resources tested by the diagnostics.

- Add a resource to the Diagnostic Test List

This selection allows resources to be added back to the Diagnostic Test List. The Diagnostic Test List Menu lists all resources that can be added back to the Diagnostic Test List.

Note: Only resources that were previously detected by the diagnostics and deleted from the Diagnostic Test List is listed. If no resources are available to be added, then none are listed.

- Delete a resource from the Diagnostic Test List

This selection allows resources to be deleted from the Diagnostic Test List. The Diagnostic Test List Menu lists all resources that can be deleted from the Diagnostic Test List.

Note: Only resources that were previously detected by the diagnostics and have not been deleted from the Diagnostic Test List are listed. If no resources are available to be deleted, then none are listed.

Display Machine Check Error Log Service Aid

Note: The Machine Check Error Log Service Aid is available only on Standalone Diagnostics.

When a machine check occurs, information is collected and logged in a NVRAM error log before the system unit shuts down. This information is logged in the AIX error log and cleared from NVRAM when the system is rebooted from either hard disk or LAN. The information is not cleared when booting from Standalone Diagnostics. When booting from Standalone Diagnostics, this service aid can take the logged information and turn it into a readable format that can be used to isolate the problem. When booting from the hard disk or LAN, the information can be viewed from the AIX error log using the Hardware Error Report Service Aid. In either case the information is analyzed when running the `sysplana0` diagnostics in Problem Determination Mode.

Display Previous Diagnostic Results Service Aid

Note: This service aid is not available when you load the diagnostics from a source other than a disk drive or from a network.

Each time the diagnostics produce a service request number (SRN) to report a problem, information about that problem is logged. The service representative can look at this log to see which SRNs are recorded. This log also records the results of diagnostic tests that are run in loop mode.

When this service aid is selected, information on the last problem logged is displayed. The Page Down and Page Up keys can be used to look at information about previous problems.

This information is *not* from the error log maintained by the AIX operating system. This information is stored in the `/etc/lpp/diagnostics/data/*.dat` file.

Display Resource Attributes

This task displays the Customized Device Attributes associated with a selected resource. This task is similar to running the `lsattr -E -I resource` command.

Display or Change Diagnostic Run Time Options Task

The Display or Change Diagnostic Run Time Options task allows the diagnostic run time options to be set.

Note: The run time options are used only when running the Run Diagnostic task.

The run time options are:

- Display Diagnostic Mode Selection Menus
This option allows the user to select whether the DIAGNOSTIC MODE SELECTION MENU is displayed or not (the default is yes).
- Include Advanced Diagnostics
This option allows the user to select if the Advanced Diagnostics should be included or not (the default is no).
- Include Error Log Analysis
This option allows the user to select if the Error Log Analysis (ELA) should be included or not (the default is no).
- Run Tests Multiple Times

This option allows the user to select if the diagnostic should be run in loop mode or not (the default is no).

Note: This option is only displayed when running Online Diagnostics in Service Mode.

Display Test Patterns Service Aid

This service aid provides a means of making adjustments to system display units by providing displayable test patterns. Through a series of menus the user selects the display type and test pattern. After the selections are made the test pattern is displayed.

Generic Microcode Download Service Aid

This service aid provides a means of restoring a diskette (or other media) and executing a restored program. This program does whatever is required to download the microcode onto the adapter or device.

This service aid is supported in both concurrent and standalone modes from disk, LAN, or loadable media.

When entered, this service aid displays information about what it does. It then asks for a microcode diskette to be inserted into the diskette drive. The diskette is in backup format. The service aid then restores the diskette to the **/tmp** directory and execute a program called **diagucode**. Once **diagucode** has completed, you are then returned to the service aid.

Hardware Error Report Service Aid and Display Hardware Error Log Task

This service aid provides a tool for viewing the hardware error log. It uses the **errpt** command.

The Display Error Summary and Display Error Detail selection provide the same type of report as the **errpt** command. The Display Error Analysis Summary and Display Error Analysis Detail selection provide additional analysis. The Error Analysis and Error Analysis Detail options were removed at version 4.1.3.

ISA Adapter Configuration Service Aid

The ISA Adapter Configuration Service Aid allows the identification and configuration of ISA adapters on systems that have an ISA bus and adapters.

This service aid also displays all ISA adapters supported by diagnostics. Diagnostic support for ISA adapters not shown in the list may be supported from a Supplemental Diskette. ISA adapter support can be added from a Supplemental Diskette with this service aid.

Whenever an ISA adapter is installed, this Service Aid must be run and the adapter configured before the adapter can be tested. This Service Aid must also be run (and the adapter removed) whenever an ISA adapter is physically removed from the system.

If diagnostics are run on an ISA adapter that has been removed from the system, the diagnostics fail.

This service aid is only supported by the Standalone Diagnostics. SMIT should be used to configure ISA adapters for AIX.

ISA adapters cannot be detected by the system.

Note: When using this service aid choose the option that places the adapter in the "Defined State". Do not select the option that places the device in the "Available State".

Local Area Network Service Aid and Local Area Network Analyzer Task

This service aid and task are used to exercise the LAN communications adapters (Token-Ring, Ethernet, and Fiber Distributed Data Interface (FDDI)). The following services are available:

- Connectivity testing between two network stations. Data is transferred between the two stations. This requires the user to input the Internet Addresses of both stations.
- Monitoring ring (Token-Ring only). The ring is monitored for a period of time. Soft and hard errors are analyzed.

Additional information about this service aid can be found in the Local Area Network Service Aids CIS.

Prior to version 4.2 this service aid was accessed via the Local Area Network Service Aids selection of the Service Aid Selection Menu. Beginning with version 4.2 this service aid is accessed via the Local Area Network Analyzer options from the Task Selection Menu.

Microcode Download Service Aid

This service aid provides a way to copy device microcode to a device. It is used to update the microcode on a device. It presents a list of devices that use microcode. The device on which the microcode is to be installed is selected. The service aid instructs the user on its use.

PCI RAID Physical Disk Identify

This selection identifies physical disks connected to a PCI SCSI-2 F/W RAID adapter.

Periodic Diagnostics Service Aid

This service aid provides a tool for configuring periodic diagnostics and automatic error log analysis. A hardware resource can be chosen to be tested once a day, at a user specified time. If the resource cannot be tested because it is busy, error log analysis is performed. Hardware errors logged against a resource can also be monitored by enabling Automatic Error Log Analysis. This allows error log analysis to be performed every time a hardware error is put into the error log. If a problem is detected, a message is posted to the system console and a mail message sent to the user(s) belonging to the system group with information about the failure such as Service Request Number.

The service aid provides the following functions:

- Add or delete a resource to the periodic test list
- Modify the time to test a resource
- Display the periodic test list
- Modify the error notification mailing list
- Disable Automatic Error Log Analysis

Process Supplemental Media Task

Notes:

- This task is supported in Standalone Diagnostics only.
- Process and test one resource at a time.
- Do not process multiple supplements at a time.

Diagnostic Supplemental Media contain all the diagnostic programs and files required to test a resource. Supplemental media is normally released and shipped with the resource.

When prompted, insert the supplemental media. Then press Enter. After processing has completed, go to the resource selection list to find the resource to test.

This prompts for either diskette or tape media, reads in media using cpio, and executes **diagstart** shell script.

Run Diagnostics Task

The Run Diagnostics task invokes the Resource Selection List menu. When the commit key is pressed, Diagnostics are run on all selected resources.

The procedures for running the diagnostics depends on the states of the Diagnostics Run Time Options. The run time options are:

- Display Diagnostic Mode Selection Menus
If this option is on, the Diagnostic Mode Selection Menu displays when the commit key is pressed.
- Include Advanced Diagnostics
If this option is on, Advanced Diagnostics is be included.
- Include Error Log Analysis
If this option is on, Error Log Analysis is included.
- Run Tests Multiple Times
If this option is on, diagnostic are run in loop mode. This option is only valid when running Online Diagnostics in Service Mode.

Run Error Log Analysis Task

The Run Error Log Analysis task invokes the Resource Selection List menu. When the commit key is pressed, Error Log Analysis is run on all selected resources.

SCSI Bus Service Aid and SCSI Bus Analyzer Task

This service aid provides a means to diagnose a SCSI Bus problem in a free-lance mode.

Prior to version 4.2 the SCSI Bus Service Aid was accessed via the SCSI Bus selection from the Service Aid Selection Menu. Beginning with version 4.2 the SCSI Bus Service Aid is accessed via the SCSI Bus Analyzer option from the Task Selection Menu.

To use this service aid, the user should have an understanding of how a SCSI Bus works. This service aid should be used when the diagnostics cannot communicate with anything on the SCSI Bus and cannot isolate the problem. Normally the procedure for finding a problem on the SCSI Bus with this service aid is to start with a single device attached, ensure that it is working, then start adding additional

devices and cables to the bus ensuring that each one works. This service aid works with any valid SCSI Bus configuration.

The SCSI Bus Service Aid transmits a SCSI Inquiry command to a selectable SCSI Address. The service aid then waits for a response. If no response is received within a defined amount of time, the service aid displays a timeout message. If an error occurs or a response is received, the service aid then displays one of the following messages:

- The service aid transmitted a SCSI Inquiry Command and received a valid response back without any errors being detected.
- The service aid transmitted a SCSI Inquiry Command and did not receive any response or error status back.
- The service aid transmitted a SCSI Inquiry Command and the adapter indicated a SCSI bus error.
- The service aid transmitted a SCSI Inquiry Command and an adapter error occurred.
- The service aid transmitted a SCSI Inquiry Command and a check condition occur.

When the SCSI Bus Service Aid is entered a description of the service aid is displayed.

Pressing the Enter key displays the Adapter Selection menu. This menu allows the user to enter which address to transmit the SCSI Inquiry Command.

When the adapter is selected the SCSI Bus Address Selection menu is displayed. This menu allows the user to enter which address to transmit the SCSI Inquiry Command.

Once the address is selected the SCSI Bus Test Run menu is displayed. This menu allows the user to transmit the SCSI Inquiry Command by pressing the Enter key. The Service Aid then indicates the status of the transmission. When the transmission is completed, the results of the transmission is displayed.

Notes:

- A Check Condition can be returned when there is nothing wrong with the bus or device.
- AIX does not allow the command to be sent if the device is in use by another process.

SCSI Device Identification and Removal

This service aid allows the user to choose a SCSI device or location from a menu and to identify a device, located in the system unit.

The service aid also does the following:

- Generate a menu which displays all SCSI devices.
- Lists the device and all of its sibling devices.
- List all SCSI adapters and their ports.
- List all SCSI devices on a port.

SCSI Tape Utilities Service Aid

This service aid provides a means to obtain the status or maintenance information from a SCSI tape drive. Only some models of SCSI tape drive are supported.

The service aid provides the following options:

- Display time since a tape drive was last cleaned.

The time since the drive was last cleaned is displayed onto the screen. In addition, a message whether the drive is recommended to be cleaned is also displayed.

- Copy a tape drive's trace table.
- The trace table of the tape drive is written to diskettes.

The required diskettes must be formatted for DOS. Writing the trace table may require several diskettes. The actual number of required diskettes is determined by the service aid based on the size of the trace table. The names of the data files is of the following format:

'TRACE<X>.DAT' where 'X' is the a sequential diskette number. The complete trace table consists of the sequential concatenation of all the diskette data files.

- Display or copy a tape drive's log sense information.

The service aid provides options to display the log sense information to screen, to copy it to a DOS formatted diskette or to copy it to a file. The file name "LOGSENSE.DAT" is used when the log sense data is written on the diskette. The service aid prompts for a file name when the log sense data is chosen to be copied to a file.

Service Hints Service Aid

This service aid reads and displays the information in the CEREADME file from the diagnostics source (diskettes, disk, or CD-ROM). This file contains information that is not in the publications for this version of the diagnostics. It also contains information about using this particular version of diagnostics.

Use the Enter key to page forward through the information or the - (dash) and Enter keys to page backward through the file.

SSA Service Aids

This service aid provides tools for diagnosing and resolving problems on SSA attached devices. The following tools are provided:

- Set Service Mode
- Link Verification
- Configuration Verification
- Format and Certify Disk

7135 RAIDiant Array Service Aid

The 7135 RAIDiant Array service aids contain the following functions:

- Certify LUN
This selection reads and checks each block of data in the LUN. If excessive errors are encountered the user is notified.
- Certify Spare Physical Disk
This selection allows the user to certify (check the integrity of the data) on drives designated as spares.
- Format Physical Disk
This selection is used to format a selected disk drive.
- Array Controller Microcode Download
This selection allows the microcode on the 7135 controller to be updated when required.
- Physical Disk Microcode Download
This selection is used to update the microcode on any of the disk drives in the array.

- Update EEPROM

This selection is used to update the contents of the EEPROM on a selected controller.

- Replace Controller

Use this selection when it is necessary to replace a controller in the array.


7318 Serial Communications Network Server Service Aid

This service aid provides a tool for diagnosing terminal server problems.

SSA Location Code Format

Location codes identify the locations of adapters and devices in the using system and their attached subsystems and devices. These codes are displayed when the diagnostic programs isolate a problem. For information about the location codes that are used by the using system, see the operator guide for the using system.

A B - C D - E F - G H

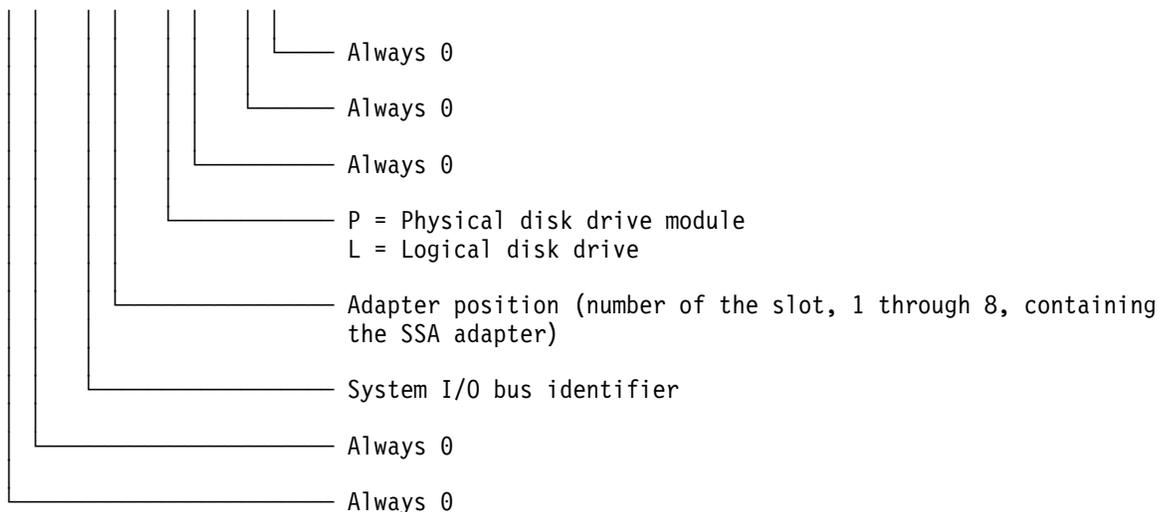


The location code shows only the position of the SSA adapter in the using system and the type of device that is attached. Use a service aid to find the location of the device (disk drive module). For more information, see “SSA Service Aids” on page 7-30.

SSA Loops and Links

The disk drive modules of the system unit are connected through two SSA links to an SSA adapter that is located in the using system. The disk drive modules, SSA links, and SSA adapter are configured in loops. Each loop provides a data path that starts at one connector of the SSA adapter and passes through a link (SSA cable) to the disk drive modules. The path continues through the disk drive modules, then returns through another link to a second connector on the SSA adapter.

The SSA Adapter

The system unit can be attached to an SSA adapter. The adapter card has four SSA connectors that are arranged in two pairs. Connectors A1 and A2 are one pair; connectors B1 and B2 are the other pair. Connectors B1 and B2 are not used externally on 7025 Model F30.

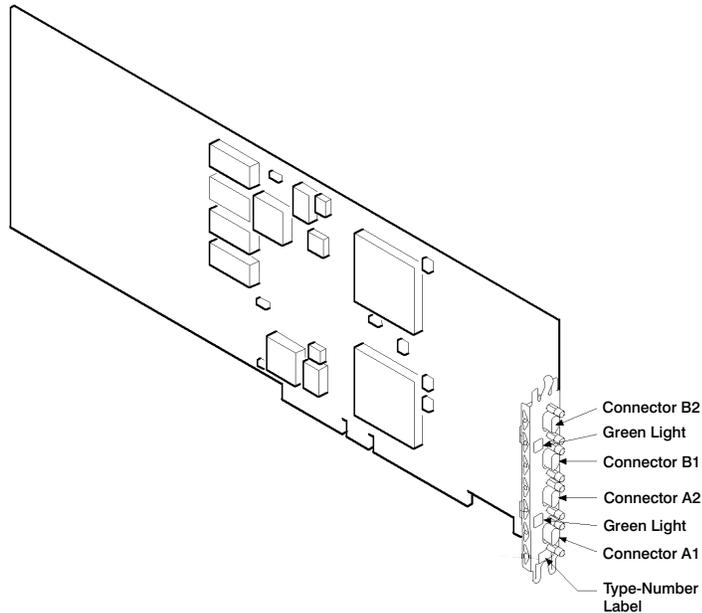

The SSA links must be configured as loops. The loop is connected to the internal connectors at the SSA adapter card. These connectors *must* be a valid pair (that is, A1 and A2, or B1 and B2); otherwise, the disk drive modules on the loop are not fully configured, and the diagnostics fail. Operations to all the disk drive modules on a particular loop can continue if that loop breaks at any one point.


Each pair of connectors has a green light that indicates the operational status of its related loop:

Status of Light	Meaning
Off	Both SSA connectors are inactive. If disk drive modules are connected to these connectors, either those modules are failing, or their SSA links have not been enabled.
Permanently on	Both SSA links are active (normal operating condition).
Slow Flash	Only one SSA link is active.

Disk Drive Module Strings

In the system unit, the disk drive modules are arranged in a string of 2 to 6 disk drive modules. This string has its own two SSA connectors. This string is connected through an internal SSA cable to a pair of connectors on the SSA adapter to make an SSA loop. (The SSA cables provide the SSA links.)

The next diagram shows the relationships between the SSA connectors and the disk drive module string in a system unit.

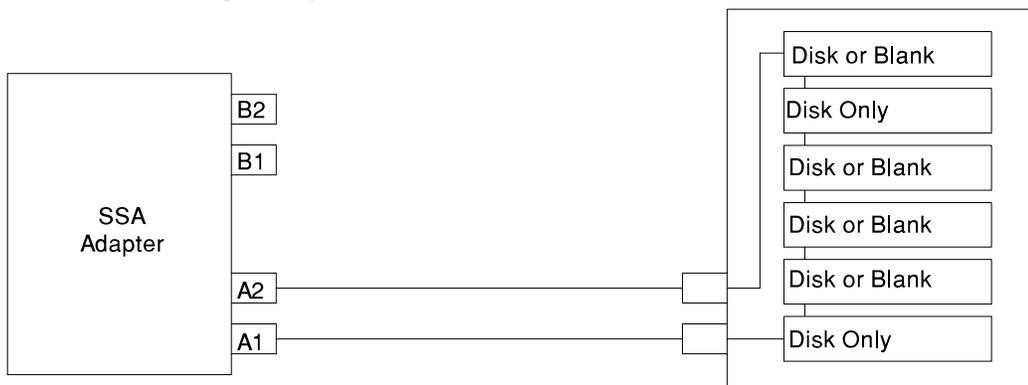

Pdisks, Hdisks, and Disk Drive Module Identification

The *physical disk drives* (**pdisks**) in an SSA subsystem can be configured as logical units (LUNs). A LUN is also known as an **hdisk**, and can consist of one or more physical disk drives. An hdisk in an SSA subsystem might, therefore, consist of one pdisk or several pdisks.

The configuration software also allocates an identification (hdisk and pdisk number) to each disk drive module during the configuration of the SSA link. The disk drive modules do not have fixed physical addresses.

The configuration software first recognizes the disk drive module by the machine-readable serial number that is written on the disk. Then, it assigns an identification that is related to the position of the disk drive-module in the SSA string. After configuration, the disk drive module always has the same identification. It can be moved to any position on the SSA link, but can always be found by the software.

Service actions are always related to physical disk drives. For this reason, errors that occur on SSA disk drives are always logged against the physical disk drive (pdisk).

The numeric identifier of pdisks, hdisks, and disk drive module slots of the system unit are not related to each other. For example, pdisk1 is not necessarily installed in slot 1 of the 6-pack.

The disk drive module serial number, on the label on the front of the carrier, is also displayed by the service aids. It is the last eight digits of the drives IEEE SSA unique ID, which is stored on the drives electronics card.

Rules for SSA Loops

The following are rules for SSA loops.

- The SSA loop must be connected to the internal pair of connectors on the SSA adapter.
- Only one pair of adapter connectors can be connected to a particular SSA loop.
- A maximum of 18 disk drive modules can be connected in a particular SSA loop.
- A maximum of three dummy disk drive modules can be connected next to each other in a particular SSA loop.


Loops and Data Paths

All devices that are attached to an SSA adapter card are connected through SSA links. The SSA links are configured as loops. Data and commands to a particular device pass through all other devices on the link between the adapter and the target device.

Data can travel in either direction around a loop. The adapter can, therefore, access the disk drive modules through two data paths. The using system cannot detect which data path is being used.


If a disk drive module fails, or is turned off, the loop is broken, and one of the data paths to a particular module is no longer available. The disk drive modules on the loop continue to work, but an error is reported to the using system.

The following diagram shows that the disk drive module in slot 3 has failed. The disk drive modules in slots 1 and 2 can communicate with the using system only through connector A1 of the SSA adapter. The disk drive modules in slots 4, 5, and 6 can communicate only through connector A2 of the SSA adapter.

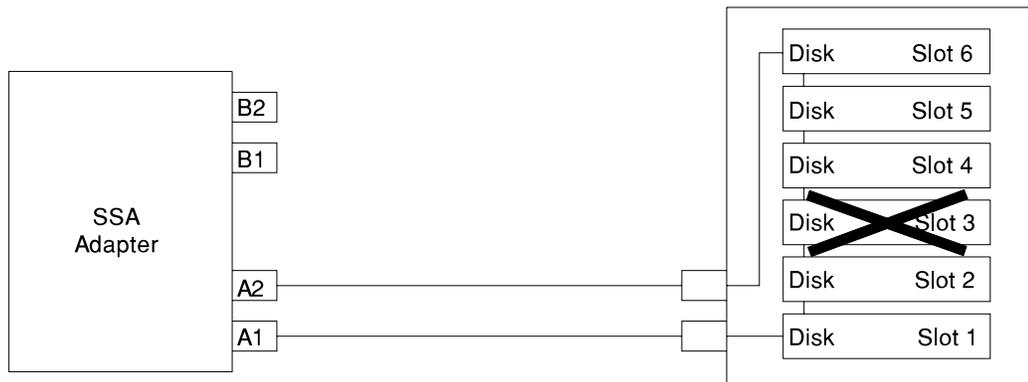

If two or more disk drive modules are turned off, fail, or are removed from the loop, some modules might become isolated from the SSA adapter.

The following diagram shows that disk drive modules in slots 2 and 4 have failed. The disk drive module in slot 1 can communicate with the using system only through connector A1 of the SSA adapter. The disk drive module in slots 5 and 6 can communicate with the using system only through connector A2 of the SSA adapter. The disk drive module in slot 3 is isolated from the SSA adapter.

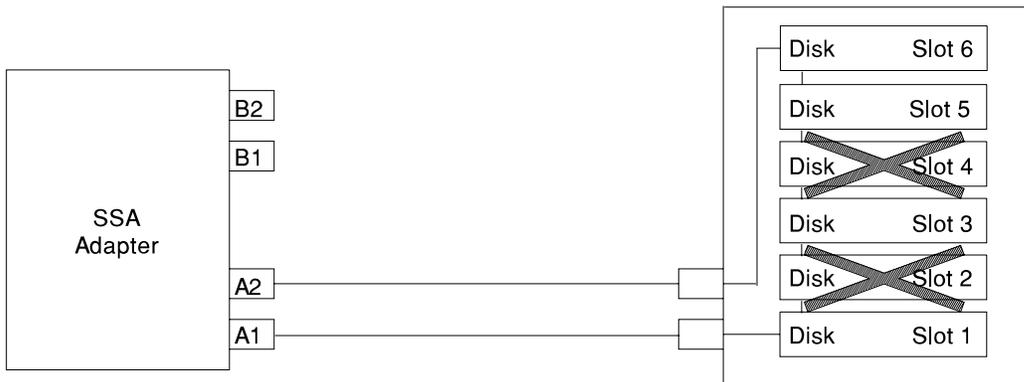

SSA Service Aids

SSA service aids help you service the SSA Hot-Swap Disk Drive. This section describes those service aids, and tells how to use them.

Attention: Do not run the service aids from more than one using system at a time; otherwise, unexpected results might occur.

The SSA service aids are:

Set Service Mode	This service aid enables you to determine the location of a particular disk drive module on the SSA link and to remove that module from the link.
Link Verification	This service aid tells you the operational status of an SSA link.
Configuration Verification	This service aid lets you determine the relationship between physical and logical disk drives.
Format Disk	This service aid formats an SSA disk drive module.
Certify Disk	This service aid verifies that all the data on a disk drive can be read correctly.

Before you use the service aids, ensure that you are familiar with the principles of SSA links and physical disk drives (pdisks). If you are not familiar with these principles, first read "SSA Loops and Links" on page 7-25.

The Identify Function

The identify function can be accessed from any of the service aids.

This function enables you to determine the location of a particular disk drive module that you want to identify but do not want to remove from the system unit. The identify function causes the check light of the disk drive module to flash for identification (1 second on, 1 second off), but has no effect on the normal operation of the disk drive module. You can use the identify function on any number of disk drive modules at the same time.

Instructions displayed by the service aids tell you when you can select the identify function.

Note: You cannot use the identify function on a device that is in reserved status.

Starting the SSA Service Aids

To start the SSA service aids:

1. Start the using-system diagnostics (see the *Common Diagnostics Information Manual*), and go to DIAGNOSTIC OPERATING INSTRUCTIONS.
2. Follow the instructions to select FUNCTION SELECTION.
3. Select SERVICE AIDS from the Function Select menu.
4. Select SSA SERVICE AIDS from the Service Aids menu.

The SSA Service Aids menu is displayed.

```
SSA SERVICE AIDS                                     802380
Move cursor onto selection, then press Enter.

    Set Service Mode
    Link Verification
    Configuration Verification
    Format Disk
    Certify Disk

F3=Cancel      F10=Exit
```

Note: In some configurations of the using-system console:

Esc and **0** = Exit

Esc and **3** = Cancel

In such configurations, however, the displayed instructions for the function keys remain the same as those shown in the screen above.

5. Select the service aid that you require, then go to the relevant instructions in this chapter:

“Set Service Mode Service Aid” on page 7-33

“Link Verification Service Aid” on page 7-39

“Configuration Verification Service Aid” on page 7-43

“Format Disk Service Aid” on page 7-45

“Certify Disk Service Aid” on page 7-47

Set Service Mode Service Aid

The Set Service Mode service aid enables you to determine the location of a particular disk drive module and to remove that module from the system unit. It causes the check light of that disk drive module to come on for identification, and it stops all SSA link activity through the module. Only one disk drive module at a time can be in the service mode.

Before using this service aid, you must make the selected disk drive module unavailable to the using system; otherwise, an error occurs.

SSA disk drive modules can be maintained concurrently; that is, they can be removed, installed, and tested on an SSA link while the other modules on the link continue to work normally. If a disk drive module has its check light on, you can remove that module from the SSA link without taking any special actions.

If a disk drive module does *not* have its check light on, the SSA link that passes through it might still be active, even though the disk drive module itself might not be working. You must put that module into the service mode before you remove it from the SSA link.

If you leave the Set Service Mode service aid, the service mode is reset.

To use the Set Service Mode service aid:

1. Select SET SERVICE MODE from the SSA Service Aids menu (see “Starting the SSA Service Aids” on page 7-31). A list of physical disk drives (pdisks) is displayed:

```
SSA SERVICE AIDS                                     802380

SET SERVICE MODE                                     802381
Move cursor onto selection, then press Enter.

{TOP}
pdisk0  11111111  00-04-P      2 GB SSA F Physical Disk Drive
pdisk1  22222222  00-04-P      2 GB SSA F Physical Disk Drive
pdisk2  33333333  00-04-P      2 GB SSA F Physical Disk Drive
pdisk3  44444444  00-04-P      2 GB SSA F Physical Disk Drive
pdisk4  55555555  00-04-P      2 GB SSA F Physical Disk Drive
pdisk5  66666666  00-04-P      2 GB SSA F Physical Disk Drive
pdisk6  77777777  00-04-P      2 GB SSA F Physical Disk Drive
pdisk7  88888888  00-04-P      2 GB SSA F Physical Disk Drive
pdisk8  99999999  00-04-P      2 GB SSA F Physical Disk Drive

{BOTTOM}
F3=Cancel      F10=Exit
```

The columns of information displayed on the screen have the following meanings:

pdisk0 through pdisk8	Physical disk drive resource identifiers.
11111111 through 99999999	Serial numbers of the physical disk drive modules. The actual serial number of a disk drive module is shown on the front of the disk drive module.
00-04-P	See "SSA Location Code Format" on page 7-24.
2 GB SSA F Physical Disk Drive	Descriptions of the disk drive modules.

2. Select the pdisk that you want to identify or put into Service Mode (for example, pdisk3). The following display appears with details of the disk drive module that you have just selected.

```
SSA SERVICE AIDS                                802380
SET SERVICE MODE                                802381
SET SERVICE MODE                                802382
pdisk3    44444444    00-04-P    2 GB SSA F Physical Disk Drive
Move cursor onto selection, then press Enter.
+ Set or Reset Identify.
  Select this option to set or reset the Identify indicator
  on the disk drive.
> Set or Reset Service Mode.
  Select this option to set or reset Service Mode
  on the disk drive.

F3=Cancel    F10=Exit
```

3. Select either the service mode or the identify function. (For this example, assume that you have selected the service mode function.) The list of pdisks is displayed again, and the disk drive module that you selected is marked by a >, which shows that the module is in the service mode.

```

SSA SERVICE AIDS                                802380

SET SERVICE MODE                                802381

SET SERVICE MODE                                802382

SET SERVICE MODE                                802381
Move cursor onto selection, then press Enter.

{TOP}

pdisk0  11111111  00-04-P      2 GB SSA F Physical Disk Drive
pdisk1  22222222  00-04-P      2 GB SSA F Physical Disk Drive
pdisk2  33333333  00-04-P      2 GB SSA F Physical Disk Drive
> pdisk3  44444444  00-04-P      2 GB SSA F Physical Disk Drive
pdisk4  55555555  00-04-P      2 GB SSA F Physical Disk Drive
pdisk5  66666666  00-04-P      2 GB SSA F Physical Disk Drive
pdisk6  77777777  00-04-P      2 GB SSA F Physical Disk Drive
pdisk7  88888888  00-04-P      2 GB SSA F Physical Disk Drive
pdisk8  99999999  00-04-P      2 GB SSA F Physical Disk Drive

{BOTTOM}

F3=Cancel      F10=Exit

```

Notes:

- a. You can select only one disk drive module at a time.
- b. If you select the service mode function, and the selected disk drive module is not in a closed loop (see “SSA Loops and Links” on page 7-25), your selection fails and an error message is displayed. Use the Link Verification service aid to identify any open-link problems before trying to reselect the service mode function.
- c. If you select the service mode function, and a file system is mounted on the selected disk drive module, your selection fails. Use the Configuration Verification service aid to determine which hdisk must have its file system unmounted before you can select the service mode function.
- d. If the check light of the disk drive module that you have put into the service mode does not come on, and if you are not sure of the location of that module, use the identify function to help you find the disk drive module (see “The Identify Function” on page 7-31).

4. Select a second disk drive module, if required (for example, pdisk5). The following display appears:

```
SSA SERVICE AIDS 802380
SET SERVICE MODE 802381
SET SERVICE MODE 802382
SET SERVICE MODE 802381
SET SERVICE MODE 802382
> pdisk5 66666666 00-04-P 2 GB SSA F Physical Disk Drive

Move cursor onto selection, then press Enter.

+ Set or Reset Identify.
  Select this option to set or reset the Identify indicator
  on the disk drive.
> Set or Reset Service Mode.
  Select this option to set or reset Service Mode
  on the disk drive.

F3=Cancel F10=Exit
```

5. Select either the service mode or the identify function. If the original disk drive module is to remain in service mode, you can select only the identify function now. (Only one disk drive module at a time can be in the service mode.) The list of pdisks appears again. The pdisk that is in identify mode is identified by a +.

```

SSA SERVICE AIDS                                802380

SET SERVICE MODE                                802381

SET SERVICE MODE                                802382

SET SERVICE MODE                                802381

SET SERVICE MODE                                802382

SET SERVICE MODE                                802381

Move cursor onto selection, then press Enter.

{TOP}

pdisk0  11111111  00-04-P  2 GB SSA F Physical Disk Drive
pdisk1  22222222  00-04-P  2 GB SSA F Physical Disk Drive
pdisk2  33333333  00-04-P  2 GB SSA F Physical Disk Drive
> pdisk3  44444444  00-04-P  2 GB SSA F Physical Disk Drive
pdisk4  55555555  00-04-P  2 GB SSA F Physical Disk Drive
+ pdisk5  66666666  00-04-P  2 GB SSA F Physical Disk Drive
pdisk6  77777777  00-04-P  2 GB SSA F Physical Disk Drive
pdisk7  88888888  00-04-P  2 GB SSA F Physical Disk Drive
pdisk8  99999999  00-04-P  2 GB SSA F Physical Disk Drive

{BOTTOM}

F3=Cancel      F10=Exit

```

6. Identify other disk drive modules in the same way, if required.

Link Verification Service Aid

The Link Verification service aid helps you determine:

- Where an SSA link has been broken
- The status of the disk drive modules on that SSA link
- The location of a power fault that has been detected by the disk drive modules on that SSA link

To use the Link Verification service aid:

1. Select Link Verification from the SSA Service Aids menu (see “Starting the SSA Service Aids” on page 7-31). The Link Verification adapter menu is displayed:

```
SSA SERVICE AIDS                                802380

LINK VERIFICATION                                802385
Move cursor onto selection, then press Enter.

 ssa0   00-03   SSA Adapter
 ssa1   00-05   SSA Adapter
 ssa2   00-06   SSA Adapter
 ssa3   00-07   SSA Adapter

F3=Cancel      F10=Exit
```

2. Select the adapter that you want to test.

The columns of information displayed on the screen have the following meanings:

ssa0 through ssa3	Adapter resource identifiers.
00-03 through 00-07	Adapter location codes. These codes specify the location of the SSA adapter in the using system.
SSA Adapter	Descriptions of the adapters.

3. When you have selected an adapter, a list is displayed showing the status of all the disk drive modules that are attached to the adapter:

```

SSA SERVICE AIDS                                     802380
LINK VERIFICATION                                    802385
LINK VERIFICATION                                    802386
SSA Link Verification for:
ssa1 00-05 SSA Adapter

To set or reset Identify, move cursor onto selection, then press Enter.

Physical Serial# Adapter Port Status
      A1 A2 B1 B2
{TOP}
pdisk0 11111111 0 7 Good
pdisk1 22222222 1 6 Good
pdisk2 33333333 2 5 Good
pdisk3 44444444 3 4 Good
pdisk4 55555555 4 3 Good
pdisk5 66666666 5 2 Good
pdisk6 77777777 6 1 Good
pdisk7 88888888 7 0 Good
pdisk8 99999999      0 10 Good
pdisk9 nnnnnnnn      1 9 Good
{MORE}

F3=Cancel F10=Exit

```

The columns of information displayed on the screen have the following meanings:

pdisk0 through pdisk9

Physical disk drive resource identifiers.

11111111 through 99999999

Serial numbers of the physical disk drive modules. The actual serial number of a disk drive module is shown on the front of the disk drive module.

A1 A2 B1 B2

Adapter connector number (see "The SSA Adapter" on page 7-25).

Status

Statuses are:

- Good** The disk drive module is working correctly.
- Failed** The disk drive module has failed.
- Power** The disk drive module has detected a loss of power.
- Reserved** The disk drive module is used by another using system.

An SSA link must be configured in a loop around which data can travel in either direction. The loop is broken if a cable fails or is removed, or if a disk drive module fails. Because each disk drive module on the loop can be accessed

from either direction, the broken loop does not prevent access to any data, unless that data is on the failed disk drive module. If the loop is broken between two disk drive modules, the ready lights on those modules flash to show that only one SSA path is active. Also, the Link Verification service aid shows that only one path is available to each disk drive module on the broken loop.

You can find the physical location of any disk drive module on the link by using the identify function (see “The Identify Function” on page 7-31).

Notes:

- a. In the lists of physical disk drives (pdisks) that are displayed by the service aids, you might see:

????? Question marks show where an SSA loop is broken. No information is available about any devices that are beyond this point.

Asterisks indicate an unconfigured device. That device might be:

- Another SSA adapter that is in the same using system or in a different using system.
- An SSA device that is in the SSA network, but whose type is not known. Such a condition can occur if, for example, devices are added to the network, but the **cfgmgr** command is not run to configure those devices into the using system.

For example:

```
LINK VERIFICATION 802386
SSA Link Verification for:
ssa1 00-05 SSA ADAPTER

To set or reset Identify, move cursor onto selection, then press Enter.

Physical Serial# Adapter Port Status
      A1 A2 B1 B2
{TOP}
pdisk0 11111111 0 Good
pdisk1 22222222 1 Good
?????
pdisk3 44444444 4 Good
pdisk4 55555555 3 Good
pdisk5 66666666 2 Good
pdisk6 77777777 1 Good
pdisk7 88888888 0 Good
pdisk8 99999999 0 3 Good
pdisk9 10000000 1 2 Good
{MORE}

F3=Cancel F10=Exit
```

Note that the missing disk drive module (pdisk2) is represented by a line of question marks.

- b. If you have just made changes to or have just turned on the system unit, you might need to wait up to 30 seconds before detailed information about the SSA network becomes available to the service aids.
4. When you have solved a problem, press **F3 (Esc and 3** on some consoles) to leave the display; then press Enter to reselect it. The display shows the new status of the SSA links.

Configuration Verification Service Aid

The Configuration Verification service aid enables you to determine the relationship between SSA logical units (hdisks) and SSA physical disk drives (pdisks). It also displays the connection information and operational status of the disk drives.

Note: User applications communicate with the hdisks; error data is logged against the pdisks.

To use the Configuration Verification service aid:

1. Select Configuration Verification from the SSA Service Aids menu to display a list of pdisks and hdisks (see “Starting the SSA Service Aids” on page 7-31).

```
SSA SERVICE AIDS 802380

CONFIGURATION VERIFICATION 802390
Move cursor onto selection, then press Enter.

{TOP}
pdisk0 22222222 00-03-P 2 GB SSA F Physical Disk Drive
pdisk1 33333333 00-05-P 2 GB SSA F Physical Disk Drive
pdisk2 44444444 00-07-P 2 GB SSA F Physical Disk Drive
hdisk3 22222222 00-03-L SSA Logical Disk Drive
hdisk4 33333333 00-05-L SSA Logical Disk Drive
hdisk5 44444444 00-07-L SSA Logical Disk Drive

{BOTTOM}
F3=Cancel F10=Exit
```

2. Select the hdisk or pdisk that you want to test.
3. If you select an hdisk, a list of pdisks is displayed:

```

SSA SERVICE AIDS 802380
CONFIGURATION VERIFICATION 802390
CONFIGURATION VERIFICATION 802391
  hdisk3  22222222  00-03-L  SSA Logical Disk Drive
To set or reset Identify, move cursor onto selection, then press enter.
Physical  Serial#  Adapter  Port  SSA_Addr  Status
{TOP}
pdisk0    22222222  00-02    A1     5         Good
           00-02    A2     5         Good
           00-03    A1    10         Good
           00-03    A2     0         Good
{BOTTOM}
F3=Cancel  F10=Exit

```

If you select a pdisk, a list of hdisks is displayed:

```

SSA SERVICE AIDS 802380
CONFIGURATION VERIFICATION 802390
CONFIGURATION VERIFICATION 802392
  pdisk0  22222222  00-03-P  2 GB SSA F Physical Disk Drive
Move cursor onto selection, then press Enter.
  hdisk3  22222222  00-03-L  SSA Logical Disk Drive
{BOTTOM}
F3=Cancel  F10=Exit

```

Note: If you select the hdisk from this screen, the hdisk configuration is displayed.

Format Disk Service Aid

The Format Disk service aid formats SSA disk drive modules.

Attention: Formatting a disk drive module destroys all the data on that module. Use this procedure only when instructed to do so by the service procedures.

To use the Format Disk service aid:

1. Select Format Disk from the SSA Service Aids menu (see “Starting the SSA Service Aids” on page 7-31). A list of pdisks is displayed:

```
SSA SERVICE AIDS                                     802380
FORMAT DISK                                           802395
Move cursor onto selection, then press Enter.
{TOP}
pdisk0  11111111  00-04-P      2 GB SSA F Physical Disk Drive
pdisk1  22222222  00-04-P      2 GB SSA F Physical Disk Drive
pdisk2  33333333  00-04-P      2 GB SSA F Physical Disk Drive
pdisk3  44444444  00-04-P      2 GB SSA F Physical Disk Drive
pdisk4  55555555  00-04-P      2 GB SSA F Physical Disk Drive
pdisk5  66666666  00-04-P      2 GB SSA F Physical Disk Drive
pdisk6  77777777  00-04-P      2 GB SSA F Physical Disk Drive
pdisk7  88888888  00-04-P      2 GB SSA F Physical Disk Drive
pdisk8  99999999  00-04-P      2 GB SSA F Physical Disk Drive

{BOTTOM}
F3=Cancel      F10=Exit
```

2. Select the pdisk that you want to format. The following instructions are displayed:

```
SSA SERVICE AIDS                                802380
FORMAT DISK                                     802395
FORMAT DISK                                     802396
pdisk1  22222222  00-04-P      2 GB SSA F Physical Disk Drive
Set or Reset Identify.
Select this option to set or reset the Identify indicator
on the disk drive.
Format.
Select this option only if you are sure that you have selected
the correct disk drive.
FORMATTING DESTROYS ALL DATA ON THE DISK DRIVE.

F3=Cancel      F10=Exit
```

3. If you are not sure of the identification (pdisk number) of the disk drive module that you want to format, use the identify function to get a positive physical identification of the module (see "The Identify Function" on page 7-31). You can further ensure that you have selected the correct disk drive module by verifying that the serial number on the front of the disk drive module is the same as the serial number that is displayed on the screen.
4. When you are sure that you have selected the correct disk drive module, select Format.

Certify Disk Service Aid

The Certify Disk service aid verifies that all the data on a disk drive module can be read correctly. Instruction given elsewhere in this book tell you when you need to run this service aid.

To use the Certify Disk service aid:

1. Select Certify Disk from the SSA Service Aids menu (see “Starting the SSA Service Aids” on page 7-31). A list of pdisks is displayed:

```
SSA SERVICE AIDS                                     802380
-----
CERTIFY DISK                                         802404
Move cursor onto selection, then press Enter.

{TOP}
pdisk0  11111111  00-04-P      2 GB SSA F Physical Disk Drive
pdisk1  22222222  00-04-P      2 GB SSA F Physical Disk Drive
pdisk2  33333333  00-04-P      2 GB SSA F Physical Disk Drive
pdisk3  44444444  00-04-P      2 GB SSA F Physical Disk Drive
pdisk4  55555555  00-04-P      2 GB SSA F Physical Disk Drive
pdisk5  66666666  00-04-P      2 GB SSA F Physical Disk Drive
pdisk6  77777777  00-04-P      2 GB SSA F Physical Disk Drive
pdisk7  88888888  00-04-P      2 GB SSA F Physical Disk Drive
pdisk8  99999999  00-04-P      2 GB SSA F Physical Disk Drive

{BOTTOM}
F3=Cancel      F10=Exit
```

2. Select the pdisk that you want to certify. The following instructions are displayed:

```
SSA SERVICE AIDS                                802380
CERTIFY DISK                                    802404
CERTIFY DISK                                    802405
  pdisk1  22222222  00-04-P      2 GB SSA F Physical Disk Drive
Move cursor onto selection, then press Enter.
Set or Reset Identify.
  Select this option to set or reset the Identify indicator
  on the disk drive.
Certify.
  Select this option to start the Certify operation.

F3=Cancel      F10=Exit
```

3. If you are not sure of the identification (pdisk number) of the disk drive module that you want to format, use the identify function to get a positive physical identification of the module (see "The Identify Function" on page 7-31). You can further ensure that you have selected the correct disk drive module by verifying that the serial number on the front of the disk drive module is the same as the serial number that is displayed on the screen.
4. When you are sure that you have selected the correct disk drive module, select Certify

Service Aid Error Codes


If the SSA service aids detect an unrecoverable error and are unable to continue, one of the following error codes might occur.

- SSA01** Not enough using-system memory is available for this service aid to continue. Take one of the actions described here:
- This problem might be caused by a failed application program. Ask the user to end any failed application program, then try to run the service aid again.
 - Run diagnostics in the problem determination mode on the system unit. If you find any problems, solve them; then try to run the service aid again.
 - Close down and reboot the using system; then try to run the service aid again.
 - Run diagnostics from diskette or CD-ROM to isolate the problem. If you do not find a problem, the operating system might have failed.
- SSA02** An unknown error has occurred. Take one of the actions described here:
- Run diagnostics in the problem determination mode to the system unit. If you find any problems, solve them; then try to run the service aid again.
 - If diagnostics fail or if the same problem occurs when you try the service aid again, run the diagnostics from diskette or CD-ROM to isolate the problem. If you do not find a problem, the operating system might have failed.
- SSA03** The service aid was unable to open an hdisk. This problem might have occurred because a disk drive module has failed or has been removed from the system. Take the actions described here:
1. Use the Configuration Verification service aid (see “Configuration Verification Service Aid” on page 7-43) to determine the location code of the SSA adapter to which the hdisk is attached. (For example, if the location code of the hdisk is 00-03-L, the location code of the SSA adapter is 00-03.)
 2. Run the Link Verification service aid (see “Link Verification Service Aid” on page 7-39) to the SSA adapter.
 3. If a link failure is indicated by the service aid, go to “SSA Maintenance Analysis Procedures (MAPS)” in &sgtitle..
 4. If no link failures are indicated, run the diagnostics in the system verification mode to each pdisk that is attached to the SSA adapter.

Using the Service Aids for SSA-Link Problem Determination

If you have a problem with an SSA link, use the Link Verification service aid (see "Link Verification Service Aid" on page 7-39). The following examples show various loops and the associated information that is displayed by the Link Verification service aid.

Example 1. Normal Loops In the following diagram, eight disk drive modules are connected to connectors A1 and A2 of the SSA adapter. Five disk drive modules are connected to connectors B1 and B2 of the same SSA adapter.

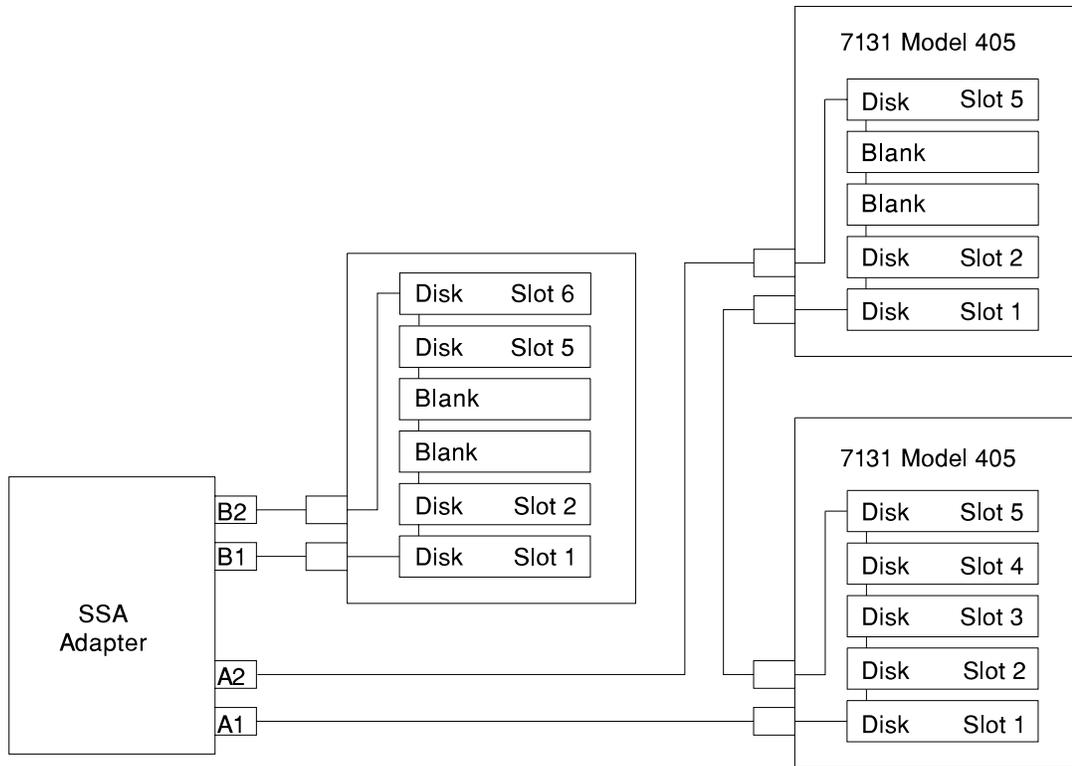

For this example, the Link Verification service aid displays the following information:

```

LINK VERIFICATION 802386
SSA Link Verification for:
  ssa1  00-05  SSA ADAPTER

To set or reset Identify, move cursor onto selection, then press Enter.

Physical  Serial#      Adapter Port              Status
          Serial#      A1  A2  B1  B2
{TOP}
pdisk0    nnnnnnnn    0   7
pdisk1    nnnnnnnn    1   6
pdisk2    nnnnnnnn    2   5
pdisk3    nnnnnnnn    3   4
pdisk4    nnnnnnnn    4   3
pdisk5    nnnnnnnn    5   2
pdisk6    nnnnnnnn    6   1
pdisk7    nnnnnnnn    7   0
pdisk8    nnnnnnnn           0  3
pdisk9    nnnnnnnn           1  2
{MORE}

F3=Cancel      F10=Exit


```

Note: Scroll the display to see all the connected disk drive modules.

Example 2. Broken Loop (Cable Removed): Each disk drive module normally communicates with the adapter through one data path. Because data can pass around the loop in either direction, however, the adapter automatically reconfigures the loop to enable communication to continue to each disk drive if the loop becomes broken.

In the following diagram, eight disk drive modules should be connected to connectors A1 and A2 of the SSA adapter. However, the loop is broken because the SSA cable has been disconnected from connector A2. Four disk drive modules are connected to connectors B1 and B2 of the same SSA adapter.

Although the broken loop is reported as an error, all the disk drive modules can still communicate with the using system. The eight disk drive modules can communicate through connector A1 of the SSA adapter . The five disk drive modules can communicate through connectors B1 and B2 of the same SSA adapter (normal loop).

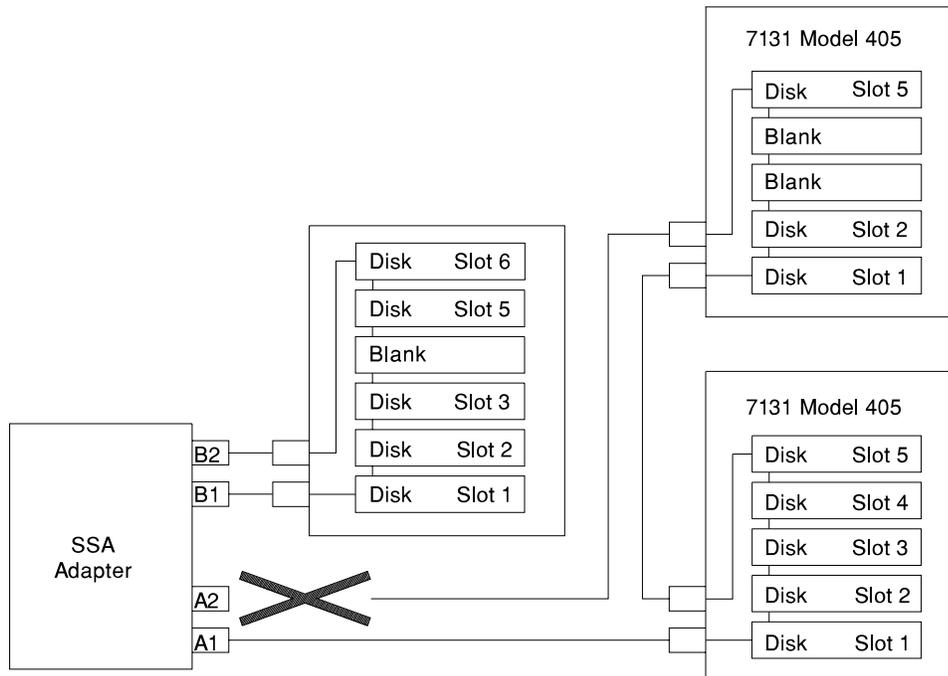

For this example, the Link Verification service aid displays the following information:

```
LINK VERIFICATION 802386
SSA Link Verification for:
  ssa1  00-05  SSA ADAPTER

To set or reset Identify, move cursor onto selection, then press Enter.


Physical  Serial#      Adapter Port
                                     A1  A2  B1  B2
                                     Status
{TOP}
pdisk0  nnnnnnnn    0
pdisk1  nnnnnnnn    1
pdisk2  nnnnnnnn    2
pdisk3  nnnnnnnn    3
pdisk4  nnnnnnnn    4
pdisk5  nnnnnnnn    5
pdisk6  nnnnnnnn    6
pdisk7  nnnnnnnn    7
pdisk8  nnnnnnnn          0  3
pdisk9  nnnnnnnn          1  2
{MORE}

F3=Cancel      F10=Exit
```

Note that the column for adapter connector A2 shows no connections.

Example 3. Broken Loop (Disk Drive Module Removed): The following diagram shows eight disk drive modules connected to connectors A1 and A2 of the SSA adapter, but the loop is broken because disk drive module in slot 3 has been removed. Four disk drive modules are connected to connectors B1 and B2 of the same SSA adapter.

Although the missing disk drive module is reported as an error, all the remaining disk drive modules can still communicate with the using system. Two disk drive modules can communicate through connector A1 of the SSA adapter. Five disk drive modules can communicate through connector A2 of the SSA adapter. Five disk drive modules can communicate through connectors B1 and B2 of the same SSA adapter (normal loop).

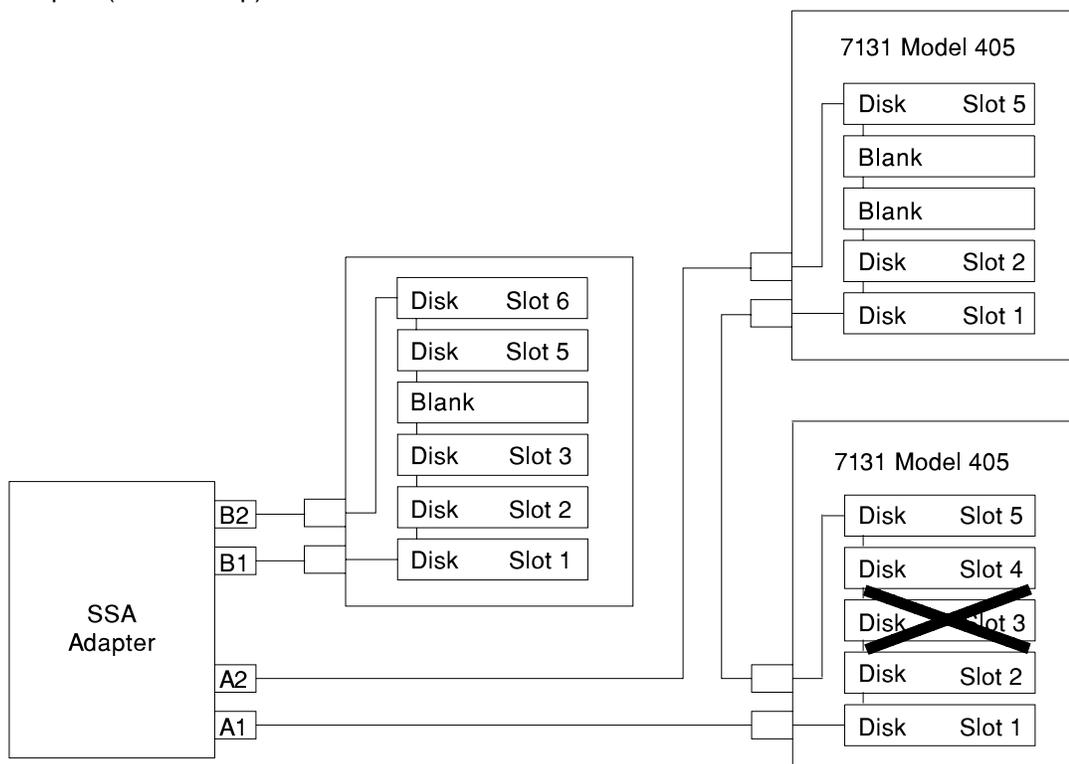

For this example, the Link Verification service aid displays the following information:

```
LINK VERIFICATION 802386
SSA Link Verification for:
  ssa1  00-05  SSA ADAPTER

To set or reset Identify, move cursor onto selection, then press Enter.

Physical  Serial#      Adapter Port
                                     A1  A2  B1  B2
{TOP}
pdisk0    nnnnnnnn    0
pdisk1    nnnnnnnn    1
?????
pdisk3    nnnnnnnn    4
pdisk4    nnnnnnnn    3
pdisk5    nnnnnnnn    2
pdisk6    nnnnnnnn    1
pdisk7    nnnnnnnn    0
pdisk8    nnnnnnnn    0  3
pdisk9    nnnnnnnn    1  2
{MORE}

F3=Cancel      F10=Exit
```

Note that the missing disk drive module (pdisk2) is represented by a line of question marks.

Finding the Physical Location of a Device

The physical location of a device (for example, a disk drive module or an SSA adapter) cannot be reported directly by the using system because of the way in which the SSA interface works. The address of an SSA device is related to the position of that device on the SSA loop. The address can, therefore, change if the configuration is changed.

Finding the Device When Service Aids Are Available

To help you to find the correct physical disk drive, the SSA service aids include an identify function. This function, when selected, causes the check light of the selected disk drive module to flash. For more details, see “SSA Service Aids” on page 7-30.

Some devices (for example, adapters) do not have check lights. To find such a device, you can either use the identify function to identify devices that are next to the SSA adapter on the SSA link, or use the procedure described in “Finding the Device When No Service Aids Are Available.”

Finding the Device When No Service Aids Are Available

When no service aids are available, you must find the device by using the port (P) and SSA-address (AA) values that are provided by some service request numbers (SRNs). Examples of these SRNs are 43nnn, 44nnn, and 45nnn, where nnn represents the PAA values.

The port (P) value can be a number from 0 to 3, which indicates the port connector on the SSA adapter:

- 0 = Connector A1
- 1 = Connector A2
- 2 = Connector B1
- 3 = Connector B2

The AA value is the decimal SSA-address value. It indicates the position of the device that you are trying to find (counted *along* the SSA link).

Use the port value to locate the relevant connector on the SSA adapter, then follow the SSA cable to the first disk drive module or adapter in the same SSA loop. Do not include dummy disk drive modules.

The first disk drive module or adapter that you reach represents SSA-address count 0. Continue to follow the SSA link from disk drive module or adapter, increasing the

SSA-address count by 1 for each device, until you reach the disk drive module or adapter that is indicated in the SRN.

Microcode Maintenance

Updates to the microcode are loaded into the using system from diskettes. If the level of the microcode that is stored in the using system is higher than the level of the microcode that is installed on the SSA adapter or the disk drive modules, the higher-level microcode is automatically downloaded to the adapter and disk drive modules when the using system runs the device configuration method.

For some problems, the service request number (SRN) might ask you to check the microcode package ID before you exchange any field-replaceable units (FRUs). You can determine the package ID for the adapter in either of the following two ways:

- On the command line, type the following command and press Enter:

```
lsattr -E -l <adapter> -a ucode
```

where *adapter* is the ID of the adapter that you want to check; for example, ssa0.

The response to this command is:

```
ucode 8F97.00.nn Name of adapter download False
```

where *nn* is the adapter code package ID.

- Use the Display or Change Configuration or Vital Product Data (VPD) service aid to display the VPD for the adapter. The first two characters of the ROS Level field contain the adapter code package ID.

To determine the ID of the microcode package that is being used on a disk drive module, use the Display or Change Configuration or Vital Product Data (VPD) service aid to display the VPD for the disk drive module. The first two characters of the ROS Level field contain the ID of the microcode package for the disk drive module.

Note: During the configuration of the complete system, all the VPD files in the system are updated *before* any microcode is downloaded from the using system to the 6-pack. If the using system later downloads a new level of microcode to the subsystem, the VPD for the adapter or disk drive module will not show the ID of the new microcode package until the next time the configuration manager command (**cfgmgr**) is run.

Vital Product Data (VPD)

The vital product data (VPD) for the system unit and for the SSA adapter can be displayed by using the using-system service aids. This section shows the types of information that are contained in the VPD.

Abbreviations used in this section are:

DRAM	Dynamic random-access memory
FRU	Field-replaceable unit
RAM	Random-access memory
ROM	Read-only memory
ROS	Read-only storage
SSA	Serial storage architecture

4.5 GB, and 9.1 GB SSA Disk Drives

Part number	Disk drive module part number
EC level	Disk enclosure engineering change level
Serial number	Disk enclosure serial number
Machine type and model	Type and model
Manufacturer	Manufacturer and plant code
ROS level and ID	ROM and RAM code revision levels
Device specific Z2	RAM code load part number
Device specific Z3	Electronics card assembly part number
Device specific Z4	Disk enclosure date of manufacture

SSA Adapter

Part number	Adapter card FRU part number
Serial number	Adapter card serial number
Engineering change level	Adapter card engineering change level
Manufacturing location	Manufacturer and plant code
ROS level and ID	Version of ROS code loaded on the adapter
Loadable microcode level	Version of loadable code needed for the satisfactory operation of this card

Device driver level	Minimum level of device driver needed for this level of card
Description of function	SSA adapter
Device specific (Z0)	If the adapter contains additional DRAM modules, Z0 indicates the total DRAM size in megabytes
Device specific (Z1)	If the adapter contains a pluggable fast-write cache module, Z1 indicates the cache size in megabytes

Chapter 8. Using the System Verification Procedure

The system verification procedure is used to check the system for correct operation.

When you are analyzing a hardware problem, you should use Chapter 9, "Hardware Problem Determination" on page 9-1.

Step 1. Considerations before Running This Procedure

Notes:

1. If this system unit is directly attached to another system unit or attached to a network, be sure communications with the other system unit is stopped.
2. This procedure requires use of all of the system resources. No other activity can be running on the system while you are doing this procedure.
 - This procedure requires a display connected to the video port or an ASCII terminal attached to the S1 port.
 - Before starting this procedure, you should stop all programs and the operating system.
 - This procedure runs the Online Diagnostics in Service mode or Standalone Diagnostics. If the Online Diagnostics are installed, they should be run. See the operator manual for your type of ASCII terminal to find the key sequences you need in order to respond to the diagnostics.
 - If you need more information about diagnostics see Chapter 6, "Using the Standalone and Online Diagnostics" on page 6-1.
 - If a console display is not selected, the diagnostics stop. The instructions for selecting a console display are displayed on all of the graphic displays and any terminal attached to the S1 port. Follow the displayed instructions to select a console display.
 - ISA adapters cannot be detected by the system. The ISA adapter Configuration Service Aid allows the identification and configuration of ISA adapters when running standalone diagnostics.
 - Go to Step 2.

Step 2. Loading the Diagnostics

1. Stop all application programs running on the operating system.
2. Stop the operating system.
3. Turn the power off.
4. If you are loading the Standalone Diagnostics and running them from an ASCII terminal:
 - The attributes for the terminal must be set to match the defaults of the diagnostics.
 - If you need to change any settings, record the normal settings, and be sure the terminal attributes are set to work with the diagnostics. If needed, see “Running the Diagnostics from a tty terminal” on page 6-3.
 - Return to substep 5 when you finish checking the attributes.
5. Turn the power on.
 - a. When the keyboard indicator appears, press F5 on the direct attached keyboard (5 on the ASCII keyboard) to load the Standalone Diagnostics or F6 on the directly-attached keyboard (6 on the ASCII terminal keyboard) to load the Online Diagnostics.
 - b. Enter any requested passwords.
 - c. Follow any instructions to select a console.
6. When the Diagnostic Operating Instructions display, go to Step 3. If you are unable to load the diagnostics, go to “Problem Determination When Unable to Load Diagnostics” on page 9-10.

Step 3. Running System Verification

The Diagnostic Operating Instructions should be displayed.

1. Press the Enter key.
2. If the terminal type has not been defined, you must use the `Initialize Terminal` option on the Function Selection menu to initialize the operating system environment before you can continue with the diagnostics.
3. If you want to do a general checkout without much operator action, Select the `Diagnostic Routines` option on the Function Selection menu.

If you want to do a more complete checkout including the use of wrap plugs, select the `Advanced Diagnostics` option on the Function Selection menu. The advanced diagnostics are primarily for the service representative; they may instruct you to install wrap plugs to better isolate a problem.
4. Select the `System Verification` option on the Diagnostic Mode Selection menu.
5. If you want to run a general checkout of all installed resources, Select the `System Checkout (if displayed)` option on the Diagnostic Selection menu.

If you want to check one particular resource, select that resource on the Diagnostic Selection menu.
6. Go to Step 4.

Step 4. Additional System Verification

The checkout programs end with either the `Testing Complete` menu and a message stating `No trouble was found` or the `A Problem Was Detected On (Time Stamp)` menu with an SRN.

1. Press Enter to return to the Diagnostic Selection menu.
2. If you want to check other resources, select the resource. When you have checked all of the resources you need to check, go to Step 5.

Step 5. Stopping the Diagnostics

1. If running Online diagnostics, the system first should be shut down using the following procedure:
 - a. Press F3 repeatedly until you get to the Diagnostic Operating Instructions, then follow the displayed instructions.
 - b. Press F3 once, and then follow the displayed instructions to shut down system.
2. If you changed any attributes on your ASCII terminal to run the diagnostics, change the settings back to normal.
3. This completes the system verification. Report the SRN to the service organization if you received one. To do a normal boot, turn off the system unit and wait 30 seconds, and then set the power switch of the system unit to On.

Chapter 9. Hardware Problem Determination

Problem Determination Using the Standalone or Online Diagnostics

Use this procedure to obtain a service request number (SRN) when you are able to load the Standalone or Online Diagnostics. If you are unable to load the Standalone or Online Diagnostics, go to “Problem Determination When Unable to Load Diagnostics” on page 9-10. The service organization uses the SRN to determine which field replaceable units (FRUs) are needed to restore the system to correct operation.

Step 1. Considerations before Running This Procedure

Note: See the operator manual for your ASCII terminal to find the key sequences you need to respond to the diagnostic programs.

- The diagnostics can use a display connected to the video port or a ASCII terminal attached to a serial port.
 - This procedure asks you to select the type of diagnostics you want to run. If you need more information about the types, see Chapter 6, “Using the Standalone and Online Diagnostics” on page 6-1.
 - ISA adapters cannot be detected by the system. The ISA adapter Configuration Service Aid allows the identification and configuration of ISA adapters for Standalone Diagnostics. ISA adapters must be identified and configured before they can be tested.
 - Go to “Step 2.”
-

Step 2

Are the Online Diagnostics installed on this system?

- NO** Go to “Step 15.”
- YES** Go to “Step 3.”

Step 3

Determine if the operating system is accepting commands.

Is the operating system accepting commands?

- NO** The system must be turned off in order to run diagnostics.
1. Verify with the system administration and users that the system may be turned off. If so, then turn off the system unit and go to "Step 6."
- YES** Go to "Step 4."
-

Step 4

Diagnostic tests can be run on many resources while the operating system is running. However, more extensive problem isolation is obtained by running Online diagnostics in Service mode.

Do you want to run the Online diagnostics in Service mode?

- NO** Go to "Step 5."
- YES** Do the following to shut down your system:
1. At the system prompt, stop the operating system using the proper command for your operating system.
 2. After the operating system is stopped, power off the system unit.
 3. Go to "Step 6."

Step 5

This step invokes the Online Diagnostics in concurrent mode.

1. Log on as root or as superuser.
2. Enter the diag command.
3. Wait until the Diagnostic Operating Instructions are displayed, or wait for three minutes.

Are the Diagnostic Operating Instructions displayed without any obvious console display problems?

- NO** Do the following to shut down your system:
1. At the system prompt, stop the operating system using the proper command for your operating system.
 2. After the operating system is stopped, power off the system unit.
 3. Go to "Step 6."
- YES** Go to "Step 10."

Step 6

This step loads Online diagnostics in service mode. If you are unable to load the diagnostics, go to "Step 7."

1. Turn the power on.
2. When the keyboard indicator (icon or text) appears, press F6 on the directly-attached keyboard or 6 on the ASCII terminal keyboard to indicate that diagnostics are to be loaded.
3. Enter any requested passwords.
4. Follow any instructions to select a console.

Did the Diagnostics Operating Instructions display without any obvious display problem?

- NO** Go to "Step 7."
- YES** Go to "Step 9."

Step 7

Starting at the top of the following table, find your symptom and follow the instructions given in the Action column.

Symptom	Action
Display problem.	Go to "Step 8."
All other symptoms.	Go to "Problem Determination When Unable to Load Diagnostics" on page 9-10

Step 8

The following steps analyze a console display problem.

Find your type of console display in the following table, then follow the instructions given in the Action column.

Console Display	Action
Display Device	Go to the display documentation for problem determination.
ASCII terminal	Go to the documentation for problem determination for this type of terminal.

Step 9

The diagnostics loaded correctly.

Press the Enter key.

Is the Function Selection menu displayed?

NO Go to "Step 10."

YES Go to "Step 11."

Step 10

There is a problem with the keyboard.

Find the type of keyboard you are using in the following table, then follow the instructions given in the Action column.

Keyboard Type	Action
101-key keyboard. Identify by the type of Enter key used. The Enter key is within one horizontal row of keys.	Record error code M0KBD001 and report the problem to the service organization.
102-key keyboard. Identify by the type of Enter key used. The Enter key extends into two horizontal rows of keys.	Record error code M0KBD002 and report the problem to the service organization.
Kanji keyboard. Identify by the Japanese characters.	Record error code M0KBD003 and report the problem to the service organization.
ASCII-terminal keyboard. This applies to all attached terminals.	Go to the documentation for problem determination for this type terminal.

Step 11

1. If the terminal type has not been defined, you must use the `Initialize Terminal` option on the Function Selection menu to initialize the operating system environment before you can continue with the diagnostics. This is a separate and different operation than selecting the console display.
2. Select `Diagnostic Routines`.
3. Press the `Enter` key.
4. In the following table, find the menu or system response you received when you selected `Diagnostics`. Follow the instructions given in the `Action` column.

System Response	Action
The Diagnostic Mode Selection menu is displayed.	Select <code>Problem Determination</code> and go to "Step 12."
The Missing Resource menu is displayed.	Follow the displayed instructions until either the Diagnostic Mode Selection menu or an SRN is displayed. If the Diagnostic Mode Selection menu is displayed, select <code>Problem Determination</code> and go to "Step 12." If you get an SRN, record it, and go to "Step 14."
The New Resource menu is displayed.	Follow the displayed instructions. Note: Devices attached to serial ports S1 or S2 will not appear on the New Resource menu. Also, ISA adapters do not appear unless they have been identified and configured. If the Diagnostic Mode Selection menu is displayed, select <code>Problem Determination</code> and go to "Step 12." If you get an SRN, record it, and go to "Step 14." If you do not get an SRN, go to "Step 17."
The system does not respond to selecting diagnostics	Go to "Step 10."

Step 12

Did the Diagnostic Selection Menu display?

- NO** If Problem Determination was selected from the Diagnostic Mode Selection menu, and if a recent error has been logged in the error log, the diagnostics will automatically begin testing the resource.
- Follow the displayed instructions.
- If the No Trouble Found screen is displayed, press Enter.
- If another resource is tested, repeat this step.
- If the Diagnostic Selection menu is displayed, go to “Step 13.”
- If an SRN is displayed, record it, and go to “Step 14.”
- YES** Go to “Step 13.”

Step 13

The system checkout option checks most of the configured adapters and devices.

Notes:

1. System checkout is only supported in Online Diagnostics in Service Mode.
2. ISA adapters cannot be detected by the system. The ISA adapter Configuration Service Aid allows the identification and configuration of ISA adapters for Standalone Diagnostics. ISA adapters must be identified and configured before they can be tested.

Select and run the diagnostic tests on the resources you are having problems with or run system checkout to check all of the configured resources. Find the response in the following table and take the Action for it.

Diagnostic Response	Action
An SRN is displayed.	Go to "Step 14."
The system hangs.	Report SRN 109-200.
The Testing Complete menu and the No trouble was found message is displayed, and you have not tested all of the resources.	Press Enter and continue with the testing.
The Testing Complete menu and the No trouble was found message displayed and you have tested all of the resources.	Go to "Step 17."

Step 14

The diagnostics produced an SRN for this problem.

1. Record the SRN and other numbers read out.
2. Report the SRN to the service organization.
3. **STOP.** You have completed these procedures.

Step 15

When you are loading the Standalone Diagnostics, the attributes for the terminal must be set to match the defaults of the diagnostic programs. The ASCII terminal must be attached to serial port 1 on the system unit.

Are you going to load Standalone Diagnostics and run them from a ASCII terminal?

NO Go to "Step 16."

YES Go to "Running the Diagnostics from a tty terminal" on page 6-3 and be sure your terminal attributes are set to work with the diagnostic programs.

Return to "Step 16" when you finish checking the attributes. Record any settings that are changed.

Step 16

This step loads the Standalone Diagnostics. If you are unable to load the diagnostics, go to “Step 7.”

1. Turn the power on.
2. Insert the diagnostic CD-ROM into the CD-ROM drive.
3. When the keyboard indicator appears, press F5 on the direct attached keyboard or 5 on the ASCII keyboard to indicate that diagnostics are to be loaded.
4. Enter any requested passwords.
5. Follow any instructions to select a console.

Did the Diagnostics Operating Instructions display without any obvious display problem?

NO Go to “Step 7.”

YES Go to “Step 9.”

Step 17

The diagnostics did not find a hardware problem. If you still have a problem, contact your software support center.

Problem Determination When Unable to Load Diagnostics

Use this procedure to obtain an error code. The service organization uses the error code to determine which field replaceable units (FRUs) are needed to restore the system to correct operation.

Step 1. Considerations before Running This Procedure

- The diagnostics can use a display connected to the video port or a ASCII terminal attached to a serial port.
 - Go to "Step 2."
-

Step 2

Are the Online Diagnostics installed on this system?

NO Go to "Step 4."

YES Go to "Step 3."

Step 3

This step attempts to load Online diagnostics in service mode.

1. Turn the power to off.
2. Turn the power on.
3. If the keyboard indicator appears, press F6 on the direct attached keyboard or 6 on the ASCII keyboard to indicate that diagnostics are to be loaded.
4. Enter any requested passwords.
5. Follow any instructions to select a console.
6. Wait until the diagnostics load or the system appears to stop.

Did the diagnostics load?

NO Go to "Step 5."

YES Go to "Step 6."

Step 4

This step attempts to load the Standalone diagnostics.

1. Turn the power to off.
2. Turn the power to on.
3. Insert the diagnostic CD-ROM into the CD-ROM drive.
4. If the keyboard indicator appears, press F5 on the direct attached keyboard or 5 on the ASCII keyboard to indicate that diagnostics are to be loaded.
5. Enter any requested passwords.
6. Follow any instructions to select a console.
7. Wait until the diagnostics load or the system appears to stop.

Did the diagnostics load?

NO Go to "Step 5."

YES Go to "Step 6."

Step 5

Starting at the top of the following table, find your symptom and follow the instructions given in the Action column.

Symptom	Action
The power enable LED is off with the system plugged into an electrical outlet.	Check the power cable to the outlet. Check the circuit breakers and check for power at the outlet. If you do not find a problem, record error code M0PS0000 and report the problem to the service organization.
The power good LED does not come on, or comes on and does not stay on.	Check the power cable to the outlet. Check the circuit breakers and check for power at the outlet. Assure the room temperature is within 60 - 90°F. If you do not find a problem, record error code M0PS0000 and report the problem to the service organization.
The system appears to be stopped, the disk activity light is off and a beep was NOT heard from the system unit.	Processor POST failure. Report error code M0CPU000.
The system appears to be stopped and the disk activity light is on continuously and a beep was NOT heard from the system unit.	No good memory could be found. Report error code M0MEM000.
The system appears to be stopped and the disk activity light is on continuously and a beep was heard from the system unit.	No good memory could be found. Report error code M0MEM001.
The diagnostics are loaded and there was no beep heard from the system unit during the IPL sequence.	Record error code M0SPK001.
The system stops with the Diagnostic Operating Instructions displayed.	Go to "Step 6."
The disk drive activity light is blinking rapidly.	The flash EPROM data is corrupted. The recovery procedure for the flash EPROM should be executed.
The system stops with a prompt to enter a password.	Enter the password. You are not allowed to continue until a correct password has been entered. When you have entered a valid password, wait for one of the other conditions to occur.
The system stops with an eight-digit error code(s) displayed on the console.	Record the error code(s) and report the problem to the service organization.

Symptom	Action
The system login prompt is displayed.	<p>You may not have pressed the correct key or you may not have pressed the key soon enough when you were to indicate a Service Mode boot of diagnostic programs. If this was the case, start over at the beginning of this step.</p> <p>If you are sure you pressed the correct key in a timely manner go to Step 7.</p>
One long beep followed immediately by a short beep was heard from the system unit.	Record error code M0GA0000 and report the problem to the service organization.
A continuous beep is heard from the system unit.	Record error code M0SB0000 and report the problem to the service organization.
The system does not respond when the password is entered.	Go to Step 7.
The system stopped and an indicator is displayed on the system console and an eight-digit error code is not displayed.	<p>If the indicator (text or icon) represents:</p> <ul style="list-style-type: none"> • a keyboard, record error code M0KBD000 and report the problem to the service organization. • boot disk, record error code M0HD0000 and report the problem to the service organization. • memory, record error code M0MEM002 and report the problem to the service organization. • a diskette drive, record error code M0MEM002 and report the problem to the service organization. • SCSI, record error code M0CON000 and report the problem to the service organization.

Symptom	Action
The System Management Services menu is displayed.	<p>The device or media you are attempting to boot from may be faulty.</p> <ol style="list-style-type: none"> 1. Check the SMS error log for any errors. To check the error log: <ul style="list-style-type: none"> • Choose tools • Choose error log • If an error is logged, check the time stamp. • If the error was logged during the current boot attempt, record it and report it to your service person. • If no recent error is logged in the error log, continue to the next step below. 2. If you are attempting to load the Online Diagnostics, try loading the Standalone Diagnostics. Otherwise, record error code M0SCSI01 and report to the service organization.
The system appears to be stopped, the disk activity light is on continuously, and a beep was heard from the system unit.	Record error code M0MEM001 and report the problem to the service organization.
The system stops and the message "STARTING SOFTWARE PLEASE WAIT ..." is displayed.	Report error code M0SCSI01.
The message "The system will now continue the boot process" is displayed continuously on the system unit's console.	Report error code M0SCSI01.

Step 6

The diagnostics loaded correctly.

Go to “Problem Determination Using the Standalone or Online Diagnostics” on page 9-1.

Step 7

There is a problem with the keyboard.

Find the type of keyboard you are using in the following table, then follow the instructions given in the Action column.

Keyboard Type	Action
101-key keyboard. Identify by the type of Enter key used. The Enter key is within one horizontal row of keys.	Record error code M0KBD001 and report the problem to the service organization.
102-key keyboard. Identify by the type of Enter key used. The Enter key extends into two horizontal rows of keys.	Record error code M0KBD002 and report the problem to the service organization.
Kanji keyboard. Identify by the Japanese characters.	Record error code M0KBD003 and report the problem to the service organization.
ASCII-terminal keyboard. This applies to all attached terminals.	Go to the documentation for problem determination for this type terminal.

Chapter 10. SSA Problem Determination Procedures

Problem determination procedures are provided by power-on self-tests (POSTs), service request numbers (SRNs), and maintenance analysis procedures (MAPs). Some of these procedures use the using system service aids that are described in “SSA Service Aids” on page 7-30.

Disk Drive Module Power-On Self-Tests (POSTs)

Attention: Disk drive modules are fragile. Handle them with care. Follow all ESD-sensitive parts procedures when handling disk drive modules. For ESD information, see “Handling Static-Sensitive Devices” on page 5-3.

The disk drive module POSTs start each time the module is switched on or when a **Send Diagnostic** command is received from the SSA adapter. They check whether the disk drive module is working correctly. The POSTs also help verify a repair after a FRU has been exchanged.

There are two power-on self-tests: POST-1 and POST-2.

POST-1 runs immediately after the ‘power-on reset’ line goes inactive, and before the disk drive module motor starts. POST-1 includes tests of the:

- Microprocessor
- ROM
- Safety circuits

If POST-1 completes successfully, POST-2 is enabled.

If POST-1 fails, the disk drive module check light stays on, and the disk drive module is not configured into the SSA network.

POST-2 runs after the disk drive module motor has started. POST-2 includes tests of:

- Motor control
- Servo control
- Read and write on the diagnostic cylinder (repeated for all heads)
- Error checking and correction (ECC)

If POST-2 completes successfully, the disk drive module is ready for use by the using system.

Adapter Power-On Self-Tests (POSTs)

Two power-on self-tests (POSTs) are resident in the SSA adapter. The tests are POST-1 and POST-2.

POST-1 tests all the functions that are necessary to enable the adapter to communicate with the Micro Channel. POST-1 can fail for either of two reasons:

- A hardware error has been detected. In such instances, the POST code enters a tight loop, and does not put the identification of the SSA adapter into the programmable option select (POS) registers. If this error occurs, the SSA adapter must be exchanged for a new one.
- The flash erasable programmable read-only memory (EPROM) has a check sum that is not valid. This error can be caused if the power fails while microcode is being downloaded. In such instances, the POST checks all the hardware that is needed to download the microcode. If all the hardware is correct, the POST sets the ROS level to zero, puts the identification of the SSA adapter into POS 0-1, and puts error data into the adapter status register.

To recover from this type of error, microcode must be downloaded to the SSA adapter. If the using system can have an initial program load (IPL) without the adapter, the configuration code detects the down-level ROS code and downloads the latest level of code. The configuration code then uses control register bit 7 to reset the adapter and restart POST-1.

If no error is detected during POST-1, the identification of the SSA adapter is put into the POS registers, and POST-2 is started.

POST-2 tests the remaining hardware on the SSA adapter card and tests the other FRUs that are attached to the adapter. If this test fails, an error code is saved and sent to the using-system error log when the error logger becomes available. An internal health check continues to send the error code at regular intervals.

Service Request Numbers (SRNs)

Service request numbers (SRNs) are generated for the SSA Hot-Swap Disk Drive by the system error-log analysis, system configuration code, diagnostics, and customer problem-determination procedures. SRNs help you to identify the cause of a problem, the failing field-replaceable units (FRUs), and the service actions that might be needed to solve the problem.

The SRN Table

Table 10-1 on page 10-6 lists the SRNs and describes the actions you should perform. The table columns are:

SRN	The service reference number
FRU list	The FRU or FRUs that might be causing the problem (see also “FRU Names Used in the SRN Table” on page 10-5)
%	How likely it is (by percentage) that the FRU is causing the problem
Problem	A description of the problem and the action you must take

Abbreviations used in the table are:

DMA	Direct memory access
FRU	Field-replaceable unit
IOCC	Input/output channel controller
POS	Programmable option select (POS registers)
POST	Power-on self-test
PAA	P = adapter port number AA = SSA address

Using the SRN Table

Important: You should have been sent here from “SSA Maintenance Analysis Procedures (MAPs).” Do not start problem determination from the SRN table; always go to “SSA Maintenance Analysis Procedures (MAPs)” on page 10-16 first.

1. Locate the SRN in the table. If you cannot find the SRN, you have a problem with the diagnostics, the microcode, or the documentation. Call your support center for assistance.
2. Read carefully the “Action” you must perform for the problem. *Do not exchange FRUs unless you are instructed to do so.*

3. Normally exchange only one FRU at a time, starting from the top of the FRU list for that SRN. Always use instructions given in the page reference when exchanging FRUs. After each FRU is exchanged, go to "MAP 410: Repair Checkout" in IBM RS/6000 Diagnostic Information for Multiple Bus Systems to verify the repair.

Software and Microcode Errors

Some SRNs indicate that a problem might have been caused by a software error or by a microcode error. If you have one of these SRNs, perform the following actions:

1. Make a note of the contents of the error log for the device that has the problem.
2. Go to the using-system service aids and select Display Vital Product Data to display the VPD of the failing system. Make a note of the VPD for all the SSA adapters and disk drive modules.
3. Report the problem to your support center. The center can tell you whether you have a known problem and can, if necessary, provide you with a correction for the software or microcode.

FRU Names Used in the SRN Table

This section provides a glossary of the FRU names used.

<i>FRU Name in Table</i>	<i>Definition</i>
Backplane assembly	The disk drive modules, blank disk drive modules, and internal SSA cables, are connected to the backplane assembly.
Disk drive module	A disk drive assembly to a carrier that plugs into the backplane in the system unit.
Blank Disk drive module	This module must be installed in a slot that does not contain a disk drive module. This completes the SSA loop through the system unit.
External SSA cable	A cable that connects the bulkhead to the SSA adapter or to an SSA subsystem.
Internal SSA cable	Attaches the backplane to the SSA adapter card.
SSA adapter card	The SSA adapter card, which is located in the using system.

SRN	FRU List	%	Problem
10101	Disk drive module (See "Removing an SSA Disk Drive from Bank C, D, or E" on page 5-96 and "Installing an SSA Disk Drive in Bank C, D, or E." on page 5-56.)	100	Description: Disk drive motor stopped. The disk drive module is bad. Action: If this SRN was received by one disk drive module only, then exchange that disk drive module.
10112	None	–	Description: Format degraded. A format operation has been ended before it has completed. Action: Use the Format service aid to format the disk drive module.
1xxxx	Disk drive module (See "Removing an SSA Disk Drive from Bank C, D, or E" on page 5-96 and "Installing an SSA Disk Drive in Bank C, D, or E." on page 5-56.)	100	Description: Disk drive module error. Action: Exchange the FRU for a new FRU. Note: In this SRN, an x represents a digit from 0 to F.
20PAA	Disk drive module (See "Removing an SSA Disk Drive from Bank C, D, or E" on page 5-96 and "Installing an SSA Disk Drive in Bank C, D, or E." on page 5-56.)	45	Description: An open SSA link has been detected. Action: Run the Link Verification service aid to isolate the failure. See "Link Verification Service Aid" on page 7-39. If the SSA service aids are not available: <ul style="list-style-type: none">When the failing device is an SSA Hot-Swap Disk Drive, go to "SSA Maintenance Analysis Procedures (MAPs)" on page 10-16.When the failing device is not an SSA Hot-Swap Disk Drive, go to the service information for that device.
	SSA adapter card (See the installation and service guide for the using system.)	45	
	External SSA Cables	6	
	Backplane assembly (See "Installing an SSA Backplane in Bank D or E." on page 5-76.)	2	
21PAA to 29PAA	Disk drive module (See "Removing an SSA Disk Drive from Bank C, D, or E" on page 5-96 and "Installing an SSA Disk Drive in Bank C, D, or E." on page 5-56.)	45	Description: An SSA threshold-exceeded-link error has been detected. Action: Run the Link Verification service aid to isolate the failure. See "Link Verification Service Aid" on page 7-39. If the SSA service aids are not available: <ul style="list-style-type: none">When the failing device is an SSA Hot-Swap Disk Drive, go to "SSA Maintenance Analysis Procedures (MAPs)" on page 10-16.When the failing device is not an SSA Hot-Swap Disk Drive, go to the service information for that device.
	SSA adapter card (See the installation and service guide for the using system.)	45	
	External SSA Cables	6	
	Backplane assembly (See "Installing an SSA Backplane in Bank D or E." on page 5-76.)	2	
	Internal SSA Cable	2	

<i>Table 10-1 (Page 2 of 9). Service Request Numbers</i>			
SRN	FRU List	%	Problem
2A002	Disk drive module (See “Removing an SSA Disk Drive from Bank C, D, or E” on page 5-96 and “Installing an SSA Disk Drive in Bank C, D, or E.” on page 5-56.)	50	<p>Description: Async code 02 has been received. A software error has probably occurred.</p> <p>Action: Go to “Software and Microcode Errors” on page 10-5 before exchanging any FRUs.</p>
	SSA adapter card (See the installation and service guide for the using system.)	50	
2A003	Disk drive module (See “Removing an SSA Disk Drive from Bank C, D, or E” on page 5-96 and “Installing an SSA Disk Drive in Bank C, D, or E.” on page 5-56.)	50	<p>Description: Async code 03 has been received. A software error has probably occurred.</p> <p>Action: Go to “Software and Microcode Errors” on page 10-5 before exchanging any FRUs.</p>
	SSA adapter card (See the installation and service guide for the using system.)	50	
2A004	Disk drive module (See “Removing an SSA Disk Drive from Bank C, D, or E” on page 5-96 and “Installing an SSA Disk Drive in Bank C, D, or E.” on page 5-56.)	50	<p>Description: Async code 04 has been received. A software error has probably occurred.</p> <p>Action: Go to “Software and Microcode Errors” on page 10-5 before exchanging any FRUs.</p>
	SSA adapter card (See the installation and service guide for the using system.)	50	
2A005	Backplane (See “Installing an SSA Backplane in Bank D or E.” on page 5-76.)	–	<p>Description: Async code 05 has been received. This code indicates that a disk drive module has detected a loss of power.</p> <p>Action: Use the Link Verification service aid (see “Link Verification Service Aid” on page 7-39) to determine if any devices are missing from the SSA link.</p> <ul style="list-style-type: none"> • If a device is missing, go to “SSA Maintenance Analysis Procedures (MAPs)” on page 10-16 to isolate the problem. • If no device is missing, the problem might have been caused by a temporary, or partial, loss of power to the SSA Hot-Swap Disk Drive.

Table 10-1 (Page 3 of 9). Service Request Numbers

SRN	FRU List	%	Problem
2A006	<p>Disk drive module (See “Removing an SSA Disk Drive from Bank C, D, or E” on page 5-96 and “Installing an SSA Disk Drive in Bank C, D, or E.” on page 5-56.)</p> <p>Backplane (See “Installing an SSA Backplane in Bank D or E.” on page 5-76.)</p>	70 30	<p>Description: Async code 06 has been received. This code indicates that a disk drive module has detected the loss of one of its power inputs.</p> <p>Action:</p> <ul style="list-style-type: none"> • If the failing device is an SSA Hot-Swap Disk Drive, go to “SSA Maintenance Analysis Procedures (MAPs)” on page 10-16, exchange the disk drive module. • If the failing device is not an SSA Hot-Swap Disk Drive, go to the service information for that device.
2A106	<p>Backplane assembly (See “Installing an SSA Backplane in Bank D or E.” on page 5-76.)</p>	100	<p>Description: Async code 06 has been received. This code indicates that multiple disk drive modules have detected the loss of one of its their power inputs.</p> <p>Action:</p> <ul style="list-style-type: none"> • If the failing devices are SSA Hot-Swap Disk Drives, exchange the backplane. • If the failing devices are not SSA Hot-Swap Disk Drives, go to the service information for those devices.
2A206	<p>Disk drive module (See “Removing an SSA Disk Drive from Bank C, D, or E” on page 5-96 and “Installing an SSA Disk Drive in Bank C, D, or E.” on page 5-56.)</p>	100	<p>Description: A disk drive module has detected that one of its SSA links has failed the POSTs.</p> <p>Action:</p> <ol style="list-style-type: none"> 1. Use the Link Verification service aid (see “Link Verification Service Aid” on page 7-39) to determine where the SSA link is broken. 2. Run diagnostics in the system verification mode to the two disk drive modules that are nearest to, and on each side of, the place where the link is broken. The diagnostics show which disk drive module detected the problem.
2FFFF	None	–	<p>Description: An async code that is not valid has been received.</p> <p>Action: Go to “Software and Microcode Errors” on page 10-5.</p>

SRN	FRU List	%	Problem
300C0	Backplane (See "Installing an SSA Backplane in Bank D or E." on page 5-76.)	100	<p>Description: A disk drive module has detected the loss of one of its power inputs.</p> <p>Action:</p> <ul style="list-style-type: none"> • If the failing device is an SSA Hot-Swap Disk Drive, exchange the backplane. • If the failing device is not an SSA Hot-Swap Disk Drive, go to the service information for that device.
301C0	Backplane assembly (See "Installing an SSA Backplane in Bank D or E." on page 5-76.)	100	<p>Description: Multiple disk drive modules have detected the loss of one of their power inputs.</p> <p>Action:</p> <ul style="list-style-type: none"> • If the failing devices are SSA Hot-Swap Disk Drives, exchange the backplane. • If the failing devices are not SSA Hot-Swap Disk Drives, go to the service information for those devices.
303FF	Disk drive module (See "Removing an SSA Disk Drive from Bank C, D, or E" on page 5-96 and "Installing an SSA Disk Drive in Bank C, D, or E." on page 5-56.)	100	<p>Description: An SCSI status that is not valid has been received.</p> <p>Action: Go to "Software and Microcode Errors" on page 10-5 before exchanging any FRUs.</p>
40000	SSA adapter card (See the installation and service guide for the using system.)	100	<p>Description: The SSA adapter card has failed.</p> <p>Action: Exchange the FRU for a new FRU.</p>
43PAA	<p>Disk drive module (See "Removing an SSA Disk Drive from Bank C, D, or E" on page 5-96 and "Installing an SSA Disk Drive in Bank C, D, or E." on page 5-56.)</p> <p>SSA adapter card (See the installation and service guide for the using system.)</p>	<p>90</p> <p>10</p>	<p>Description: An SSA device on the link is preventing the completion of the link configuration.</p> <p>Action: If the SSA service aids are available, run the Link Verification service aid (see "Link Verification Service Aid" on page 7-39) to determine which device is preventing configuration. (That device is the one beyond the last-configured device on an open SSA link.)</p>

Table 10-1 (Page 5 of 9). Service Request Numbers

SRN	FRU List	%	Problem
44PAA	Disk drive module (See "Removing an SSA Disk Drive from Bank C, D, or E" on page 5-96 and "Installing an SSA Disk Drive in Bank C, D, or E." on page 5-56.)	100	Description: A disk drive module has failed. Action: If the SSA service aids are available, run the Link Verification service aid (see "Link Verification Service Aid" on page 7-39) to find the failing disk drive module. Before you exchange the failing disk drive module, run diagnostics in the system verification mode to the module to determine the cause of the problem.
45PAA	Disk drive module (See "Removing an SSA Disk Drive from Bank C, D, or E" on page 5-96 and "Installing an SSA Disk Drive in Bank C, D, or E." on page 5-56.) External SSA Cables Backplane assembly (See "Installing an SSA Backplane in Bank D or E." on page 5-76.)	40 40 20	Description: The SSA adapter has detected an open SSA link. This problem is caused either by a disk drive module that is failing, or by a disk drive module that has been switched off from another using system on the same SSA link. (That using system has itself been switched off.) Action: If the SSA service aids are available, run the Link Verification service aid (see "Link Verification Service Aid" on page 7-39) to determine which device is preventing configuration. (That device is the one beyond the last-configured device on an open SSA link.)
48000	None	–	Description: The SSA adapter has detected a link configuration resource that is not valid. Action: See "SSA Loop Configurations That Are Not Valid" on page 10-15.
50000	SSA adapter card (See the installation and service guide for the using system.)	100	Description: The SSA adapter failed to respond to the device driver. Action: Exchange the FRU for a new FRU.
50001	SSA adapter card (See the installation and service guide for the using system.)	100	Description: A data parity error has occurred. Action: Exchange the FRU for a new FRU.
50002	SSA adapter card (See the installation and service guide for the using system.)	100	Description: An SSA adapter direct memory access (DMA) error has occurred. Action: Exchange the FRU for a new FRU.
50004	SSA adapter card (See the installation and service guide for the using system.)	100	Description: A channel check has occurred. Action: Exchange the FRU for a new FRU.

SRN	FRU List	%	Problem
50005	SSA adapter card (See the installation and service guide for the using system.)	100	Description: A software error has occurred. Action: Go to "Software and Microcode Errors" on page 10-5 before exchanging the FRU.
50006	SSA adapter card (See the installation and service guide for the using system.)	100	Description: A channel check has occurred. Action: Exchange the FRU for a new FRU.
50007	SSA adapter card (See the installation and service guide for the using system.)	100	Description: The input/output channel controller (IOCC) detected an internal error. Action: Exchange the FRU for a new FRU.
50008	SSA adapter card (See the installation and service guide for the using system.)	100	Description: Unable to read or write the POS registers. Action: Exchange the FRU for a new FRU.
50010	SSA adapter card (See the installation and service guide for the using system.)	100	Description: An SSA adapter or device drive protocol error has occurred. Action: Go to "Software and Microcode Errors" on page 10-5 before exchanging the FRU.
50012	SSA adapter card (See the installation and service guide for the using system.)	100	Description: The SSA adapter microcode is in a suspended state. Action: Run diagnostics in System Verification mode to the SSA adapter. <ul style="list-style-type: none"> • If the diagnostics fail, exchange the FRU for a new FRU. • If the diagnostics do not fail, go to "Software and Microcode Errors" on page 10-5 before exchanging the FRU.

Table 10-1 (Page 7 of 9). Service Request Numbers

SRN	FRU List	%	Problem
50100	None	–	<p>Description: An attempt was made to log an error against a pdisk that is not available to the using system.</p> <p>Action: This problem has occurred for one of the following reasons:</p> <ul style="list-style-type: none"> • A user has deleted a pdisk from the system configuration. In such an instance, the hdisk that is related to the pdisk continues to operate normally. If the disk drive module tries to log an error, however, this SRN (50100) is produced. Enter the cfgmgr command to return the pdisk to the system configuration. • A disk drive module has tried to log an error during system configuration. To find the failing disk drive module, run diagnostics to the disk drive modules that are connected to this SSA adapter.
60000	SSA adapter card (See the installation and service guide for the using system.)	100	<p>Description: The SSA adapter is missing from the expected configuration.</p> <p>Action: Verify that the SSA adapter card is installed in the expected slot of the using-system.</p> <ul style="list-style-type: none"> • If it is in the expected slot, exchange the FRU for a new FRU. • If it is not in the expected slot, enter the diag -a command, and answer the questions that are displayed.
7xxxx	Disk drive module (See “Removing an SSA Disk Drive from Bank C, D, or E” on page 5-96 and “Installing an SSA Disk Drive in Bank C, D, or E.” on page 5-56.) Backplane assembly (See “Installing an SSA Backplane in Bank D or E.” on page 5-76.)	80	<p>Description: An SSA Hot-Swap Disk Drive module is missing from the expected configuration of the SSA loop.</p> <p>Action: Replace the FRUs one at a time. Go to “MAP 410: Repair Checkout” in IBM RS/6000 Diagnostic Information for Multiple Bus Systems to verify each repair.</p>

SRN	FRU List	%	Problem
D0000	Disk drive module (See "Removing an SSA Disk Drive from Bank C, D, or E" on page 5-96 and "Installing an SSA Disk Drive in Bank C, D, or E." on page 5-56.)	100	Description: The using system cannot configure the disk drive module. This is probably a software problem. Action: <ol style="list-style-type: none"> 1. Try again to configure the disk drive module. 2. If the problem remains, go to "Software and Microcode Errors" on page 10-5 before exchanging the FRU.
D0100	Disk drive module (See "Removing an SSA Disk Drive from Bank C, D, or E" on page 5-96 and "Installing an SSA Disk Drive in Bank C, D, or E." on page 5-56.)	100	Description: Unable to clear a disk drive module reservation. Action: Exchange the FRU for a new FRU.
D0101	Disk drive module (See "Removing an SSA Disk Drive from Bank C, D, or E" on page 5-96 and "Installing an SSA Disk Drive in Bank C, D, or E." on page 5-56.)	100	Description: The disk drive module has been reserved since the diagnostics started. The disk drive module is in use. Action: Release the disk drive module, and run the diagnostics again.
D0200	Disk drive module (See "Removing an SSA Disk Drive from Bank C, D, or E" on page 5-96 and "Installing an SSA Disk Drive in Bank C, D, or E." on page 5-56.)	100	Description: The disk drive module timed out while the diagnostics were running. Action: Rerun the diagnostics. If the problem remains, exchange the FRU for a new FRU.
D0300	Disk drive module (See "Removing an SSA Disk Drive from Bank C, D, or E" on page 5-96 and "Installing an SSA Disk Drive in Bank C, D, or E." on page 5-56.)	100	Description: The disk drive module failed the diagnostic test. Action: Exchange the FRU for a new FRU.
D0400	Disk drive module (See "Removing an SSA Disk Drive from Bank C, D, or E" on page 5-96 and "Installing an SSA Disk Drive in Bank C, D, or E." on page 5-56.)	100	Description: The disk drive module is not ready while the diagnostics are running. Action: Rerun the diagnostics. If the problem remains, exchange the FRU for a new FRU.

Table 10-1 (Page 9 of 9). Service Request Numbers

SRN	FRU List	%	Problem
D0450	None	–	<p>Description: A format operation is in progress. The format operation that was started on this disk drive module has not yet finished. A format operation can take up to 30 minutes to run.</p> <p>Action: Wait for the format operation to finish before you run the diagnostics again. You can observe the progress of the Format operation by running the Format service aid again on this disk drive module.</p>
D0460	None	–	<p>Description: A format operation has been degraded. The format operation that was started on this disk drive module did not finish. Possibly, the disk drive module was switched off while the format operation was running.</p> <p>Action: Run the Format service aid to format this disk drive module.</p>
D4000	SSA adapter card (See the installation and service guide for the using system.)	100	<p>Description: The diagnostics cannot configure the SSA adapter.</p> <p>Action: Exchange the FRU for a new FRU.</p>
D4100	SSA adapter card (See the installation and service guide for the using system.)	100	<p>Description: The diagnostics cannot open the SSA adapter.</p> <p>Action: Exchange the FRU for a new FRU.</p>
D4300	SSA adapter card (See the installation and service guide for the using system.)	100	<p>Description: The diagnostics have detected an SSA adapter POST failure.</p> <p>Action: Exchange the FRU for a new FRU.</p>
D44xx	SSA adapter card (See the installation and service guide for the using system.)	100	<p>Description: The diagnostics have detected that the SSA adapter has corrupted the microcode, but cannot download a new version of the microcode.</p> <p>Action: Exchange the FRU for a new FRU.</p> <p>Note: In this SRN, an x represents a digit 0 through F.</p>
DFFFF	SSA adapter card (See the installation and service guide for the using system.)	100	<p>Description: A command or parameter that has been sent or received is not valid. This problem is caused either by the SSA adapter or by an error in the microcode.</p> <p>Action: Go to “Software and Microcode Errors” on page 10-5 before exchanging the FRU.</p>

SSA Loop Configurations That Are Not Valid

Note: This section is related to SRN 48000.

SRN 48000 shows that the SSA loop contains more devices or adapters than are allowed. The following condition exist: the loop contains more than 48 devices.

If the SRN occurred when either you or the customer switched on the using system:

1. Switch off the using system.
2. Review the configuration that you are trying to make, and determine why that configuration is not valid.
3. Review “Rules for SSA Loops” on page 7-27.
4. Correct your configuration by reconfiguring the SSA cables or by removing the excess devices or adapters from the loop.
5. Switch on the using system.

If the SRN occurred because additional devices or adapters were added to a working SSA loop:

1. Remove the additional devices or adapters that are causing the problem, and put the loop back into its original, working configuration.
Note: It is important that you perform these actions, because they enable the configuration code to reset itself from the effects of the error.
2. Review “Rules for SSA Loops” on page 7-27.
3. Review the configuration that you are trying to make, and determine why that configuration is not valid.
4. Correct your system to a valid configuration.

SSA Maintenance Analysis Procedures (MAPs)

These maintenance analysis procedures (MAPs) describe how to analyze a continuous failure that has occurred in a system that contains two or more disk drive modules. Failing field-replaceable units (FRUs) of the system unit can be isolated with these MAPs.

How to Use These MAPs

Attention: Switching off the power to an SSA Hot-Swap Disk Drive can cause a system fault unless you first make the SSA Hot-Swap Disk Drive modules unavailable to the system unit. To do this:

1. Use the system-management task menus to make the disk drive modules unavailable.
2. If the system unit has more than one SSA adapter, make the SSA Hot-Swap Disk Drive modules unavailable to the system for each of the paths to the SSA Hot-Swap Disk Drive.

Attention: Unless the system unit needs to be switched off for some other reason, do not switch off the power to the system unit when servicing an SSA Hot-Swap Disk Drive or the external SSA cable.

- To isolate the FRUs associated with in the failing SSA Hot-Swap Disk Drive, perform the actions and answer the questions given in this MAP.
- When instructed to exchange two or more FRUs in sequence:
 1. Exchange the first FRU in the list for a new one.
 2. Verify that the problem is solved. For some problems, verification means running the diagnostic programs (see the using-system service procedures).
 3. If the problem remains:
 - a. Reinstall the original FRU.
 - b. Exchange the next FRU in the list for a new one.
 4. Repeat steps 2 and 3 until either the problem is solved, or all the related FRUs have been exchanged.
 5. Perform the next action indicated by the MAP.
- See “Disk Drive Status LED States” on page 2-19 for locations and descriptions of the lights and switches.

MAP 2010: SSA Hot-Swap Disk Drive–Start

This MAP is the entry point to the MAPs for the SSA Hot-Swap Disk Drive. If you are not familiar with these MAPs, read “How to Use These MAPs” on page 10-16 first.

You might have been sent here because:

- The system problem determination procedures sent you here.
- Action from an SRN list sent you here.
- A problem occurred during the installation of an SSA Hot-Swap Disk Drive module.
- Another MAP sent you here.
- A customer observed a problem that was not detected by the system problem determination procedures.

Step 2010-1

Have you been sent to this MAP from the Configuration Verification service aid?

Yes Go to “Step 2010-2” on page 10-18.

No Go to “Step 2010-3” on page 10-19.

Step 2010-2

One of the following conditions exist. Take the action described.

1. You have an hdisk that has no associated pdisk.
 - a. Issue the system **cfgmgr** command.
 - b. Retry the Configuration Verification service aid.
 - c. If the problem remains, a software error has probably occurred. Call your support center for assistance.
2. You have a pdisk that has no associated hdisk.
 - a. Run diagnostics (using system verification mode) to the pdisk.
 - b. If you get an SRN, go to Table 10-1 on page 10-6 and follow the actions described.

If you do not get an SRN, the disk formatting may be incompatible with the system (the disk was formatted on a different type of using system, that is, not an RS 6000).

 - 1) Format the pdisk.
 - 2) Issue the system **cfgmgr** command
 - 3) Retry the Configuration Verification service aid.
3. If the problem remains, a software error has probably occurred. Call your support center for assistance.

Step 2010-3

Have the system diagnostics or problem determination procedures given you an SRN for the SSA Hot-Swap Disk Drive?

No Go to “Step 2010-4.”

Yes Go to “Service Request Numbers (SRNs)” on page 10-3.

Step 2010-4

If the system diagnostics are available, go to “Step 2010-5.”

If the stand-alone diagnostics are available, but the system diagnostics are not available, run them, then go to “Step 2010-5.”

If the system diagnostics and stand-alone diagnostics are not available, go to “Step 2010-1” on page 10-17.

Step 2010-5

Run the diagnostics in the problem determination mode.

Note: Do not run the advanced diagnostics, because errors are logged on other using systems that share the same loop.

Did the diagnostics give you an SRN for the SSA Hot-Swap Disk Drive?

No Go to “Step 2010-6” on page 10-20.

Yes Go to “Service Request Numbers (SRNs)” on page 10-3.

Step 2010-6

Are all LED's on the drives in a 6 pack off?

Yes Go to "Step 2010-7."

No Go to step "Step 2010-9."

Step 2010-7

Are any power cables loose or in need of replacement?

No Go to "Step 2010-8."

Yes Fix or replace the power cables as required. Go to "MAP 410: Repair Checkout" in IBM RS/6000 Diagnostic Information for Multiple Bus Systems to verify the repair.

Step 2010-8

Replace the backplane. Go to "MAP 410: Repair Checkout" in IBM RS/6000 Diagnostic Information for Multiple Bus Systems to verify the repair.

Step 2010-9

Is there only one drive with no LED's on?

No Go to step "Step 2010-10" on page 10-21.

Yes Replace the the following FRU's:

1. Backplane
2. Disk drive assembly

Go to "MAP 410: Repair Checkout" in IBM RS/6000 Diagnostic Information for Multiple Bus Systems to verify the repair.

Step 2010-10

Is the middle LED on one or more disk drives on a backplane off?

No Go to step "Step 2010-11."

Yes Replace the the following FRU's:

1. Backplane
2. EPOW cable

Go to "MAP 410: Repair Checkout" in IBM RS/6000 Diagnostic Information for Multiple Bus Systems to verify the repair..

Step 2010-11

Is middle LED in the drive at the end of the backplane flashing?

Yes Go to step "Step 2010-12."

No Go to step "Step 2010-8" on page 10-20.

Step 2010-12

Replace the SSA link cable closest to the flashing LED. Did the LED stop flashing?

No Go to step "Step 2010-13."

Yes Go to "MAP 410: Repair Checkout" in IBM RS/6000 Diagnostic Information for Multiple Bus Systems to verify the repair.

Step 2010-13

Replace the following:

1. Backplane
2. Disk drive with the second LED flashing

Go to "MAP 410: Repair Checkout" in IBM RS/6000 Diagnostic Information for Multiple Bus Systems to verify the repair.


Appendix A. Server Records

Record the Identification Numbers

Record and retain the following information.

Product Name	IBM RS/6000 7025 F30 Series
CPU Type/Speed	_____
Serial Number	_____
Key Serial Number	_____

The server's identification numbers are located on the front cover and on the rear of the server.

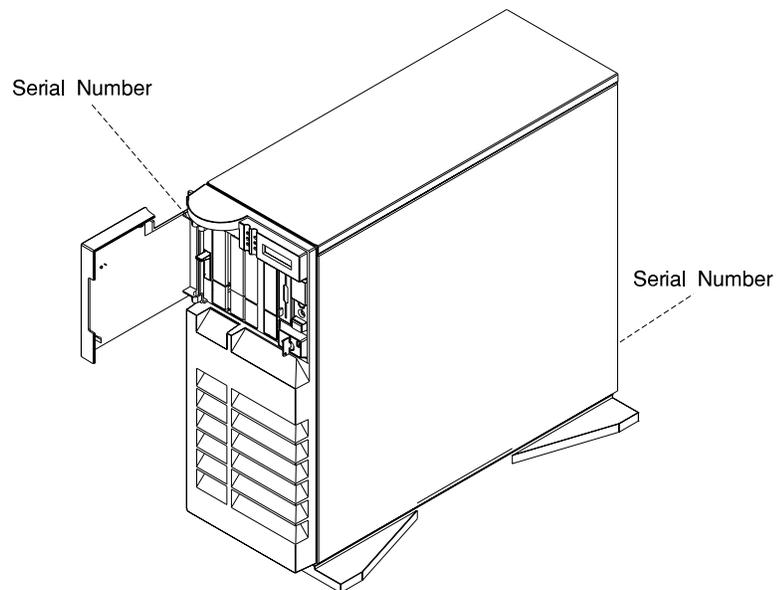


Device Records

Use the following tables to keep a record of the options installed in or attached to your system. This information can be helpful when you install additional options in your server or if you ever need to have your server serviced.

<i>Table A-1. Internal and External Options</i>	
Location	Option Description
Memory (J26)	<u>16MB</u> <input type="checkbox"/> <u>32MB</u> <input type="checkbox"/> <u>64MB</u> <input type="checkbox"/>
Memory (J28)	<u>16MB</u> <input type="checkbox"/> <u>32MB</u> <input type="checkbox"/> <u>64MB</u> <input type="checkbox"/> <u>128MB</u> <input type="checkbox"/>
Memory (J29)	<u>16MB</u> <input type="checkbox"/> <u>32MB</u> <input type="checkbox"/> <u>64MB</u> <input type="checkbox"/> <u>128MB</u> <input type="checkbox"/>
Memory (J31)	<u>16MB</u> <input type="checkbox"/> <u>32MB</u> <input type="checkbox"/> <u>64MB</u> <input type="checkbox"/> <u>128MB</u> <input type="checkbox"/>
Memory (J35)	<u>16MB</u> <input type="checkbox"/> <u>32MB</u> <input type="checkbox"/> <u>64MB</u> <input type="checkbox"/> <u>128MB</u> <input type="checkbox"/>
Memory (J38)	<u>16MB</u> <input type="checkbox"/> <u>32MB</u> <input type="checkbox"/> <u>64MB</u> <input type="checkbox"/> <u>128MB</u> <input type="checkbox"/>
Memory (J39)	<u>16MB</u> <input type="checkbox"/> <u>32MB</u> <input type="checkbox"/> <u>64MB</u> <input type="checkbox"/> <u>128MB</u> <input type="checkbox"/>
Memory (J44)	<u>16MB</u> <input type="checkbox"/> <u>32MB</u> <input type="checkbox"/> <u>64MB</u> <input type="checkbox"/> <u>128MB</u> <input type="checkbox"/>
Mouse Connector	<u>IBM Mouse</u> <input type="checkbox"/> Other: _____
Keyboard Connector	<u>Space Saving</u> <input type="checkbox"/> <u>Enhanced</u> <input type="checkbox"/> Other: _____
Expansion Slot 10	_____
Expansion Slot 9	_____
Expansion Slot 8	_____
Expansion Slot 7	_____
Expansion Slot 6	_____
Expansion Slot 5	_____
Expansion Slot 4	_____
Expansion Slot 3	_____
Expansion Slot 2	_____
Expansion Slot 1	_____
Parallel Port	_____
Serial Port 1	_____
Serial Port 2	_____

Refer to the following diagram of your server's bays when completing Table A-2 on page A-4.

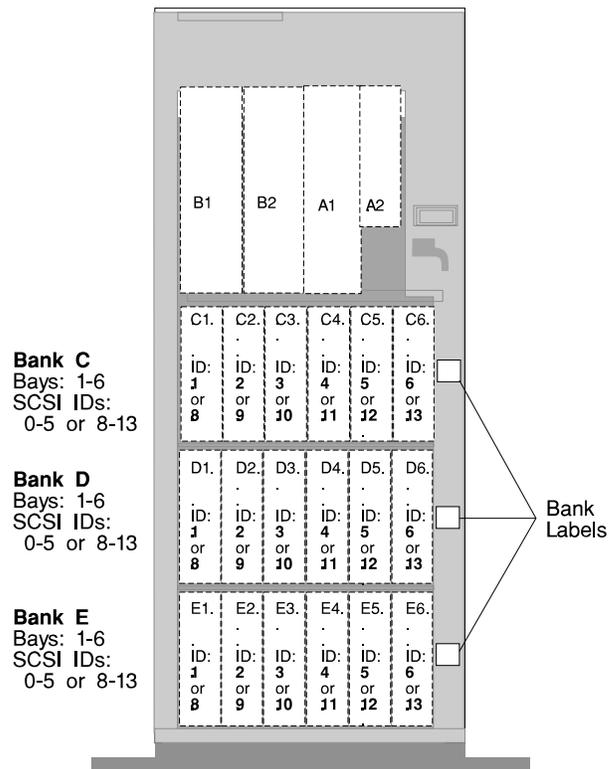

Notes:

- If you attach a drive or other device to an adapter, record the expansion-slot number for that adapter in the *adapter* field of this table.
- Your model might have more preinstalled drives than shown in this table.

Table A-2. Internal Files and Devices

Adapter	Location	SCSI ID	Drive Description
Integrated	Bay A1	4	<u>CD-ROM Drive</u>
Integrated	Bay A2	Non-SCSI	<u>3.5-Inch 1.44MB Diskette Drive</u>
Integrated	Bay B1	6	_____
Integrated	Bay B2	5	_____
_____	Bank C Bay 1	8	_____
	Bank C Bay 2	9	_____
	Bank C Bay 3	10	_____
	Bank C Bay 4	11	_____
	Bank C Bay 5	12	_____
	Bank C Bay 6	13	_____
_____	Bank D Bay 1	8	_____
	Bank D Bay 2	9	_____
	Bank D Bay 3	10	_____
	Bank D Bay 4	11	_____
	Bank D Bay 5	12	_____
	Bank D Bay 6	13	_____
_____	Bank E Bay 1	8	_____
	Bank E Bay 2	9	_____
	Bank E Bay 3	10	_____
	Bank E Bay 4	11	_____
	Bank E Bay 5	12	_____
	Bank E Bay 6	13	_____
_____	_____	_____	_____
_____	_____	_____	_____

Appendix B. Replacing the Battery

The manufacturer has designed this product with your safety in mind. The lithium battery must be handled correctly to avoid possible danger. If you replace the battery, be sure to adhere to the following instructions.

CAUTION:


A lithium battery can cause fire, explosion, or severe burn. Do not recharge, disassemble, heat above 100°C (212°F), solder directly to the cell, incinerate, or expose cell contents to water. Keep away from children. Replace only with the part number specified for your system. Use of another battery may present a risk of fire or explosion.

The battery connector is polarized; do not attempt to reverse polarity.

Dispose of the battery according to local regulations.


Note: After you replace the battery, you must reconfigure your system and reset the system date and time.

1. If you have not already done so, remove the covers as described in “Removing Both the Front and Side Covers” on page 5-10.
2. Locate the battery on the system board.

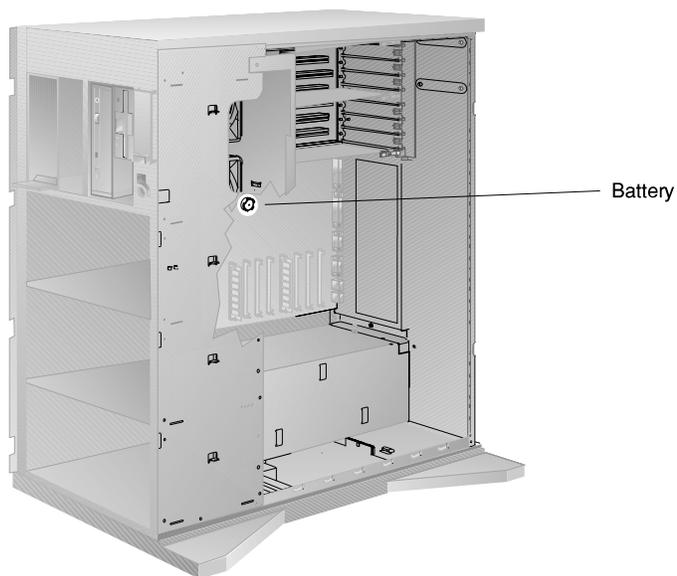


3. Remove the battery:

- a. Use one finger to slightly slide the battery toward the front of the server.
(The spring mechanism behind the battery pushes it out toward you as you slide it forward.)
- b. Use your thumb and index finger to hold the battery as it pushes out of the socket.

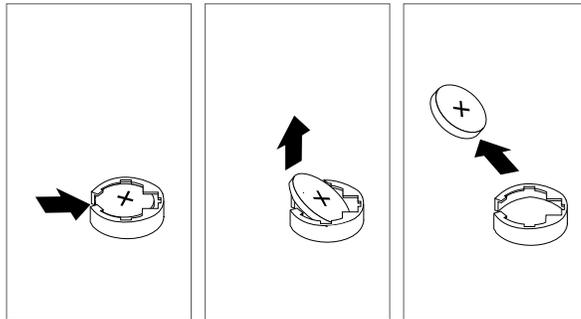

4. Insert the new battery:

- a. Tilt the battery so that you can insert it into the front of the socket.
- b. As you slide it toward the front of the server, push it down into the socket.

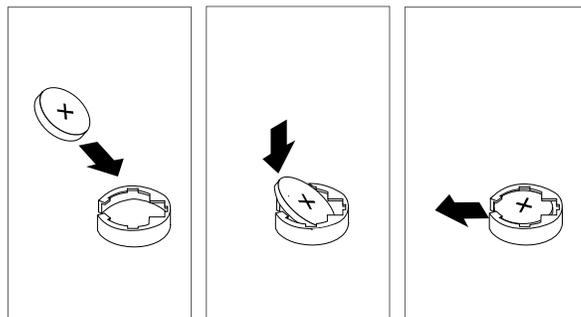

5. Reconfigure your system and reset the system date and time.

6. Replace the covers as described in "Replacing Both the Front and Side Covers" on page 5-109.

Index

Numerics

- 1.12 GB, 2.25 GB, and 4.51 GB SSA disk drives 7-59
- 24/48GB DDS-2 4-mm tape autoloader
 - controls and indicators 2-41
 - ejecting a magazine 2-45
 - head cleaning 2-49
 - loading a magazine 2-44
 - loading and unloading cartridges 2-47
 - using 2-41
- 3.5-inch diskette drive
 - using 2-11
- 4-mm tape cartridge
 - loading 2-32
 - unloading 2-33
- 4.0GB 4-mm tape drive
 - general information 2-35
 - status lights 2-30
 - using 2-30
- 5.0GB 8-mm tape drive
 - general information 2-26
 - status lights 2-21
 - using 2-21
- 7318 communications server service aid 7-24
- 7318 serial communications network server 7-24
- 8-mm tape cartridge
 - loading 2-23
 - unloading 2-24

A

- about this book xxv
- active
 - SSA link 7-26

- adapter
 - code package ID 7-58
 - description of 7-59
 - finding the physical location 7-56
 - POSTs (power-on self-tests) 10-2
 - SSA 7-25
 - port connector 7-56
 - vital product data (VPD) 7-59
- adapters
 - installing 5-29
 - removing 5-34
- aids, diagnostic
 - adapter POSTs (power-on self-tests) 10-2
 - disk drive module POSTs (power-on self-tests) 10-1
 - SRNs (service request numbers) 10-3, 10-5
- aids, service
 - Certify Disk 7-47
 - Configuration Verification 7-43
 - Format Disk 7-45
 - Link Verification 7-39
 - Set Service Mode 7-33
 - starting 7-31
 - unavailable 7-56
 - vital product data (VPD) 7-59
- air circulation clearances 1-8, 5-112
- alter/display bootlist 7-11
- ASCII Terminal System Management Services programs 3-16
 - Select Boot Devices program 3-17
 - Test the Computer program 3-18
 - Utilities program 3-19

B

- back view 5-5
- backplane, jumpers 5-68
- bank C, D, or E
 - installing a SCSI disk drive 5-52
 - installing an SSA disk drive 5-56
 - removing a SCSI disk drive 5-92
 - removing an SSA disk drive 5-96
- bank D or E
 - installing a SCSI backplane 5-60
 - installing an SSA backplane 5-76
- battery
 - replacement B-1
- before you begin 1-2
- beginning the service aids 7-31
- broken loop
 - cable removed 7-52
 - disk drive module removed 7-54

C

- cable label 5-66, 5-71
- cabling 6-15
 - high-availability 6-15
- cache module, fast-write 7-60
- card, SSA adapter 7-25
- CD-ROM
 - installing in bay A or bay B 5-41
- CD-ROM drive
 - removing from bay A or Bay B 5-91
- CD-ROM drive
 - using 2-13
- cfgmgr command 10-18
- checklist 1-4, 1-8
- clearances for air circulation 1-8, 5-112
- codes, location 7-24
- commands
 - cfgmgr 7-58, 10-18
 - diag -a 10-12

commands (*continued*)

- lsattr -E -l adapter -a ucode 7-58
- send diagnostic 10-1
- configuration
 - complete system 7-58
 - invalid SSA loop 10-15
 - manager command 7-58
- Configuration Verification service aid 7-43
- connect cables 5-113
- connecting the cables 1-5
- connector
 - port, on SSA adapter 7-56
- connectors
 - input/output 5-5
- continuous failure 10-16
- CPU card
 - upgrading 5-25

D

- data path 7-25, 7-28, 7-52
- data, vital product 7-59
- definition of FRU names used in the SRN table 10-5
- device configuration method 7-58
- device driver level 7-59
- device records A-2
 - internal and external options A-2
 - internal files and devices A-4
- devices, startup 3-4
- diag -a command 10-12
- diagnostic
 - communication attributes 6-6
 - diagnostic modes 6-16
 - diagnostic summary 6-15
 - general attributes 6-4
 - keyboard attributes 6-8
 - multiple systems 6-14
 - online maintenance mode 6-12
 - online mode of operation 6-9

- diagnostic (*continued*)
 - online running in concurrent mode 6-10, 6-11
 - online running in service mode 6-10
 - online service mode 6-9
 - printer attributes 6-9
 - running from a tty terminal 6-3
 - running online 6-3
 - running online maintenance mode 6-12
 - running standalone 6-2
 - standalone and online 6-1, 6-2
 - standalone diagnostic operation 6-13
 - standalone running standalone diagnostics 6-13
 - using online and standalone 6-1
- diagnostic aids
 - adapter POSTs (power-on self-tests) 10-2
 - disk drive module POSTs (power-on self-tests) 10-1
 - SRNs (service request numbers) 10-3, 10-5
- diagnostics
 - package utility 7-5
- disk
 - certify, service aid 7-47
 - format, service aid 7-45
 - formatting, incompatible with the system 10-18
- disk drive
 - installing in bay A or bay B 5-41
 - removing from bay A or Bay B 5-91
- disk drive module
 - 1.12 GB, 2.25 GB, and 4.51 GB 7-59
 - broken loop 7-52, 7-54
 - finding the physical location 7-56
 - Format Disk service aid 7-45

- disk drive module (*continued*)
 - identification 7-27
 - missing 7-41
 - POSTs (power-on self-tests) 10-1
 - serial number 7-27
 - strings 7-26
 - unavailable to the using system 7-33
- display/alter bootlist 7-11
- DRAM (dynamic random-access memory) 7-59
- dynamic random-access memory (DRAM) 7-59

E

- electrical safety xx
- Enable Unattended Start Mode program 3-14, 3-19
- entry point, MAPs 10-17
- EPROM (programmable read-only memory) 10-2
- error
 - microcode and software 10-5
 - unrecoverable 7-49
- error log analysis 6-15
- expansion bays 5-4, 5-38
- expansion slots 5-29

F

- failed
 - application program 7-49
 - status 7-40
- failure
 - continuous 10-16
 - link 7-49
- fast-write cache module 7-60
- finding the physical location of a device 7-56

- finishing the installation 1-8
- firmware 4-1
- firmware beeps 4-1
- firmware flash update 4-5
- Format Disk service aid 7-45
- format, location code 7-24
- fragility of disk drive modules 10-1
- front and side covers
 - removing 5-10
 - replacing 5-109
- front covers
 - removing 5-6
 - replacing 5-106
- front view 5-4
- FRU
 - names used in the SRN table 10-5
 - used in the SRN table 10-5
- full-high drives 5-39
- function keys 4-2
- Function Select menu 7-31
- function, identify 7-31, 7-56

G

- general information for 4.0GB 4-mm tape drive 2-35
- general information for 5.0GB 8-mm tape drive 2-26
- glossary of FRU names used in the SRN table 10-5
- good status 7-40
- graphical System Management Services 3-2
 - Start Up program 3-4
 - Test program 3-5
 - Tools program 3-7
- green light
 - on connectors 7-25, 7-26

H

- half-high drives 5-39
- handling static-sensitive devices 5-3
- hardware problem determination 9-1
- hdisk (LUN) 7-27
- hot swap disk drives
 - using 2-16
- how to use MAPs 10-16

I

- ID, adapter code package 7-58
- identification, pdisks, hdisks, and disk drive module 7-27
- identify function 7-31, 7-36, 7-56
- inactive
 - SSA connector 7-26
- information
 - SSA network 7-42
- input/output connectors 5-5
- install cables 5-113
- installing
 - adapters 5-29
 - internal drives 5-37
 - memory-module kits 5-17
 - service processor 5-100
 - u-bolt 5-104
- installing a SCSI backplane in bank D or E 5-60
- installing a SCSI disk drive
 - in bank C, D, or E 5-52
- installing a SCSI disk drive in bank C, D, or E. 5-52
- installing a service processor 5-100
- installing a U-bolt 5-104
- installing adapters 5-29
- installing an SSA backplane in bank D or E 5-76
- installing an SSA disk drive
 - in bank C, D, or E 5-56

- installing an SSA disk drive in bank C, D, or E. 5-56
- installing internal drives 5-37
- installing memory-module kits 5-17
- installing, in bay A or bay B
 - CD-ROM 5-41
 - disk drive 5-41
 - tape drive 5-41
- internal drives
 - considerations 5-39
 - installing 5-37
 - removing 5-90
- invalid SSA loop configurations 10-15
- iso 9000 statement xxv

J

- jumpers, backplane 5-68

K

- keyboards
 - using 2-5

L

- label, cable 5-66, 5-71
- laser compliance statement xxi
- laser safety information xxi
- level
 - device driver 7-59
- light
 - on connectors 7-26
- link
 - active 7-26
 - failure 7-49
- Link Verification service aid 7-39
- loading the 4-mm tape cartridge 2-32
- loading the 8-mm tape cartridge 2-23
- local area network service aid 7-18

- location
 - code format 7-24
 - physical, of a device 7-56
- location codes 6-19
- logical units (LUN) 7-27
- loop
 - broken 7-52
 - configurations, SSA, invalid 10-15
 - data paths, description of 7-28
 - links 7-25
 - SSA, rules 7-27
- loops 7-26
- lsattr -E -l adapter -a ucode command 7-58
- LUN (logical units) 7-27

M

- maintenance analysis procedures (MAPs) 10-16
- maintenance, microcode 7-58
- manufacturer and plant code 7-59
- MAPs (maintenance analysis procedures)
 - starting 10-17
 - using 10-16
- media cables 5-47
- memory testing 6-15
- memory-module kits
 - installing 5-17
 - removing 5-22
- menus
 - Certify Disk service aid 7-47
 - Configuration Verification service aid 7-43
 - Format Disk service aid 7-45
 - Function Select 7-31
 - Link Verification service aid 7-39
 - Set Service Mode service aid 7-33
 - SSA Service Aids 7-31

- microcode
 - maintenance 7-58
 - software errors 10-5
- missing disk drive module 7-41
- mode, set service 7-33
- module, disk drive
 - 1.12 GB, 2.25 GB, and 4.51 GB 7-59
 - broken loop 7-52, 7-54
 - finding the physical location 7-56
 - Format Disk service aid 7-45
 - identification 7-27
 - missing 7-41
 - power-on self-tests (POSTs) 10-1
 - serial number 7-27
 - strings 7-26
 - unavailable to the using system 7-33
- module, fast-write cache 7-60
- mouse
 - using 2-7

N

- names used in the SRN table 10-5
- network 7-18
 - local area analyzer task 7-18
 - local area service aid 7-18
- network information, SSA 7-42
- nonremovable media 5-38
- numbers, service request
 - description of 10-3
 - software and microcode errors 10-5
 - table 10-6

O

- operator panel display 2-2
- option list 5-16
- options 5-16

P

- password design 4-3
- paths, data
 - broken loop 7-52
 - description of 7-28
- pdisk
 - identification 7-27
 - with no associated hdisk 10-18
- physical
 - disk drives (pdisks) 7-27, 7-33
 - location of a device 7-56
- plant code and manufacturer 7-59
- pluggable fast-write cache module 7-60
- port
 - (P) value 7-56
 - connector on SSA adapter 7-56
- POS (programmable option select) 10-2
- POST indicators 4-8
- POSTs (power-on self-tests) 10-1
- power
 - status 7-40
- power on self test (POST) 4-7
- power-on password 3-14, 3-19
- power-on self-tests (POSTs) 10-1, 10-2
- preface xxv
- preinstallation steps 5-40
- preinstalled devices 5-38
- privileged-access password 3-14, 3-19
- problem determination
 - POSTs, adapter 10-2
 - POSTs, disk drive module 10-1
 - SRNs (service request numbers) 10-3
 - using service aids 7-50
 - using the standalone or online diagnostics 9-1, 9-10
 - when unable to load diagnostics 9-10

- processor testing 6-15
- programmable option select (POS) 10-2
- programmable read-only memory (EPROM) 10-2
- programs, ASCII Terminal System Management Services 3-16
- protecting the fan 5-62, 5-78
- protecting the server 1-2

R

- RAM (random-access memory) 7-59
- Random-access memory (RAM) 7-59
- read-only memory (ROM) 7-59
- Read-only storage (ROS) 7-59
- reading the operator panel display 2-2
- rear view 5-5
- reconfiguring the system B-3
- records, device A-2
- related publications xxv
- removable media 5-38
- removing
 - adapters 5-34
 - front and side covers 5-10
 - front covers 5-6
 - internal drives 5-90
 - memory-module kits 5-22
 - SCSI disk drive from bank C, D, or E 5-92
 - SSA disk drive from bank C, D, or E 5-96
- removing adapters 5-34
- removing both the front and side covers 5-10
- removing internal drives 5-90
- removing memory-module kits 5-22
- removing the front covers only 5-6
- removing, from bay A or Bay B
 - CD-ROM drive 5-91
 - disk drive 5-91

- removing, from bay A or Bay B
 - (*continued*)
 - tape drive 5-91
- replacement batteries, ordering B-1
- replacing
 - front and side covers 5-109
- replacing front and side covers 5-109
- replacing the battery B-1
- replacing the covers 5-106, 5-109
- reserved status 7-31, 7-40
- RIPL (remote initial program load) 3-14, 3-19
- ROM (read-only memory) 7-59
- ROS (read-only storage) 7-58, 7-59
- rules for SSA loops 7-27

S

- safety considerations 5-1
- safety notices xix
- select boot devices
 - Text-Based System Management Services programs 3-12
- Select Boot Devices program
 - ASCII Terminal System Management Services programs 3-17
- select, function menu 7-31
- send diagnostic command 10-1
- sequence, startup 3-4
- serial number 7-27
- server records A-1
 - key serial number A-1
 - machine type/model A-1
 - serial number A-1
- service aids
 - 7135 RAIDiant array 7-23
 - AIX shell prompt 7-3
 - available 7-56
 - backup/restore media 7-3
 - callin/out setup support 7-4
 - Certify Disk 7-47

service aids (*continued*)

- Configuration Verification 7-43
- configure ring indicate 7-3
- configure service processor 7-3
- dials and lpfk configuration 7-6
- dials and lpfks configuration before version 4.2 7-6
- disk based diagnostic 7-6
- disk media 7-7
- disk to disk copy 7-9
- diskette media 7-11
- display or change configuration 7-11
- display or change diagnostic test list 7-14
- display or change VPD 7-11
- display previous diagnostic results 7-15
- display resource attributes 7-15
- display test patterns 7-16
- display/alter sector 7-10
- Format Disk 7-45
- generic microcode download 7-16
- hardware error report 7-16
- ISA adapter configuration 7-16
- link failure 7-49
- Link Verification 7-39
- machine check error log 7-14
- microcode download 7-18
- modem configuration 7-4
- optical disk 7-8
- package utility 7-5
- PCI RAID physical disk
 - identify 7-18
- periodic diagnostics 7-19
- SCSI bus service aid and analyzer task 7-20
- SCSI device identification and removal 7-22
- SCSI tape utilities 7-22

service aids (*continued*)

- service hints 7-23
- Set Service Mode 7-33
- site specific 7-4
- starting SSA 7-31
- surveillance setup 7-4
- tasks 7-1
- unavailable 7-56
- vital product data (VPD) 7-59
- service processor
 - installing 5-100
- service request numbers (SRNs)
 - description of 10-3
 - software and microcode errors 10-5
 - table 10-6
- Set Power-On Password 3-14, 3-19
- Set privileged-access password 3-14, 3-19
- Set Service Mode service aid 7-33
- setting up IBM RS/6000 7025 F30 Series 1-1
- slim-high drives 5-39
- software and microcode errors 10-5
- speed, memory 5-17
- SRNs (service request numbers) 10-3, 10-5, 10-6
- SSA (serial storage architecture)
 - adapter 7-25, 7-59
 - address (AA) value 7-56
 - inactive connector 7-26
 - link
 - active 7-26
 - loop
 - configurations, invalid 10-15
 - links 7-25
 - rules 7-27
 - network information 7-42
 - service aids 7-30
 - Certify Disk 7-47
 - Configuration Verification 7-43
 - error codes 7-49

- SSA (serial storage architecture)
 - (continued)
 - service aids (continued)
 - finding the physical location of a device 7-56
 - Format Disk 7-45
 - identify function 7-31
 - Link Verification 7-39
 - Set Service Mode 7-33
 - starting 7-31
 - SSA Hot-Swap Disk Drive
 - vital product data (VPD) 7-59
 - SSA service aids 7-23
 - SSA-address (AA) value 7-56
 - start mode 3-14, 3-19
 - Start Up program
 - graphical System Management Services 3-4
 - starting
 - MAPs 10-17
 - service aids 7-31
 - starting system programs 3-1
 - starting the server 1-6
 - starting the system unit 2-1
 - static-sensitive devices, handling 5-3
 - stopping the system unit 2-1
 - storage devices 5-4
 - strings, disk drive module 7-26
 - System Management Services 3-1
 - System Management Services, ASCII terminal 3-16
 - System Management Services, text-based 3-11
 - System Management Services, graphical 3-2
 - system programs 3-1
 - starting 3-1
 - system startup 1-1
 - system unit
 - starting 2-1

- system unit (continued)
 - stopping 2-1

T

- table
 - service request numbers (SRNs) 10-6
- tape drive
 - installing in bay A or bay B 5-41
 - removing from bay A or Bay B 5-91
- tasks 7-1
 - dials and lpfk tasks 7-6
 - display hardware error log task 7-16
 - display or change diagnostic run time options 7-15
 - process supplemental media 7-19
 - run diagnostics task 7-20
 - run error log analysis 7-20
- Test program
 - graphical System Management Services 3-5
- Test the computer
 - Text-Based System Management Services programs 3-13
- Test the Computer program
 - ASCII Terminal System Management Services programs 3-18
- Text-Based System Management Services programs 3-11
 - select boot devices 3-12
 - Test the computer 3-13
 - utilities 3-14
- tools 5-104
- Tools program
 - graphical System Management Services 3-7
- trademarks xxv

U

- u-bolt, installing 5-104
- unattended start mode 3-14, 3-19
- unavailable service aids 7-56
- unloading the 4-mm tape cartridge 2-33
- unloading the 8-mm tape cartridge 2-24
- unlocking the server door 5-6, 5-10
- unpacking the server 1-3
- Unplug all power cords (cables) 5-12
- unrecoverable error 7-49
- updating service processor firmware 3-15, 3-20
- updating system firmware 3-20
- upgrading
 - CPU card 5-25
- upgrading the CPU card 5-25
- using
 - MAPs 10-16
 - service aids 7-31
 - SRN table 10-3
 - system verification procedure 8-1
- using the 24/48GB DDS-2 4-mm tape autoloader 2-41
- using the 3.5-inch diskette drive 2-11
- using the 4.0GB 4-mm tape drive 2-30
- using the 5.0GB 8-mm tape drive 2-21
- using the CD-ROM drive 2-13
- using the hot swap disk drives 2-16
- using the keyboards 2-5
- using the mouse 2-7
- using the system verification procedure 8-1
- utilities
 - Text-Based System Management Services programs 3-14
- Utilities program
 - ASCII Terminal System Management Services programs 3-19

V

- value, port (P) 7-56
- verification
 - configuration, service aid 7-43
 - link, service aid 7-39
 - serial number 7-46, 7-48
- vital product data (VPD) 7-59
- VPD, vital product data 7-59

IBM®

Part Number: 93H5197



Printed in the United States of America
on recycled paper containing 10%
recovered post-consumer fiber.

April 1997

SA38-0504-03



93H5197

