

Distributing AFP Printing from a Host System

Document Number GG24-4493-00

November 1994

International Technical Support Organization
Poughkeepsie Center

This soft copy for use by IBM employees only.

Take Note!

Before using this information and the product it supports, be sure to read the general information under "Special Notices" on page xiii.

First Edition (November 1994)

This edition applies to Print Services Facility/2 Version 2 in OS/2 and Print Services Facility/6000 Version 1 Release 2 in AIX/6000.

Order publications through your IBM representative or the IBM branch office serving your locality. Publications are not stocked at the address given below.

An ITSO Technical Bulletin Evaluation Form for reader's feedback appears facing Chapter 1. If the form has been removed, comments may be addressed to:

IBM Corporation, International Technical Support Organization
Dept. 541 Mail Station P099
522 South Road
Poughkeepsie, New York 12601-5400

When you send information to IBM, you grant IBM a non-exclusive right to use or distribute the information in any way it believes appropriate without incurring any obligation to you.

© **Copyright International Business Machines Corporation 1994. All rights reserved.**

Note to U.S. Government Users — Documentation related to restricted rights — Use, duplication or disclosure is subject to restrictions set forth in GSA ADP Schedule Contract with IBM Corp.

Abstract

This document is unique in its detailed coverage of different ways of distributing printing from a host system. It focuses on the distribution of AFP printing using Print Services Facility/2 running under OS/2 and Print Services Facility/6000 running under AIX/6000 operating system. The main interest is on new enhancements (PSF Direct) included in PSF/2 Version 2 and enhancements applied as fixes in PSF/6000 Version 1 Release 2. It provides information about how to install and use different ways of distributing printing.

This document was written for IBM customer printing specialists and IBM system engineers responsible for printing applications. Some knowledge of AFP printing and the operating systems is assumed.

(76 pages)

Contents

Abstract	iii
Special Notices	xiii
Preface	xv
How This Document is Organized	xv
Related Publications	xv
Advanced Function Printing	xv
Printing in AS/400	xv
Printing in MVS	xvi
Printing in VM	xvi
Printing in VSE	xvi
Print Services Facility/2	xvi
Print Services Facility/6000	xvi
International Technical Support Organization Publications	xvii
Acknowledgments	xvii
Chapter 1. Introduction	1
1.1 Development of Distributed Printing	1
1.2 Using Remote Printers	1
1.3 Remote PrintManager Version 1	1
1.4 Remote PrintManager Version 2	2
1.5 Remote PrintManager Version 3	2
1.6 PSF/2 Distributed Print Facility	2
1.7 PSF Direct/2	3
1.8 PSF Direct/6000	3
1.9 Network Print Facility	3
1.10 SNA Upload-n-Print Facility	3
1.11 Summary	4
Chapter 2. Requirements	5
2.1 Requirements in the Host System for PSF/2	5
2.1.1 Hardware Requirements	5
2.1.2 Software Requirements	5
2.2 Requirements in the OS/2 Workstation	5
2.2.1 Hardware Requirements	5
2.2.2 Software Requirements	7
2.3 Requirements in the Host System for PSF/6000	8
2.3.1 Hardware Requirements	8
2.3.2 Software Requirements	8
2.4 Requirements in the RISC System/6000 Workstation	9
2.4.1 Hardware Requirements	9
2.4.2 Software Requirements	10
Chapter 3. Installation	11
3.1 Installation in the Host System	11
3.1.1 Hardware Installation	11
3.1.2 Software Installation	11
3.2 Installation in the OS/2 Workstation	11
3.2.1 Workstation Hardware Installation	11
3.2.2 Workstation Software Installation	11

3.2.3	PSF/2 Customization	12
3.2.4	Sharing Printers between Different Host Printer Drivers	15
3.3	Communications Manager/2 Customization	17
3.4	Parameter Relationships for PSF/2	22
3.4.1	Host PSF Definitions	22
3.4.2	VTAM definitions	22
3.4.3	OS/2	23
3.5	Installation in the RISC System/6000 Workstation	24
3.5.1	Hardware Installation	24
3.5.2	Software installation	24
3.6	PSF/6000 Customization	24
3.6.1	Exporting the Configurations	29
3.6.2	PSF Direct Customization	33
3.7	AS/400 to PSF/2 Definitions	34
3.8	AS/400 to PSF/6000 Direct Definitions	36
3.9	Parameter relationships for PSF/6000	44
3.9.1	Host PSF definitions	44
3.9.2	VTAM definitions	44
3.9.3	PSF/6000 Definitions	45
3.10	Installation of the Network Print Facility	46
3.10.1	Hardware Installation	46
3.10.2	Software Installation	46
3.11	NPF customization	46
3.12	Parameter Relationships for NPF	47
3.13	Experiences from Installation and Customization	48
Chapter 4.	Operation	49
4.1	MVS Operation	49
4.1.1	Print Submission	49
4.1.2	Controlling the Printing	49
4.2	VSE Operation	50
4.2.1	Print Submission	50
4.2.2	Controlling the Printing	50
4.3	VM Operation	50
4.3.1	Print Submission	51
4.3.2	Controlling the Printing	51
4.4	AS/400 Operation	51
4.4.1	Print Submission	51
4.4.2	Controlling the Printing	52
4.5	PSF/2 Operation	52
4.5.1	Printer Operation	53
4.5.2	DPF Operation	53
4.5.3	PSF Direct Operation	54
4.5.4	Switching between DPF and Direct	54
4.6	RISC System/6000 Workstation Operation	55
4.6.1	PSF Direct Operation	55
4.7	NPF Operation	56
Chapter 5.	Performance Considerations	57
5.1	Performance Factors	57
5.2	PSF/2 Performance	57
5.2.1	DPF	58
5.2.2	PSF Direct	58
5.2.3	Conclusions	58
5.3	NPF Performance	59

Chapter 6. SNA Upload Facility	61
6.1 Installation	61
6.2 Operation	67
Chapter 7. When to Use Which Way	69
7.1 PSF/2 versus PSF/6000	69
7.2 DPF versus Direct	69
7.3 Recommendations	70
7.3.1 Single Host System	70
7.3.2 Several Host Systems	70
7.4 Migrating from RPM to PSF Direct	70
List of Abbreviations	73
Index	75

This soft copy for use by IBM employees only.

Figures

1.	Summary of Distributed Printing Possibilities	4
2.	Define a New Printer Device	12
3.	Define a New Printer Queue	13
4.	Create New Spool for DPF	13
5.	Set Up Host Receiver for DPF	14
6.	Set Up Host Receiver for PSF Direct	15
7.	Definition of APPC APIs	17
8.	Definition of Data Link Control	18
9.	Local Node Characteristics	18
10.	Definition of Host Connection	19
11.	Definition of SNA Features	19
12.	Local LU	20
13.	Partner LU	20
14.	Transaction Program Name	21
15.	MVS JESPARM Definitions	22
16.	VSE Printer Start	22
17.	PSF/MVS JCL	22
18.	PSF/VM OPTIONS PDM Definitions	22
19.	PSF/VSE Start-Up JCL	22
20.	VTAM Startup Parameters	22
21.	VTAM Application Definition	22
22.	VTAM Application Definition	22
23.	VTAM Application Definition	22
24.	NCP Definitions	22
25.	Logmode	22
26.	SMIT System Management Panel	24
27.	Communication Application and Services	25
28.	Advanced Configuration Menu	25
29.	Token-Ring Definition	26
30.	Menu for LU 6.2 Definition	26
31.	Local LU Definition	27
32.	Partner LU Definition	27
33.	LU Mode Definition	28
34.	Side Information Definition	28
35.	PSF Direct Menu	33
36.	PSF Direct Host Receiver Definition	33
37.	Device Description for APPC Device DPF4028	34
38.	Device Description for APPC Controller DPF3820	35
39.	Device Description for Printer PRT3820	36
40.	Device Description for APPC Device AIX4028	37
41.	Device Description for APPC Controller AIX4028	38
42.	Device Description for Printer PRT4028	39
43.	LOGMODE Entry QSPWTR	39
44.	MVS JESPARM Definitions	44
45.	PSF/MVS JCL	44
46.	PSF/VSE Printer Start	44
47.	PSF/VM OPTIONS PDM Definitions	44
48.	PSF/VSE Start-Up	44
49.	VTAM Startup Parameters	44
50.	VTAM Application Definition	44
51.	VTAM Application Definition	44

52.	VTAM Application Definition	44
53.	NCP Definitions	44
54.	Logmode	44
55.	RS/6000 definitions for VM host	45
56.	JCL Definitions	47
57.	JESPARM Definitions	47
58.	NPF Panel for Routing Information	47
59.	Icon View of PSF/2 Folder	52
60.	PSF/2 Control Panel	53
61.	DPF Spool Manager Panel	53
62.	DPF Spool Jobs	54
63.	PSF Direct Panel	54
64.	Control Panel	61
65.	Defining a New Profile for Upload-n-Print	61
66.	New Device Profile Definition	62
67.	PRINTDEF TABLE at the HOST	62
68.	Printer Port Selection	63
69.	Setup Transforms at the Options Menu	63
70.	Setup Transforms	64
71.	Add Transforms	64
72.	Host Upload	64
73.	Communication Manager Settings	65
74.	Setup Queues from Control Panel	65
75.	Setup Queues	65
76.	Activating the Upload-n-Print	66
77.	Transform Options	66

Tables

1. Recommended Values for PSF/2 Parameters for a Single Printer	16
2. Communication Manager/2 Definitions	23
3. PSF/2 Definitions	23
4. PSF/2 and PSF/6000 Comparison	69
5. PSF Direct and Distributed Print Function Comparison	69

Special Notices

This publication is intended to help IBM customer printer specialists and IBM system engineers supporting printing application to understand the differences between different ways of distributing printing from a host system. The document concentrates on new features implemented in PSF/2 and PSF/6000 recent releases. The information in this publication is not intended as the specification of any programming interfaces that are provided by the products mentioned in the document. See the PUBLICATIONS section of the IBM Programming Announcement for the products mentioned in this document for more information about what publications are considered to be product documentation.

References in this publication to IBM products, programs or services do not imply that IBM intends to make these available in all countries in which IBM operates. Any reference to an IBM product, program, or service is not intended to state or imply that only IBM's product, program, or service may be used. Any functionally equivalent program that does not infringe any of IBM's intellectual property rights may be used instead of the IBM product, program or service.

Information in this book was developed in conjunction with use of the equipment specified, and is limited in application to those specific hardware and software products and levels.

IBM may have patents or pending patent applications covering subject matter in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to the IBM Director of Licensing, IBM Corporation, 500 Columbus Avenue, Thornwood, NY 10594 USA.

The information contained in this document has not been submitted to any formal IBM test and is distributed AS IS. The use of this information or the implementation of any of these techniques is a customer responsibility and depends on the customer's ability to evaluate and integrate them into the customer's operational environment. While each item may have been reviewed by IBM for accuracy in a specific situation, there is no guarantee that the same or similar results will be obtained elsewhere. Customers attempting to adapt these techniques to their own environments do so at their own risk.

Any performance data contained in this document was determined in a controlled environment, and therefore, the results that may be obtained in other operating environments may vary significantly. Users of this document should verify the applicable data for their specific environment.

Reference to PTF numbers that have not been released through the normal distribution process does not imply general availability. The purpose of including these reference numbers is to alert IBM customers to specific information relative to the implementation of the PTF when it becomes available to each customer according to the normal IBM PTF distribution process.

The following terms are trademarks of the International Business Machines Corporation in the United States and/or other countries:

Advanced Function Presentation
AFP
AIX/6000

Advanced Function Printing
AIX
AS/400

DB2/2	IBM
Intelligent Printer Data Stream	IPDS
Micro Channel	MVS/ESA
OS/2	OS/400
Personal System/2	Print Services Facility
PS/2	PSF
PSF/6000	RISC System/6000
RS/6000	S/370
S/390	VM/ESA
VSE/ESA	

The following terms are trademarks of other companies:

HP	Hewlett-Packard Company
Hewlett-Packard	Hewlett-Packard Company
i-data	i-data international a-s
Laserjet	Hewlett-Packard Company
Lexmark	Lexmark International, Incorporated
Netware	Novell Corporation
PostScript	Adobe Systems, Inc.
Windows	Microsoft Corporation
WordPerfect	WordPerfect Corporation

Other trademarks are trademarks of their respective companies.

Preface

This document is intended for IBM customer printing specialists and IBM systems engineers dealing with printing.

It contains an introduction to different ways of distributing printing, especially AFP printing, from a host system.

How This Document is Organized

The document is organized as follows:

- Chapter 1, "Introduction" introduces different ways of distributing printing.
- Chapter 2, "Requirements" lists the requirements in hosts and workstations.
- Chapter 3, "Installation" describes the installation procedures.
- Chapter 4, "Operation" describes how to operate the printing procedure.
- Chapter 5, "Performance Considerations" deals with the performance considerations.
- Chapter 6, "SNA Upload Facility" describes the SNA upload and print function.
- Chapter 7, "When to Use Which Way" summarizes the information about different ways to distribute printing.

Related Publications

The publications listed in this section are considered particularly suitable for a more detailed discussion of the topics covered in this document.

Advanced Function Printing

- *Intelligent Printer Data Stream Reference*, S544-3417
- *Advanced Function Printing: Printer Information*, G544-3290
- *Advanced Function Printing: Data Stream Reference*, S544-3202
- *Advanced Function Printing: Host Font Data Stream Reference*, S544-3289
- *A Guide to IBM's Advanced Function Printing*, G544-3095
- *Advanced Function Printing: Printer Summary*, G544-3135
- *Advanced Function Printing: Software General Information*, G544-3415

Printing in AS/400

- *Advanced Function Printing Utilities/400 User's Guide*, SH18-2416
- *AS/400 Guide to Programming for Printing*, SC41-8194

Printing in MVS

- *Print Services Facility/MVS: System Programming Guide*, S544-3672
- *Print Services Facility/MVS: Application Programming Guide*, S544-3673
- *IBM TCP/IP for MVS Network Print Facility*, SC31-8074

Printing in VM

- *Print Services Facility/VM: System Programming Guide*, S544-3680
- *Print Services Facility/VM: Application Programming Guide*, S544-3677
- *Print Services Facility/VM: Operator's Guide*, S544-3682

Printing in VSE

- *Print Services Facility/VSE: System Programming Guide*, S544-3665
- *Print Services Facility/VSE: Application Programming Guide*, S544-3666

Print Services Facility/2

- *Print Services Facility/2: Getting Started*, G544-3767
- *Print Services Facility/2: Distributed Print Function Network Configuration Guide for System/370*, S544-3809
- *Print Services Facility/2: Distributed Print Function Network Configuration Guide for OS/400*, S544-3823
- *Print Services Facility/2: Type Transformer User's Guide*, G544-3796
- *Print Services Facility/2: Printer Attachment Guide*, G544-5215
- *IBM Print Services Facility for OS/2: A Network Configuration Guide for System/370 and Communications Manager/2 Version 2.00*, S544-3911
- *IBM Print Services Facility for OS/2: An Installation Cookbook for System/370 and Token Ring Networks Version 2.00*, G544-3965
- *IBM Print Services Facility for OS/2: An Installation Cookbook for AS/400 and Token Ring Networks Version 2.00*, G544-3966
- *PSF/2 Technical Reference*, online publication

Print Services Facility/6000

- *IBM/AIX Print Services Facility/6000: Print Services Facility for AIX Users*, G544-3814
- *IBM/AIX Print Services Facility/6000: AIX for Users of Print Services Facility*, G544-3877
- *IBM/AIX Print Services Facility/6000: Print Administration*, S544-3817
- *IBM/AIX Print Services Facility/6000: Print Submission*, S544-3878
- *IBM/AIX Print Services Facility/6000: AFP Conversion and Indexing Facility*, S544-3930

International Technical Support Organization Publications

- *AS/400 Printing II*, GG24-3704
- *AS/400 Printing III*, GG24-4028
- *Print and View Data Streams*, GG24-3938
- *Transforming Type 1 Outline Fonts*, GG24-3964
- *AFP Resources in a Multi-system Environment*, GG24-4029
- *AFP Printing in an IBM Cross-System Environment*, GG24-3765

A complete list of International Technical Support Organization publications, with a brief description of each, may be found in:

International Technical Support Organization Bibliography of Redbooks, GG24-3070.

To get a catalog of ITSO technical publications (known as “redbooks”), VNET users may type:

```
TOOLS SENDTO WTSCPOK TOOLS REDBOOKS GET REDBOOKS CATALOG
```

How to Order ITSO Technical Publications

IBM employees in the USA may order ITSO books and CD-ROMs using PUBORDER. Customers in the USA may order by calling 1-800-879-2755 or by faxing 1-800-284-4721. Visa and Master Cards are accepted. Outside the USA, customers should contact their local IBM office.

Customers may order hardcopy ITSO books individually or in customized sets, called GBOFs, which relate to specific functions of interest. IBM employees and customers may also order ITSO books in online format on CD-ROM collections, which contain books on a variety of products.

Acknowledgments

This project was designed and managed by:

Mikko Markkula
International Technical Support Organization, Poughkeepsie Center

The authors of this document are:

Heikki Kauppinen
IBM Finland

Jose Carlos Rodriguez
IBM Uruguay

Mikko Markkula
ITSO

This publication is the result of a residency conducted at the International Technical Support Organization, Poughkeepsie Center.

Thanks to the following people for the invaluable advice and guidance provided in the production of this document:

Jan Baisden
International Technical Support Organization, Poughkeepsie Center

Bill White
International Technical Support Organization, Poughkeepsie Center

Ann Hamilton
Pennant

Andy Cherrington
Pennant

David Julie
Pennant

Scott Mastie
Pennant

Jim Spikes
Pennant

Chapter 1. Introduction

This chapter describes the development of distributed printing and different ways to distribute AFP printing from a host system.

1.1 Development of Distributed Printing

The development of distributed data processing power lead also to requirements of distributing printing from the host system. In the early times of data processing, the only way to have printed documents delivered to the remote users was to transport the printed documents.

With the invention of time sharing systems and remote job processing, the documents could be printed on printers that were remotely attached to the host systems.

The coming of intelligent workstations increased the ways of distributing significantly.

The following chapters describe the different ways to distribute printing of AFP documents.

1.2 Using Remote Printers

The simplest way to distribute AFP printing is to attach AFP printers to the host system with telecommunications connections.

In this case the control of the printing is completely under the services of the host system.

The speed of the communications restricts the speed of printing, as all the resources needed for printing have to be downloaded to the printer.

With slow telecommunications lines, the printer performance is affected significantly.

1.3 Remote PrintManager Version 1

To avoid the performance problems caused by the slow telecommunications lines when resources were needed to be downloaded, a program called Remote PrintManager was designed.

The basic idea was to have an intelligent workstation, PC/AT at that time, store the resources, and when the printer needed the resources, the downloading was done from the workstation to the printer. The speed of downloading resources was much faster this way than through the telecommunications lines.

The first version of Remote PrintManager Version 1 supported only 9600 bps SDLC lines and the IBM 3820 Printer.

1.4 Remote PrintManager Version 2

Remote PrintManager Version 2 provided support for 19200 bps lines, token-ring attachment. It also supported new printers.

Functionally Version 2 was similar to Version 1. Both versions could store resources, when sent from systems supporting resource marking. Marking the resources *public* allowed Remote PrintManager to store the resources when the resources were first used for a printer. When the resources were referred to the next time, the resources stored in the workstation were used, provided that the resources had not been changed in the host library.

Control of whether the resources were stored or not was also possible in the Remote PrintManager by specifying LIBRARY On or OFF. PSF/MVS and PSF/VSE could take the advantage of resources stored in the workstation; with PSF/VM or PSF in AS/400, it was not possible.

Remote PrintManager Version 2 is no longer orderable.

1.5 Remote PrintManager Version 3

Although the name of Remote PrintManager Version 3 was similar to Remote PrintManager Version 2, these two versions are functionally almost completely different.

Remote PrintManager Version 3 has separate functions for receiving host print files to the workstation spool and printing the files from the spool to a printer attached to the workstation.

Either at least two workstations were needed for receiving and printing, or the user had to switch the same workstation between receiving and printing.

One of the advantages in Remote PrintManager Version 3 was that the user could share a workstation-attached printer for host printing and local printing.

The most significant difference between Version 3 and Version 2 was that with Version 3 the control of the printing procedure was moved to the workstation. In Version 2 the printing is controlled by the host PSF, which means that, for example, error recovery is handled by the host, all the operating commands are entered in the host, and so on. In Version 3, the host system considers the print job completed as soon as it is successfully transferred to the RPM spool in the workstation. After that, the job is controlled by the workstation software and operated from the workstation.

1.6 PSF/2 Distributed Print Facility

The announcement of PSF/2 Version 1.0 running in a PS/2 under the OS/2 operating system brought the AFP support to the workstation. AFP files in the workstation could be printed on various printers attached to the workstation, including printers such as 4019, 4029 and HP Laserjet, attached to the parallel port of the workstation.

In this version there was no direct support for downloading the print files from the host, neither was there any direct way to print from the host to a printer attached to the workstation. If the user wanted to print a host file on a PSF/2

attached printer, the file had to be downloaded from the host to the workstation manually.

PSF/2 Version 1.10 added a new function, Distributed Print Function. This could be said to be Remote PrintManager Version 3 included in PSF/2. Functionally, PSF/2 Distributed Print Function works almost exactly as Remote PrintManager Version 3 did.

To the host, DPF is acting like a printer. The host system considers the print job completed when the print file has been successfully received into the spool of PSF/2. After that, everything is controlled in the workstation. DPF allows printing of host files and local printing share a printer.

1.7 PSF Direct/2

PSF/2 version 2 provides PSF Direct/2, which is another way to distribute printing. If DPF is seen as Remote PrintManager Version 3 included in PSF/2, PSF Direct may be considered to be Remote PrintManager Version 2 in PSF/2.

PSF Direct works the same way as Remote PrintManager 1 or 2 with the library function switched off. This means that the PSF Direct/2 component of PSF/2 is only a printer driver. The print data is not spooled to the workstation spool, but sent directly to the printer. So, the print job is controlled by the host system until the printing has completed.

1.8 PSF Direct/6000

PSF Direct/6000 was implemented as fixes to Print Services Facility/6000 Version 1 Release 2. This is functionally the same as the corresponding component in the PSF/2 product.

1.9 Network Print Facility

With TCP/IP MVS V3R1, a component called Network Print Facility (NPF) was included. This component was originally designed for printing normal line printer data files using the LPR command on the MVS side and LPD server on the receiving side. NPF allows the user to control the printing process by writing user exits to intercept the processing. One exit of this kind was included in PSF/6000 as a enhancement fix. This exit provides support for AFP related functions and transmitting AFP parameters to the PSF/6000.

NPF is different from other ways of distributing printing, as it does not need PSF in the host system. NPF is not available in the TCP/IP implementations in operating systems other than MVS.

1.10 SNA Upload-n-Print Facility

This facility, included in PSF/2 Version 2, does not exactly distribute printing from a host system, but rather vice versa.

It allows the user of a PSF/2 workstation to upload the print job from a workstation and print the job on a printer controlled by the host system.

1.11 Summary

Figure 1 shows the different ways of distributing printing from a host system.

PSF/6000 in this picture refers to the PSF Direct/6000 component of PSF/6000.

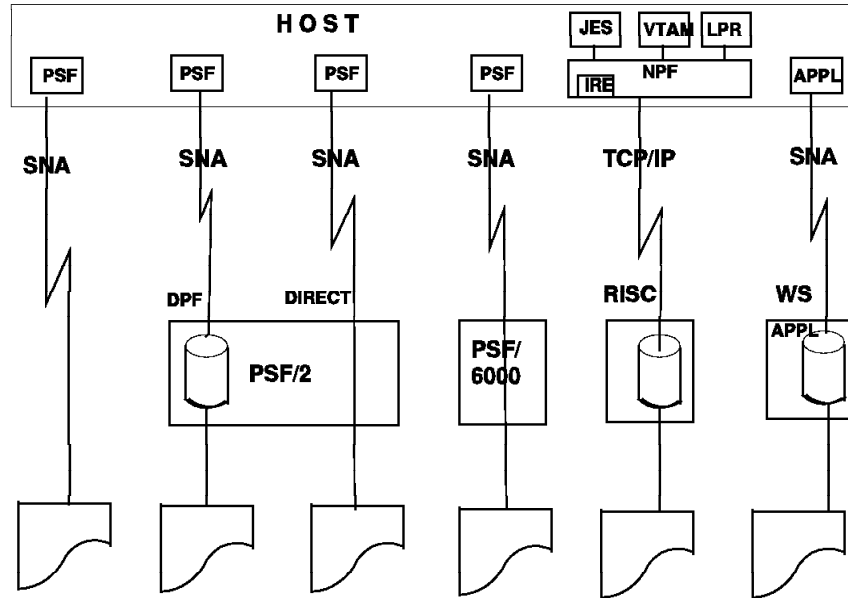


Figure 1. Summary of Distributed Printing Possibilities

Chapter 2. Requirements

This chapter describes the differences in host system and workstation requirements with different ways of distributed printing.

2.1 Requirements in the Host System for PSF/2

This section lists the host system requirements for distributing printing. These requirements apply to PSF/2 Version 2.0 product.

2.1.1 Hardware Requirements

The hardware requirements for the host system just call for any S/370, S/390 or AS/400 system, provided they have adequate software installed.

2.1.2 Software Requirements

Software required varies according to the platform and operating system.

For S/370 and S/390:

- PSF/MVS 2.1 (5695-040) with APAR #OY51438 for DPF support only.
- PSF/MVS 2.1 (5695-040) with APAR #OW08338 for full PSF Direct support.

or

- PSF/VSE 2.2.0 (5686-040) for DPF support only.
- PSF/VSE 2.2.0 (5686-040) with APAR #DY43428 for full PSF Direct support.

or

- PSF/VM 2.1.0 (5684-141) with APARs #PN23680 and #PN26700 for DPF support only.
- PSF/VM 2.1.0 (5684-141) with APAR #PN62804 for full PSF Direct support.

For AS/400:

- OS/400 V2R2 (5738-SS1) or higher, with appropriate PTFs for both DPF and PSF Direct printing. OS/400 V3R1 requires the PSF feature.

2.2 Requirements in the OS/2 Workstation

This section lists the OS/2 system requirements for distributing printing.

2.2.1 Hardware Requirements

PSF/2 requires a PS/2 or compatible personal computer. It should be equipped with Micro Channel for all printers with the exception of IBM LaserPrinter 4019, 4019E, 4029, Lexmark IBM 4037, 4039 (using PCL5 emulation) and all Hewlett-Packard Laserjet II, Laserjet III and Laserjet IV compatible as well as IBM PPDS compatible laser printers. All these printers only require a PS/2 that can run the operating system, as described below in 2.2.2, "Software Requirements" on page 7. Micro Channel is not needed, if the printer is attached using AFCCU or i-data 7913, and TCP/IP communication.

When using PSF/2 to print PostScript data, a PS/2 math coprocessor is recommended for performance reasons. The math coprocessor is usually a standard feature in many of the newest PS/2 systems.

More than one supported printer may be attached to a PS/2, thus making multiple printers available to the users (LAN and host). Under OS/2 Version 2.x, a single PSF/2 can support up to ten printers, although hardware, memory and performance constraints may impose a lower limit.

Multiple printers are supported using the various ports available. These may be the parallel and the serial ports as well as the various LAN adapter cards that allow attachment of ASCII printers. The IPDS printers may be attached either through the Printer Service Adapter (PSA) card through coax cable, or through the S/370 Channel Emulator/A card through S/370 channel or through a Multi-Protocol Adapter/A card through modems and SDLC lines.

For more detailed information on printer attachment, refer to "IBM Print Services Facility/2 Printer Attachments Guide" (G544-5215).

From the memory standpoint, here are some guidelines to follow:

Required for local printing

- 16MB minimum for a standalone, single printer configuration. This includes only PSF/2.

Required for host printing:

- 22.1MB minimum for a DPF single printer configuration. This includes DPF, CM/2 and NTS/2-LAPS.
- 21MB minimum for a PSF Direct single printer configuration. This includes DPF, CM/2 and NTS/2-LAPS.

Required for LAN support:

- 4MB additional for OS/2 LAN Server
- .5MB additional for Novell support Netware Requester for OS/2, V2.0
- 4MB additional for TCP/IP

Required for additional printers:

- 1.9MB additional for each additional local printer
- 1.3MB additional for each new DPF printer
- 1.7MB additional for each new PSF Direct printer

Required for optional PSF/2 functions:

- 4MB additional for Type Transformer (available with PSF/2 1.0 and 1.1 only)
- 4MB additional for PostScript Level 1 support

Hard disk space is also important, so here are some guidelines:

Required for local printing:

- 72MB

Required for host printing:

- 22.2MB additional for DPF
- 20MB additional for PSF Direct

Required for LAN support:

- 8.7MB additional for OS/2 3.0 LAN Server
- 2MB additional for Novell support Netware Requester for OS/2, V2.01
- 11MB additional for TCP/IP

Required for additional printers:

- 0.33MB for each additional local printer
- 0.33MB for each additional DPF printer
- 0MB for each additional PSF Direct

Required for optional PSF/2 functions:

- 5.9MB additional for PostScript (includes Type 1 outline fonts)
- 2.2MB additional for the Type Transformer (PSF/2 1.0 and 1.1 only)

Required for fonts:

- 1.9MB additional for Type 1 outline fonts
- 2.1MB additional for 240-peI Proprinter Emulation fonts
- 2.9MB additional for 300-peI Proprinter Emulation fonts
- 11.3MB additional for coded fonts (all countries)
- 2.8MB additional for PSF/2 240-peI IBM-supplied compatibility fonts
- 3.8MB additional for PSF/2 300-peI IBM-supplied compatibility fonts

And, of course, disk space will be needed for resources and print data. Also, the OS/2 swap file and the OS/2 spool will have to be enlarged. The PSF/2 IBM Core Interchange fonts are shipped on CD-ROM and may be accessed using a dedicated CD-ROM player at the workstation. They may be copied partially or totally to the hard disk, in which case they will take 192MB of additional space.

Besides, the PS/2 must have a card to connect it to the LAN. This may be a token-ring card or an Ethernet card, depending on the LAN configuration.

2.2.2 Software Requirements

PSF/2 Version 2.0 has the following software requirements:

- OS/2 Version Version 2.10 or 2.11 is recommended.
- Communications Manager/2 1.10, if DPF, store of fonts on host system with Type Transformer or a communications-attached 3820 printer is used. The latest CSD level is recommended.
- DataBase 2 for OS/2 (without Remote Data Services). The latest CSD level is recommended as well.
- Query Manager 1.0.

If used as a LAN print server, OS/2 LAN Server Version 3.0 is required. If used with a Novell Netware LAN, the Novell NetWare Requester for OS/2 is required.

2.3 Requirements in the Host System for PSF/6000

This section lists the host system requirements for distributing printing. These requirements apply to PSF/6000 Version 1.2 product.

2.3.1 Hardware Requirements

The hardware requirements for the host system just call for any S/370, S/390 or AS/400 system, provided they have adequate software installed.

2.3.2 Software Requirements

Job routing and resource mounting requirements:

If you plan to use TCP/IP or NFS to route print jobs from other IBM systems or mount resources from other IBM systems, the following list shows the products that must be installed on the applicable systems, and it indicates the minimum release levels of those products:

- For MVS systems:
 - 5735-HAL IBM TCP/IP Version 2 Release 2
 - Either 5665-XA3 MVS/Data Facility Product Version 3 Release 1 (Network File System server support), or 5695-DF1 IBM DFSMS/MVS(TM) Version 1 Release 1 (Network File System support)
- For VM systems:
 - 5735-FAL IBM TCP/IP for VM Version 2 Release 2 with Network File System Feature (Feature 0802 or 0803) installed
 - Optionally, the 5798-DRG VM Interface Program for TCP/IP
- For AIX/ESA(TM) systems:
 - 5756-112 IBM AIX/ESA Version 2 Release 1
 - 5696-149 Network File System for IBM AIX/ESA Version 2 Release 1
- For OS/400 systems
 - 5738-TC1 IBM TCP/IP Connectivity Utilities/400 Version 2 Release 3
 - 5798-RYW IBM TCP/IP File Server Support/400 Version 2 Release 2

Routing print jobs to or from the VSE/ESA system using File Transfer Protocol (FTP) requires that one or more of the following products be installed on the VSE/ESA system:

- 5758-PC0 File Transfer Protocol Client (for VSE)
- 5758-PC1 File Transfer Protocol Server (for VSE)
- 5758-PC3 OCS II (for IBM RISC System/6000 for VSE) 16 Logical Unit
- 5758-PC4 OCS II (for IBM RISC System/6000 for VSE) 32 Logical Unit
- 5758-PC5 OCS II (for IBM RISC System/6000 for VSE) 64 Logical Unit
- 5758-PC6 OCS II (for IBM RISC System/6000 for VSE) 128 Logical Unit
- 5758-PC7 OCS II (for IBM RISC System/6000 for VSE) 256 Logical Unit

If you plan to use the Network Print Facility to send line-data and MO:DCA-P data streams from the MVS JES spool to the AIX queue through TCP/IP for printing by

IBM Print Services Facility for AIX Release 2, the following product must be installed:

- IBM TCP/IP Version 3 Release 1 for MVS (5655-HAL) or later versions or releases. Many fixes are needed on the code shipped at general availability time. Please check the latest service recommendations with an IBM representative.

If you plan to send print data streams from PSF on MVS, VM, or OS/400 systems across SNA links to IBM Print Services Facility for AIX Release 2, the following list shows the products that must be installed on the applicable system and it indicates the minimum release levels of these products.

For S/370 and S/390:

- PSF/MVS 2.1 (5695-040) with APAR #OW08338 for full PSF Direct support.

or

- PSF/VSE 2.2.0 (5686-040) with APAR #DY43428 for full PSF Direct support.

or

support only.

- PSF/VM 2.1.0 (5684-141) with APAR #PN62804 for full PSF Direct support.

For AS/400:

- OS/400 V2R2 (5738-SS1) or higher, with appropriate PTFs for PSF Direct printing. OS/400 V3R1 requires the PSF feature.

Appropriate SNA LU 6.2 communications software for the specific host attachment.

2.4 Requirements in the RISC System/6000 Workstation

This section lists the RISC System/6000 system requirements for distributing printing.

2.4.1 Hardware Requirements

Hardware requirements are a function of the printers to be driven by the RISC/System/6000 server. For basic data stream transformation and printer management, IBM Print Services Facility for AIX Release 2 requires, at a minimum, a RISC System/6000 POWERstation(TM) or POWERserver(TM) Model 220 with 32MB of memory. If you will be connecting channel-attached printers, IBM Print Services Facility for AIX Release 2 requires a RISC System/6000 POWERstation or POWERserver Model C10 or higher with 32MB of memory.

The minimum system memory requirement for the workstation on which IBM Print Services Facility for AIX Release 2 is installed is 32MB. IBM Print Services Facility for AIX Release 2 also requires 5MB of system memory for a RISC System/6000 with a single printer, and an additional 5MB of system memory for each additional printer.

Fixed-disk space is dependent on the functions you choose to install, as well as the fonts needed. The minimum required for a base system is 20MB. These numbers reflect the minimum amount of fixed-disk space IBM Print Services Facility for AIX Release 2 requires and are in addition to the space required by

the AIX operating system and other programs that may be installed. More fixed-disk space is required if:

- Additional fonts, overlays, page segments, form definitions, or page definitions are needed.
- The IBM Print Services Facility for AIX Release 2 PostScript transform is configured to create IM images, which typically require more than 500KB per page.
- You are printing large jobs or PostScript jobs. The amount of processing (spool) space depends on the number, type, and size of the print files.

Also, depending on the printers to be attached, several pieces of additional hardware may be needed, like the S/370 Channel Emulator/A Adapter for channel attached printers, or the i-data 7913 IPDS Printer LAN Attachment for coax or twinax attached printers.

2.4.2 Software Requirements

IBM Print Services Facility for AIX Release 2 requires IBM AIX Version 3 (program number 5756-030) Release 2.4 or later releases for the RISC System/6000. The new functions described in this book are supported with APARs PN59095 and IX46492 installed.

The following product is a prerequisite for PSF Direct:

- IBM AIX SNA Server/6000, Version 2.1 (5765-247) or later.

There are very recent fixes that were not available for the most recent level of SNA Server/6000 at the time of our residency. That was why we used a release that was a little older, as the fix for that release was available. The reader is asked to check the status of the service recommended for SNA Server/6000. The most recent information is available from your IBM representative.

We used SNA Server/6000 2.1 with PTF U428435 installed. In addition, fixes for APARs IX44683, IX44984, and IX45510 were received from Pennant.

Chapter 3. Installation

This chapter describes the differences in host system and workstation installation with different ways of distributing printing.

3.1 Installation in the Host System

This section lists the host system installation for distributing printing.

3.1.1 Hardware Installation

The host systems used were MVS/ESA, VM/ESA, and VSE/ESA running in an IBM 9121 CPU. VSE was running under VM. An AS/400 system was also included.

The physical connection from the host to the workstations was through IBM 3745 Token Ring Controller from S/370 hosts and through a token-ring adapter from the AS/400 system. The token ring was running at 4Mbs speed.

TCP/IP connection from the MVS system was through an IBM 3172 Controller.

3.1.2 Software Installation

The software levels of the host systems and the host system Print Services Facility products were as follows:

- In MVS/ESA:
 - MVS/ESA 4.3
 - PSF/MVS 2.1.1
- In VM/ESA:
 - VM/ESA 2.2
 - PSF/VM 2.1.0
- In VSE/ESA:
 - VSE/ESA 1.2.3
 - PSF/VSE 2.2.0

3.2 Installation in the OS/2 Workstation

This section describes the OS/2 system installation for distributing printing.

3.2.1 Workstation Hardware Installation

PSF/2 was running in an PS/2 Model 90 486 processor with 24MB of memory.

3.2.2 Workstation Software Installation

OS/2 Version 2.1 was used; a more recent release is recommended, as the only problems faced were OS/2 related.

3.2.3 PSF/2 Customization

The following tasks must be performed for customization of PSF/2:

define printer device

See Figure 2.

define printer queue

See Figure 3 on page 13.

define host receiver

For host connection, you have two possibilities:

1. DPF - Distributed Print Function
2. PSF Direct

DPF is a spooled solution; print files from the host are first copied into a PSF/2 spool and afterwards printed onto paper. See 3.2.3.1, "Distributed Print Function" on page 13.

PSF Direct links the host, the PSF/2 and printer together so that printable pages go directly to paper without any intermediate steps. See 3.2.3.2, "PSF Direct" on page 15.

First you must define the printer to PSF. This includes name of the printer and its physical connection. Select **Profile** from the PSF/2 Control Panel and then **New**.



Figure 2. Define a New Printer Device

Next you must define a printer queue so that local printing within the OS/2 can take place. Select **Options** from PSF/2 Control Panel and **Setup queues**.

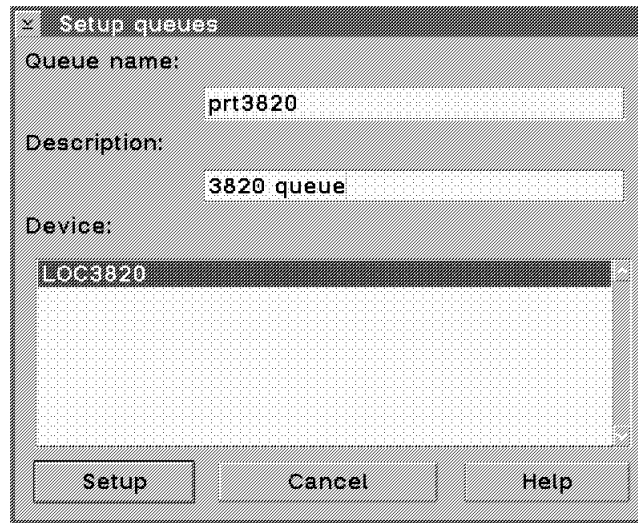


Figure 3. Define a New Printer Queue

Now you can test local printing by using the APRINT command. The dest= operand must refer to the queue defined above.

```
aprint config.sys dest=prt3820
```

3.2.3.1 Distributed Print Function

When you have decided to use DPF, you can add the host connection for it. Select PSF Distributed Print Function and add a new spool to PSF/2.

If you want to use DPF with several hosts, you must do this for each of them.

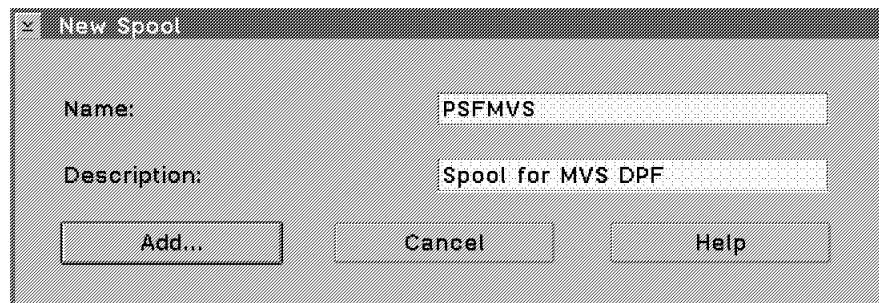


Figure 4. Create New Spool for DPF

Next you must add the host receiver to the host PSF. From DPF Spool Manager select **Receiver** and **Setup** to add a new receiver to PSF/2.

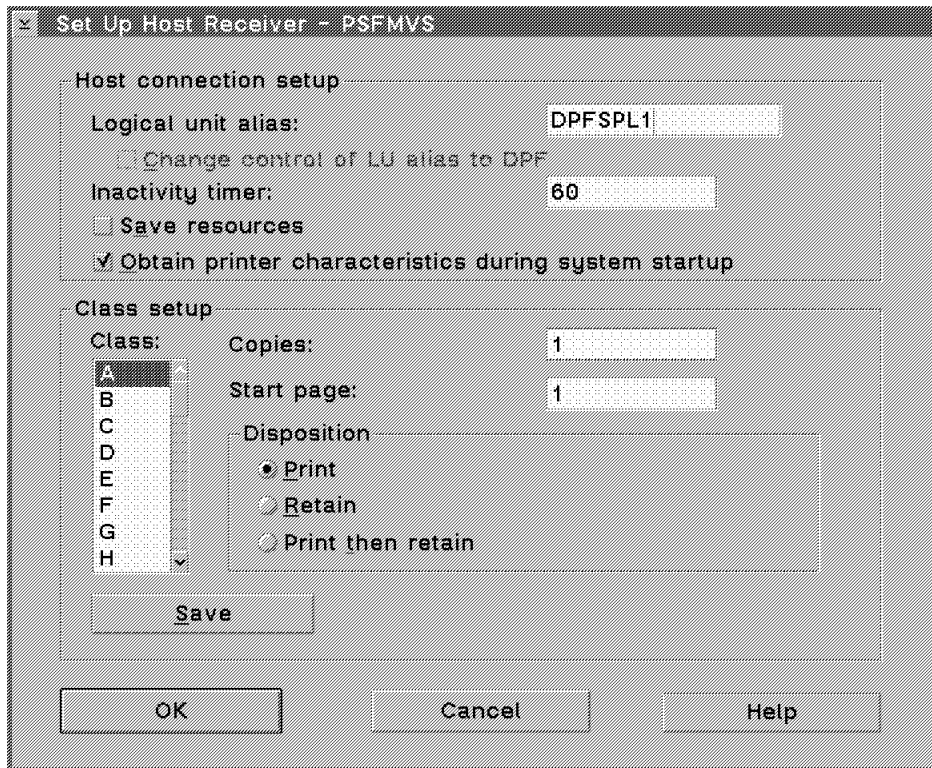


Figure 5. Set Up Host Receiver for DPF

3.2.3.2 PSF Direct

When you have decided to use PSF Direct, you can add the host connection for it.

Select **PSF Direct** and further select **Receiver** and **Setup** to add a new host for PSF Direct.

If you want to use Direct with several hosts, you must do this for each of them.

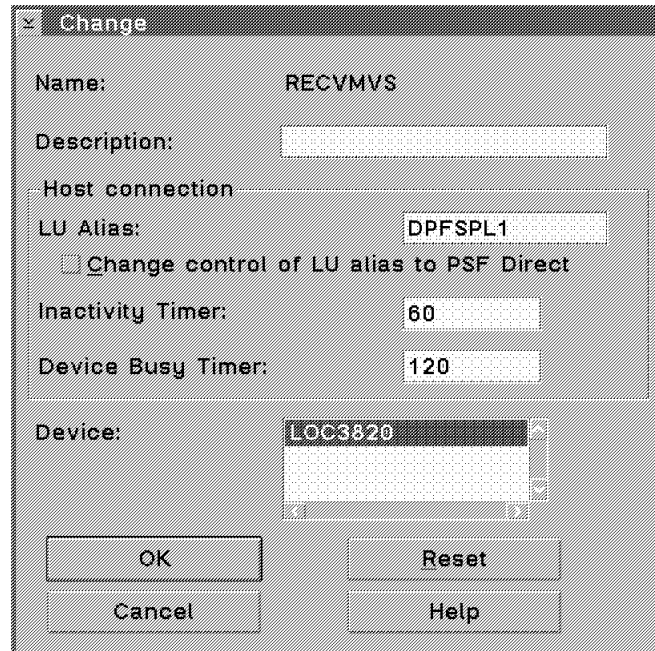


Figure 6. Set Up Host Receiver for PSF Direct

3.2.4 Sharing Printers between Different Host Printer Drivers

If you have two (or more) host systems, you can share a single printer in different ways

- Both hosts use DPF
- Both hosts use Direct
- One host uses DPF and the other uses Direct

The panels shown in Figure 5 on page 14 and Figure 6 and also the Tuning option of PSF/2 Control Panel have a field named **Inactivity timer**. A value less than 9999 means that the related connection is freed when it has been unused for that many seconds.

If sharing printers with DPF, the **Job Interval Shutdown Timer** in the Tuning Options of the PSF Control Panel must be set to something less than 9999.

Table 1 on page 16 describes the parameters related to printer sharing.

<i>Table 1. Recommended Values for PSF/2 Parameters for a Single Printer</i>					
Case	Job Interval Shutdown Timer	DPF inactivity timer	Direct inactivity timer	Direct device busy timer	Notes
Single host using DPF	9999	9999	-	-	1 5 6
Single host using Direct	9999	-	9999	9999	1 5 7
Single host switching between DPF and Direct (occasional)	9999	9999	9999	9999	2 5 7
Single host switching between DPF and Direct (frequent)	30	30	30	9999	3 6
Multiple hosts using DPF	9999	9999(host1) 9999(host2)	-	-	1 5 6
Multiple hosts, one with DPF and other with Direct	30	9999(host1)	30 (host2)	9999(host2)	4 5 6
Multiple hosts using Direct	30	-	30(host1) 30(host2)	9999(host1) 9999(host2)	4 6

Notes

- 1** No need to terminate sessions.
- 2** Values 9999 mean that sessions are not closed when all files have been processed. It saves the overhead of setting up the connections, but causes more work at switching. The device and host receivers must be manually operated.
- 3** Value 30 terminates the sessions 30 seconds after all files have been printed. Value 30 is used as a sample of a low value. You must consider your own case and set this value according to your needs.
- 4** Value 30 frees the printer for the other host 30 seconds after all files have been printed. No manual switching required. Device busy timer makes the Direct host just wait until printer is free. Value 30 is used as a sample of a low value. You must consider your own case and set this value according to your needs.
- 5** When either the DPF inactivity timer or the Direct inactivity timer is set to 9999, it is recommended to put the DISCINTV parameter at the host PSF into 0.
- 6** Local printing using the APRINT command or the Print Submitter panel is fully supported.
- 7** Local printing using the APRINT command or the Print Submitter panel can't be done without manually stopping the PSF Direct connection.

3.3 Communications Manager/2 Customization

The following tasks must be performed for customization of PSF/2:

1. Define physical connection to the host
2. Define the logical connection between the PSF/2 and host PSF

To connect the PSF/2 to host you, will have to go to CM/2 Setup, and open the configuration of the appropriate type, in our case Token-ring. Select **APPC APIs** and you will get the screen shown in Figure 7.

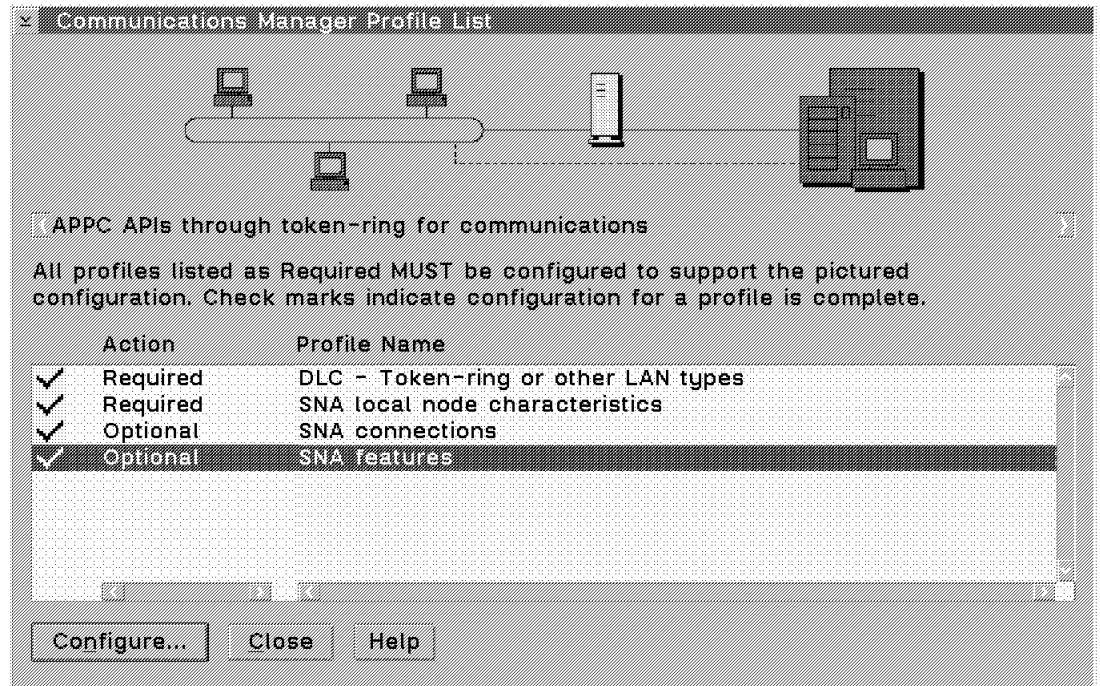


Figure 7. Definition of APPC APIs

This panel has four profiles listed, two required and two optional. You will have to go through all of them.

The first selection lets you define parameters relating to the adapter. The second one allows you to define the local node. The third one defines the host where you are connecting to.

The last one allows you to define the features, like Local LUs or Partner LUs.

The screenshot shows a dialog box titled "Token Ring or Other LAN Types DLC Adapter Parameters". It contains several configuration options:

- Adapter: 0
- Free unused links
- Send alert for beaoning
- Window count:
 - Send window count: 4 (1 - 8)
 - Receive window count: 4 (1 - 8)
- Maximum link stations: 4 (1 - 255)
- Maximum activation attempts: 0 (0 - 99)
- Maximum [-field size: 1994 (265 - 16393)
- Percent of incoming calls (%): 0 (0 - 100)
- Link establishment retransmission count: 8 (1 - 127)
- Retransmission threshold: 8 (1 - 127)
- Local sap (hex): 04 (04 - 9C)
- C&SM LAN ID: PS06
- Connection network name (optional): [] . []

Buttons at the bottom: OK, Delete, Cancel, Help.

Figure 8. Definition of Data Link Control

The screenshot shows a dialog box titled "Local Node Characteristics". It contains the following configuration options:

- Network ID: SYSLAB
- Local node name: SLPS06
- Node type:
 - End node to network node server
 - End node - no network node server
 - Network node
- Your network node server address (hex): []
- Local node ID (hex): 05D 20006

Buttons at the bottom: OK, Options..., NetWare(R)..., Cancel, Help.

Figure 9. Local Node Characteristics

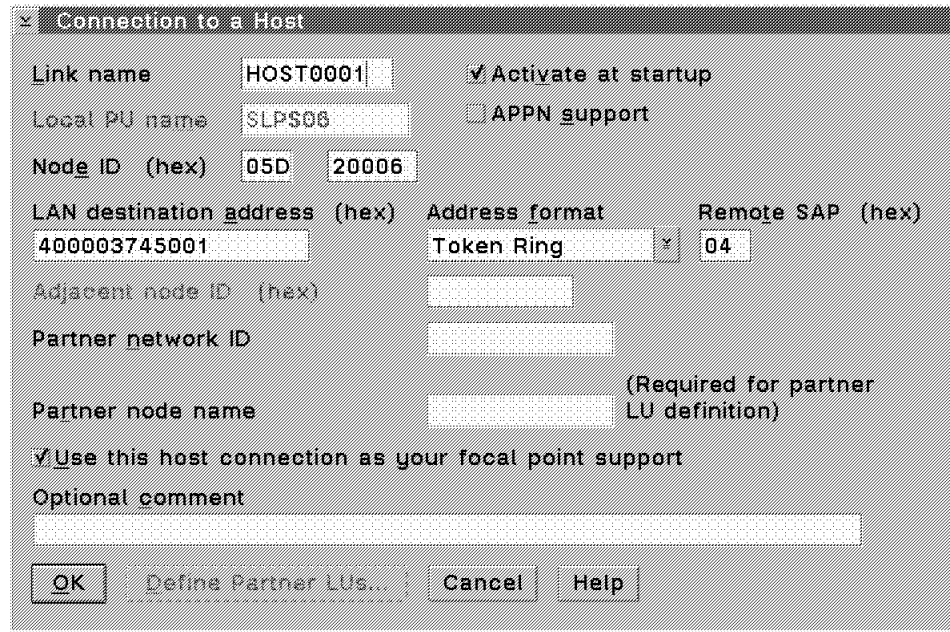


Figure 10. Definition of Host Connection


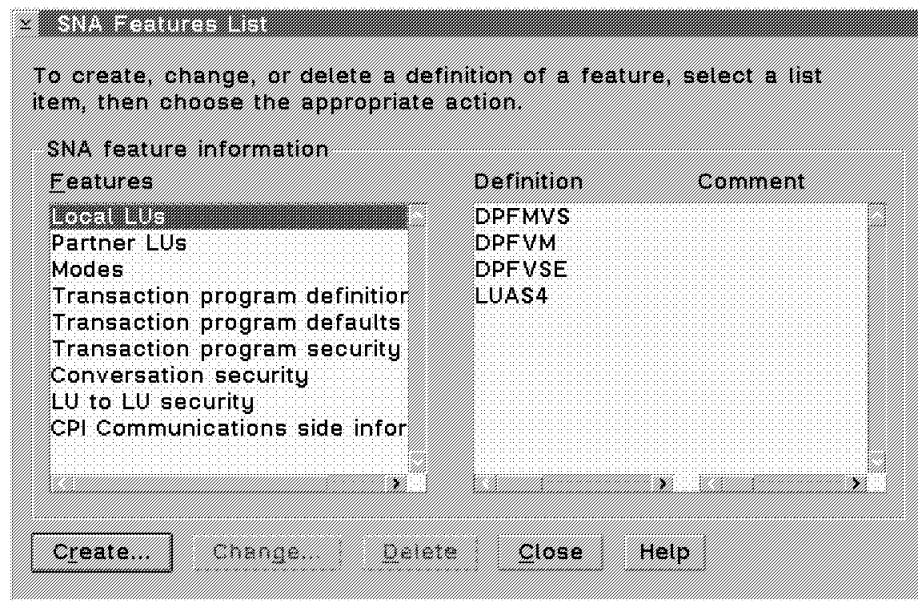



Figure 11. Definition of SNA Features

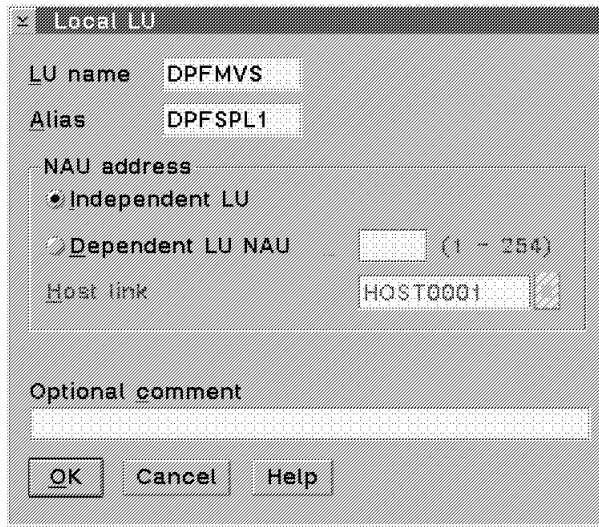

The 'Local LU' dialog box contains the following fields and options:

- LU name: DPFMVS
- Alias: DPF SPL1
- NAU address:
 - Independent LU
 - Dependent LU NAU: [] (1 - 254)
- Host link: HOST0001
- Optional comment: []
- Buttons: OK, Cancel, Help


Figure 12. Local LU

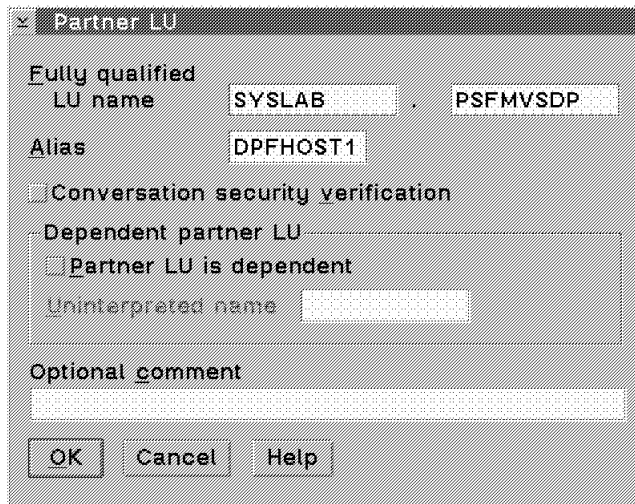

The 'Partner LU' dialog box contains the following fields and options:

- Fully qualified LU name: SYSLAB . PSFMVSDP
- Alias: DPFHOST1
- Conversation security verification
- Dependent partner LU:
 - Partner LU is dependent
 - Uninterpreted name: []
- Optional comment: []
- Buttons: OK, Cancel, Help

Figure 13. Partner LU

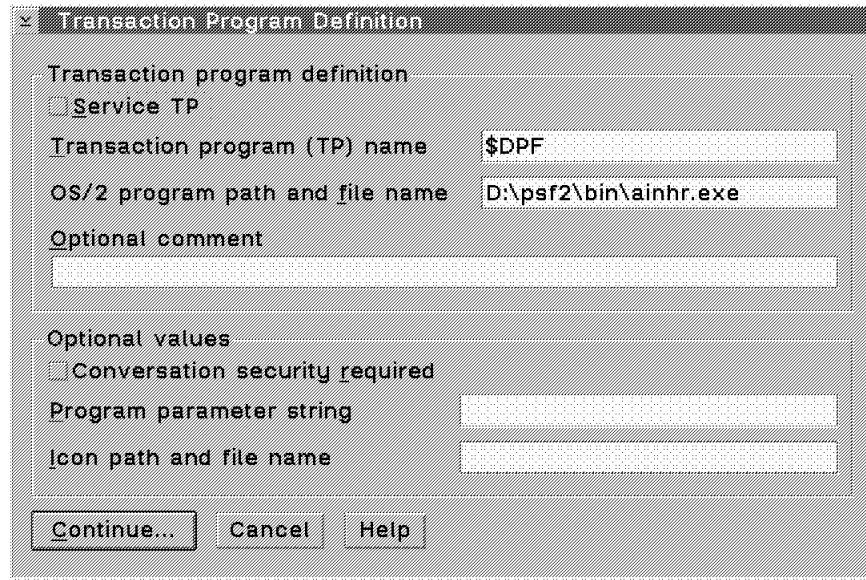

The image shows a dialog box titled "Transaction Program Definition". It contains several fields and options:

- Transaction program definition**
 - Service TP
 - Transaction program (TP) name: \$DPF
 - OS/2 program path and file name: D:\psf2\bin\ainhr.exe
 - Optional comment: (empty text box)
- Optional values**
 - Conversation security required
 - Program parameter string: (empty text box)
 - Icon path and file name: (empty text box)

At the bottom of the dialog box are three buttons: "Continue...", "Cancel", and "Help".

Figure 14. Transaction Program Name

3.4 Parameter Relationships for PSF/2

Note that the use of reversed numbers (like **1**) refers to values, which must match. Every occurrence of the same number must have equal value.

3.4.1 Host PSF Definitions

```
PRT5 1 CLASS=X,FSS=WRT5 2
```

Figure 15. MVS JESPARM Definitions

```
S DEV,PR3820,SYSPSF8,8 10
```

Figure 16. VSE Printer Start

```
//WRT5 2 PROC
. . .
//PRT5 1 PRINTDEV APPLID=PSFMVSDP, 3
// LUNAME=DPFMVS, 4
// LOGMODE=MODDPFC2
```

Figure 17. PSF/MVS JCL

```
APPLID PSFMVSDP 5
LUNAME DPFVM 9
LOGMODE MODDPFC2
```

Figure 18. PSF/VM OPTIONS PDM Definitions

```
PR3820 10 PRINTDEV APPLID=PSFVSEDP, 11
LUNAME=DPFVSE, 12
LOGMODE=MODDPFC2
```

Figure 19. PSF/VSE Start-Up JCL

```
MODDPFN MODETAB
MODDPFC2 MODEENT LOGMODE=MODDPFC2,FMPROF=X'13',TSPROF=X'07', X
PRIPROT=X' B0', SECPROT=X' B0', COMPROT=X' DOB1', X
RUSIZES=X'8585',PSERVIC=X'060200000000000000002000', X
PSNDPAC=X'10',SRCVPAC=X'10',SSNDPAC=X'00'
MODEEND
END
```

Figure 25. Logmode

3.4.2 VTAM definitions

```
NETID=SYSLAB, 6
```

Figure 20. VTAM Startup Parameters

```
VBUILD TYPE=ALL
PSFMVSDP 3 APPL AUTH=ACQ,EAS=1,SONSCIP=YES
```

Figure 21. VTAM Application Definition

```
VBUILD TYPE=ALL
PSFVMDP 5 APPL AUTH=ACQ,EAS=1,SONSCIP=YES
```

Figure 22. VTAM Application Definition

```
VBUILD TYPE=ALL
PSFVSEDP 11 APPL AUTH=ACQ,EAS=1,SONSCIP=YES
```

Figure 23. VTAM Application Definition

```
VBUILD TYPE=SWNET
SLPS06 7 PU
DPFMVS 4 LU LOCADDR=0,
MODETAB=MODDPFN,
DLOGMODE=MODDPFC2
DPFVM 9 LU LOCADDR=0,
MODETAB=MODDPFN,
DLOGMODE=MODDPFC2
DPFVSE 12 LU LOCADDR=0,
MODETAB=MODDPFN,
DLOGMODE=MODDPFC2
```

Figure 24. NCP Definitions

3.4.3 OS/2

<i>Table 2. Communication Manager/2 Definitions</i>			
Reference	See figure	Field name	Value
6	Figure 9 on page 18	Network ID	SYSLAB
7	Figure 9 on page 18	Local node name	SLPS06
4	Figure 12 on page 20	LU name	DPFMVS
8	Figure 12 on page 20	Alias	DPFSPL1
6 3	Figure 13 on page 20	Fully qualified LU name	SYSLAB.PSFMVSDP

<i>Table 3. PSF/2 Definitions</i>			
Reference	See figure	Field name	Value
8	Figure 5 on page 14	Logical unit alias	DPFSPL1
8	Figure 6 on page 15	Logical unit alias	DPFSPL1

3.5 Installation in the RISC System/6000 Workstation

This section describes the RISC System/6000 system installation for distributing printing.

3.5.1 Hardware Installation

PSF/6000 was running in a RISC System/6000 Model 530H.

3.5.2 Software installation

AIX/6000 Version 3.2.5 was used.

3.6 PSF/6000 Customization

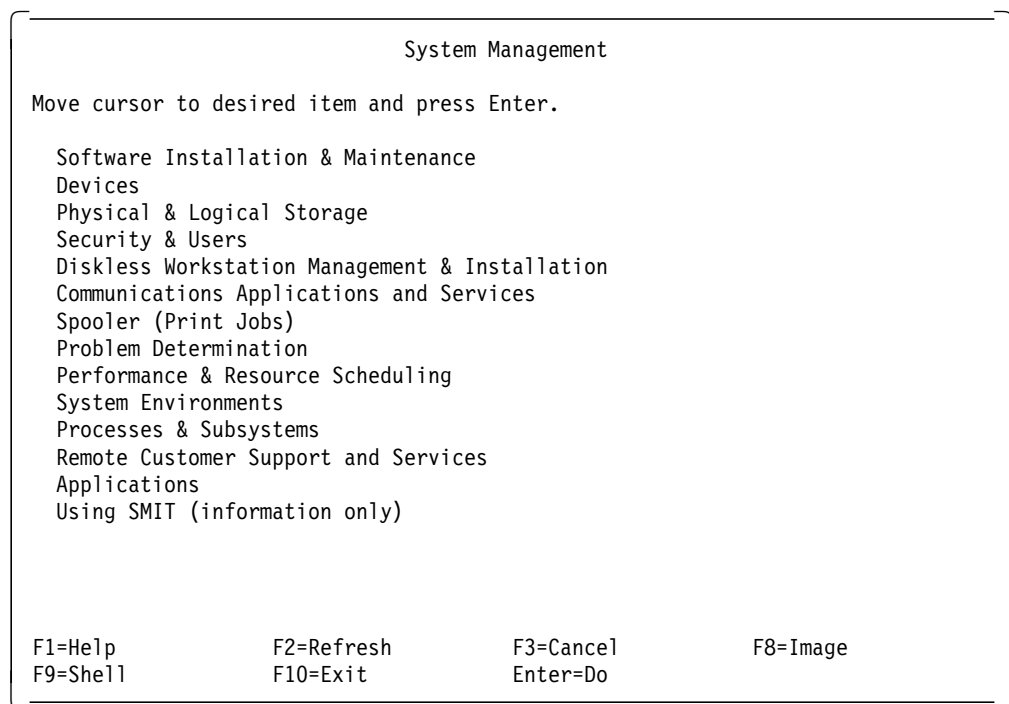


Figure 26. SMIT System Management Panel

Select **Communications Applications and Services** for PSF/6000 definitions.

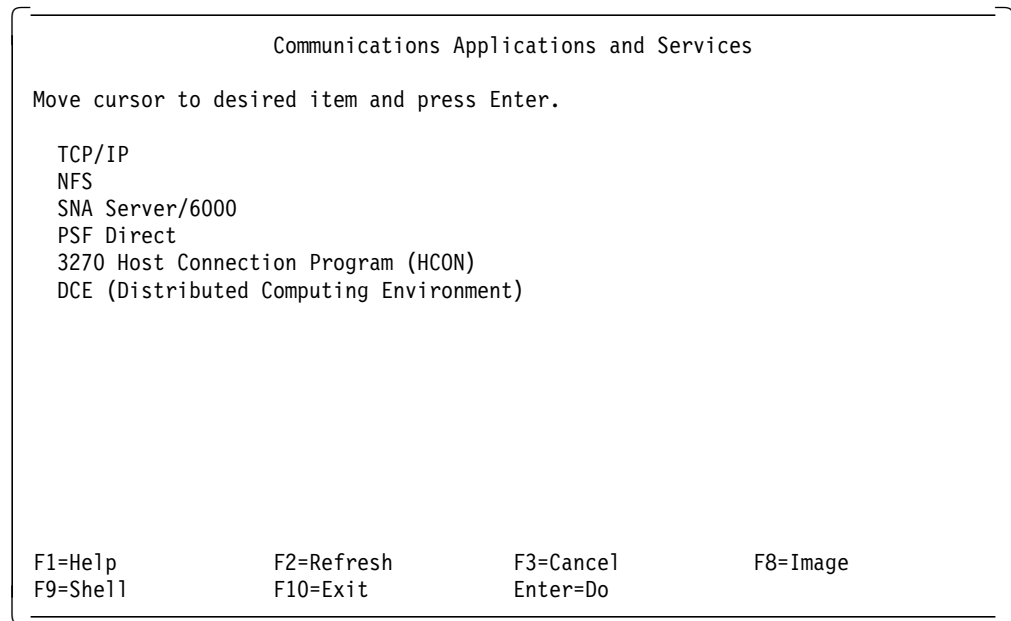


Figure 27. Communication Application and Services

Select **SNA Server/6000**, then **Configure SNA Profiles**, and then **Advanced Configuration**.

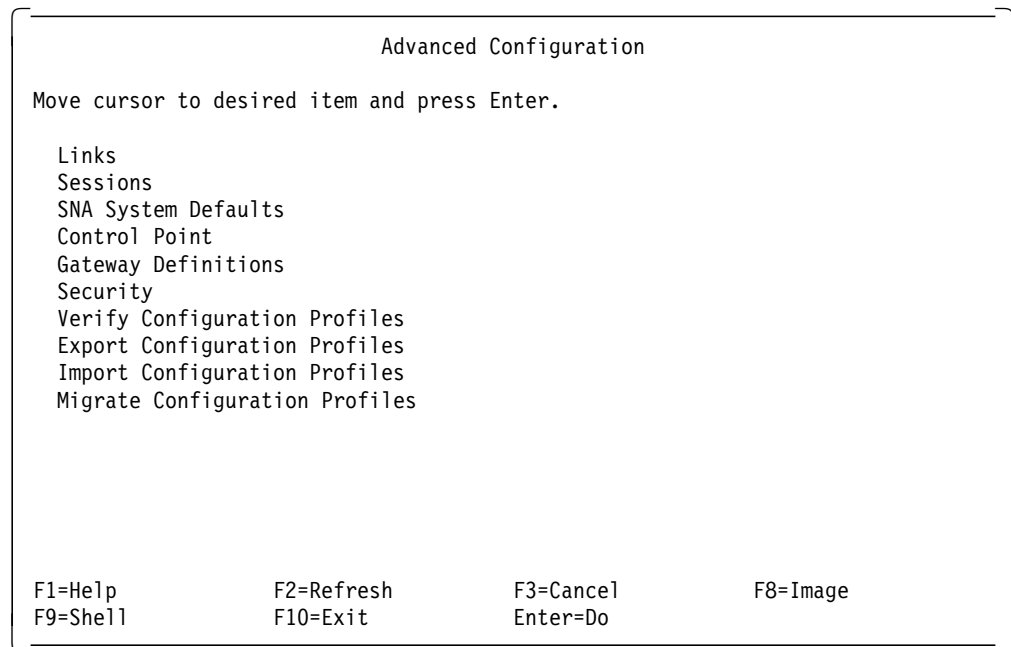


Figure 28. Advanced Configuration Menu

Select **Links**, then **Token Ring** for defining the host connection.

```

Change/Show Token Ring SNA DLC Profile

Type or select values in entry fields.
Press Enter AFTER making all desired changes.

[TOP]                                [Entry Fields]
Current profile name                  tr3745
New profile name                      []
Data link device name                 [tok0]                                +
Force disconnect time-out (1-600 seconds) [120]                                #
User-defined maximum I-Field size?    no                                    +
  If yes, Max. I-Field size (265-30729) [30729]                               #
Max. num of active link stations (1-255) [100]                                #
  Number reserved for inbound activation [0]                                    #
  Number reserved for outbound activation [0]                                    #
Transmit window count (1-127)         [16]                                    #
Dynamic window increment (1-127)      [1]                                    #
Retransmit count (1-30)                [8]                                    #
Receive window count (1-127)          [7]                                    #
Ring access priority                   0                                        +
[MORE...29]

F1=Help      F2=Refresh      F3=Cancel      F4=List
F5=Reset     F6=Command     F7=Edit       F8=Image
F9=Shell     F10=Exit       Enter=Do
  
```

Figure 29. Token-Ring Definition

From Advanced Configuration select **Sessions**, then **LU 6.2** for defining the PSF/6000 connection to host PSF.

```

LU 6.2

Move cursor to desired item and press Enter.

LU 6.2 Local LU
LU 6.2 Side Information
LU 6.2 Partner LU
LU 6.2 Mode
LU 6.2 Transaction Program Name (TPN)
LU 6.2 Session Security
LU 6.2 Conversation Security
Class of Service (COS)
Partner LU 6.2 Location

F1=Help      F2=Refresh      F3=Cancel      F8=Image
F9=Shell     F10=Exit       Enter=Do
  
```

Figure 30. Menu for LU 6.2 Definition

You must define all Local LU, Side Information, Partner LU, and Mode.

In the example below, the values entered in Local LU and Link Station Profile name have no effect, as we have specified *no* in "Local LU is dependent?" field.

```

Change/Show LU 6.2 Local LU Profile

Type or select values in entry fields.
Press Enter AFTER making all desired changes.

                                [Entry Fields]
Current profile name              SLRISC3
New profile name                  []
Local LU name                     [SLRISC3]
Local LU alias                    [SLRISC3]
Local LU is dependent?           no          +
  If yes,
    Local LU address (1-255)      [33]          #
    System services control point
      (SSCP) ID (*, 0-65535)     [*]
    Link Station Profile name     [tr3725]      +
Conversation Security Access List Profile name []

Comments                          [LU for VM attach0]

F1=Help      F2=Refresh      F3=Cancel      F4=List
F5=Reset     F6=Command     F7=Edit       F8=Image
F9=Shell     F10=Exit       Enter=Do
  
```

Figure 31. Local LU Definition

```

Change/Show LU 6.2 Partner LU Profile

Type or select values in entry fields.
Press Enter AFTER making all desired changes.

                                [Entry Fields]
Current profile name              PSFMVSDP
New profile name                  []
Fully qualified partner LU name   [SYSLAB.PSFMVSDP]
Partner LU alias                  [PSFMVSDP]
Parallel session supported?      no          +
Session security supported?      no          +
Conversation Security Level       none        +

Comments                          []

F1=Help      F2=Refresh      F3=Cancel      F4=List
F5=Reset     F6=Command     F7=Edit       F8=Image
F9=Shell     F10=Exit       Enter=Do
  
```

Figure 32. Partner LU Definition

```

Change/Show LU 6.2 Mode Profile

Type or select values in entry fields.
Press Enter AFTER making all desired changes.

Current profile name      [Entry Fields]
                          tr3745
New profile name         []
Mode name                [MODDPFC2]
Number of sessions (1-5000) [1] #
Minimum contention winners (0-5000) [0] #
Minimum contention losers (0-5000) [1] #
Auto activate limit (0-500) [0] #
Upper bound for adaptive receive pacing window [3] #
Receive pacing window (0-63) [3] #
Maximum RU size (128,...32768, multiples of 32) [1024] #
Minimum RU size (128,...32768, multiples of 32) [256] #
Class of Service (COS) name [#CONNECT]

Comments                 []

F1=Help      F2=Refresh      F3=Cancel      F4=List
F5=Reset     F6=Command     F7=Edit       F8=Image
F9=Shell     F10=Exit       Enter=Do
    
```

Figure 33. LU Mode Definition

```

Change/Show LU 6.2 Side Information Profile

Type or select values in entry fields.
Press Enter AFTER making all desired changes.

Current profile name      [Entry Fields]
                          SLRISC3
New profile name         []
Local LU or Control Point alias [SLRISC3] +
Provide only one of the following:
  Partner LU alias       [PSFVMDP] +
  Fully qualified partner LU name []
Mode name                [MODDPFC2] +
Remote transaction program name (RTPN) []
RTPN in hexadecimal?    no +

Comments                 [Side info for VM attac>

F1=Help      F2=Refresh      F3=Cancel      F4=List
F5=Reset     F6=Command     F7=Edit       F8=Image
F9=Shell     F10=Exit       Enter=Do
    
```

Figure 34. Side Information Definition

3.6.1 Exporting the Configurations

When you have done all definitions, go to the screen shown in Figure 28 on page 25 and select **Export Configuration Profiles**. It will create a list of all definitions. Compare that list with following sample and also the relations shown in 3.9, "Parameter relationships for PSF/6000" on page 44.

```
sna:
  prof_name           = "sna"
  max_sessions       = 200
  max_conversations   = 200
  restart_action      = once
  rrm_enabled         = no
  dynamic_inbound_partner_lu_definitions_allowed = yes
  standard_output_device = "/dev/console"
  standard_error_device = "/var/sna/sna.stderr"
  nmvt_action_when_no_nmvt_process = reject
  comments            = "PSF/6000 PROFILE"

control_pt:
  prof_name           = "node_cp"
  xid_node_id         = 0x07106000
  network_name        = "SYSLAB"
  control_pt_name_alias = "SLRISC"
  control_pt_name      = "SLRISC"
  control_pt_node_type = appn_end_node
  max_cached_trees    = 500
  max_nodes_in_topology_database = 500
  route_addition_resistance = 128
  comments            = "PSF/6000 CONTROL-PT"

local_lu_lu6.2:
  prof_name           = "SLRISC1"
  local_lu_name        = "SLRISC1"
  local_lu_alias       = "SLRISC1"
  local_lu_dependent   = no
  local_lu_address     = 33
  sscp_id              = *
  link_station_prof_name = "tr3725"
  conversation_security_list_profile_name = ""
  comments            = ""

local_lu_lu6.2:
  prof_name           = "SLRISC2"
  local_lu_name        = "SLRISC2"
  local_lu_alias       = "SLRISC2"
  local_lu_dependent   = no
  local_lu_address     = 1
  sscp_id              = *
  link_station_prof_name = "tr3725"
  conversation_security_list_profile_name = ""
  comments            = ""

local_lu_lu6.2:
  prof_name           = "SLRISC3"
  local_lu_name        = "SLRISC3"
  local_lu_alias       = "SLRISC3"
  local_lu_dependent   = no
  local_lu_address     = 33
```

```

sccp_id                = *
link_station_prof_name = "tr3725"
conversation_security_list_profile_name = ""
comments               = "LU for VM attach"

partner_lu6.2:
  prof_name             = "PSFMVSDP"
  fq_partner_lu_name    = "SYSLAB.PSFMVSDP"
  partner_lu_alias      = "PSFMVSDP"
  session_security_supp = no
  parallel_session_supp = no
  conversation_security_level = none
  comments              = ""

partner_lu6.2:
  prof_name             = "PSFVSEDP"
  fq_partner_lu_name    = "SYSLAB.PSFVSEDP"
  partner_lu_alias      = "PSFVSEDP"
  session_security_supp = no
  parallel_session_supp = no
  conversation_security_level = none
  comments              = ""

partner_lu6.2:
  prof_name             = "PSFVMDP"
  fq_partner_lu_name    = "SYSLAB.PSFVMDP"
  partner_lu_alias      = "PSFVMDP"
  session_security_supp = no
  parallel_session_supp = no
  conversation_security_level = none
  comments              = ""

side_info:
  prof_name             = "SLRISC1"
  local_lu_or_control_pt_alias = "SLRISC1"
  partner_lu_alias      = "PSFVSEDP"
  fq_partner_lu_name    = ""
  mode_name             = "MODDPFC2"
  remote_tp_name_in_hex = no
  remote_tp_name        = ""
  comments              = ""

side_info:
  prof_name             = "SLRISC2"
  local_lu_or_control_pt_alias = "SLRISC2"
  partner_lu_alias      = "PSFMVSDP"
  fq_partner_lu_name    = ""
  mode_name             = "MODDPFC2"
  remote_tp_name_in_hex = no
  remote_tp_name        = ""
  comments              = ""

side_info:
  prof_name             = "SLRISC3"
  local_lu_or_control_pt_alias = "SLRISC3"
  partner_lu_alias      = "PSFVMDP"
  fq_partner_lu_name    = ""
  mode_name             = "MODDPFC2"
  remote_tp_name_in_hex = no

```



```

remote_tp_name           = ""
comments                 = "Side info for VM attach"

local_tp:
  prof_name               = "tr3745"
  tp_name                 = "30F0F0F0"
  tp_name_in_hex         = yes
  pip_data_present       = no
  pip_data_subfields_number = 0
  conversation_type      = basic
  sync_level             = none
  resource_security_level = none
  resource_access_list_profile_name = ""
  full_path_tp_exe       = "/usr/lpp/psf/bin/ainpsfhr"
  multiple_instances     = yes
  user_id                 = 0
  server_synonym_name    = ""
  restart_action         = once
  communication_type     = signals
  ipc_queue_key          = 0
  standard_input_device  = "/dev/console"
  standard_output_device = "/dev/console"
  standard_error_device  = "/dev/console"
  comments               = ""

link_station_token_ring:
  prof_name               = "tr3725"
  use_control_pt_xid     = yes
  xid_node_id            = "*"
  sna_dlc_profile_name   = "tr3745"
  stop_on_inactivity     = no
  time_out_value         = 0
  LU_registration_supported = no
  LU_registration_profile_name = ""
  link_tracing           = no
  trace_format           = long
  access_routing_type    = link_address
  remote_link_name       = ""
  remote_link_address    = 0x400003745002
  remote_sap             = 0x04
  verify_adjacent_node   = no
  net_id_of_adjacent_node = ""
  cp_name_of_adjacent_node = ""
  xid_node_id_of_adjacent_node = "*"
  node_type_of_adjacent_node = learn
  solicit_sscp_sessions = yes
  call_out_on_activation = yes
  activate_link_during_system_init = yes
  activate_link_on_demand = no
  cp_cp_sessions_supported = no
  cp_cp_session_support_required = no
  adjacent_node_is_preferred_server = no
  initial_tg_number      = 0
  restart_on_normal_deactivation = no
  restart_on_abnormal_deactivation = no
  restart_on_activation = no
  TG_effective_capacity  = 4300800
  TG_connect_cost_per_time = 0
  TG_cost_per_byte      = 0

```

```

TG_security                = nonsecure
TG_propagation_delay      = lan
TG_user_defined_1         = 128
TG_user_defined_2         = 128
TG_user_defined_3         = 128
comments                   = ""

sna_dlc_token_ring:
  prof_name                 = "tr3745"
  data_link_device_name    = "tok0"
  force_timeout            = 120
  user_defined_max_i_field = no
  max_i_field_length       = 30729
  max_active_link_stations = 100
  num_reserved_inbound_activation = 0
  num_reserved_outbound_activation = 0
  transmit_window_count   = 16
  dynamic_window_increment = 1
  retransmit_count        = 8
  receive_window_count    = 7
  priority                 = 0
  inact_timeout           = 48
  response_timeout        = 4
  acknowledgement_timeout = 1
  link_name               = ""
  local_sap               = 0x04
  retry_interval          = 60
  retry_limit              = 20
  dynamic_link_station_supported = yes
  trace_base_listen_link_station = yes
  trace_base_listen_link_station_format = long
  dynamic_lnk_solicit_sscp_sessions = yes
  dynamic_lnk_cp_cp_sessions_supported = yes
  dynamic_lnk_cp_cp_session_support_required = no
  dynamic_lnk_TG_effective_capacity = 4300800
  dynamic_lnk_TG_connect_cost_per_time = 0
  dynamic_lnk_TG_cost_per_byte = 0
  dynamic_lnk_TG_security = nonsecure
  dynamic_lnk_TG_propagation_delay = lan
  dynamic_lnk_TG_user_defined_1 = 128
  dynamic_lnk_TG_user_defined_2 = 128
  dynamic_lnk_TG_user_defined_3 = 128
  comments                 = ""

mode:
  prof_name                 = "tr3745"
  mode_name                 = "MODDPFC2"
  max_sessions              = 1
  min_conwinner_sessions    = 0
  min_conloser_sessions     = 1
  auto_activate_limit       = 0
  max_adaptive_receive_pacing_window = 3
  receive_pacing_window     = 3
  max_ru_size               = 1024
  min_ru_size               = 256
  class_of_service_name     = "#CONNECT"
  comments                   = ""

```

3.6.2 PSF Direct Customization

You will have to define the printer device (p4029 in our case) to AIX (if not already done). Refer to manual S544-3817 PSF/6000 Print Administration for further details. After the printer has been defined, you can proceed with the following steps.

To define host receivers for PSF Direct you must select **PSF Direct** under Communications Applications and Services. The following screen is shown:

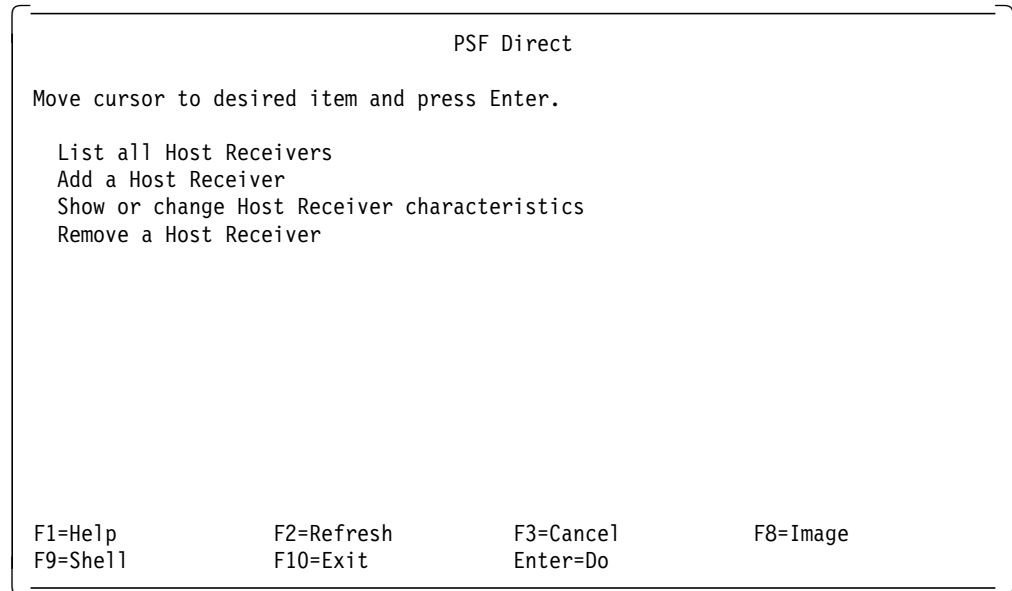


Figure 35. PSF Direct Menu

Here you select **Add a Host Receiver**.

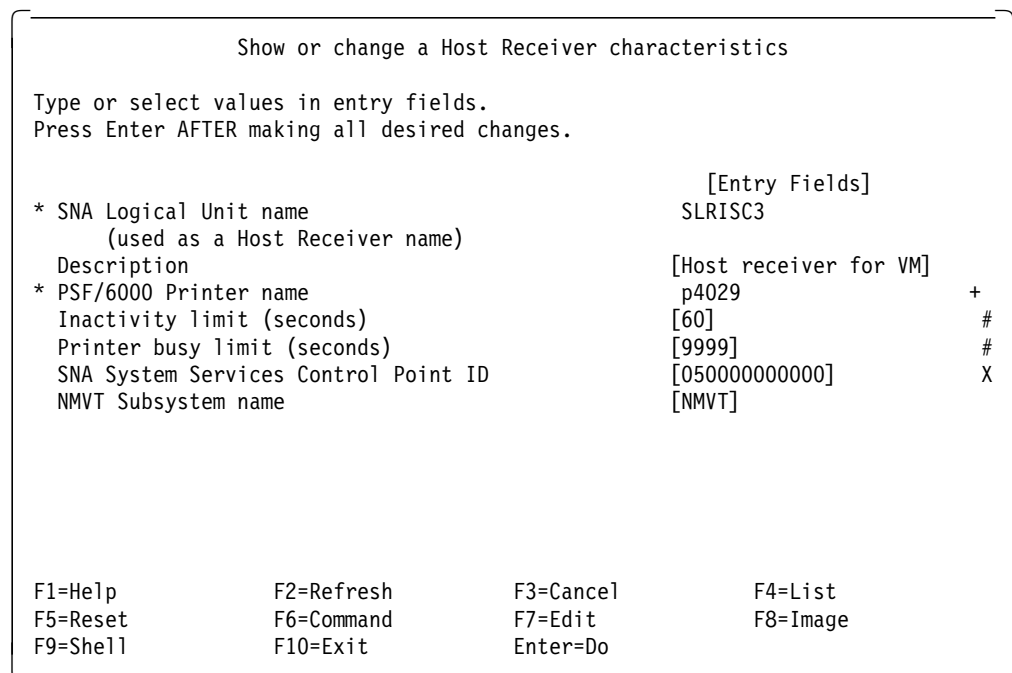


Figure 36. PSF Direct Host Receiver Definition

3.7 AS/400 to PSF/2 Definitions

Defining the necessary parameters for using PSF/2 DPF or Direct from an AS/400 system is easily done by following the instructions in PSF/2 manuals.

The definitions used on the AS/400 were the following:

```

                                Display Device Description                                Page    1
5738SS1 V2R2M0 920925                                WTSCSL4 11/14/94 16:06:33
Device description . . . . . : DEVD      DPF3820
Option . . . . . : OPTION    *ALL
Category of device . . . . . :          *APPC
Remote location . . . . . : RMTLOCNAME LUAS4
Online at IPL . . . . . : ONLINE   *YES
Local location . . . . . : LCLLOCNAME AS4DPF
Remote network identifier . . . . . : RMTNETID SYSLAB
Attached controller . . . . . : CTL     DPF3820
Message queue . . . . . : MSGQ      QSYSOPR
  Library . . . . . :          *LIBL
Local location address . . . . . : LOCADR 00
APPN-capable . . . . . : APPN     *NO
Single session . . . . . : SNGSSN
  Single session capable . . . . . :          *NO
Secure location . . . . . : SECURELOC *NO
Text . . . . . : TEXT      APPC device for DPF
Mode . . . . . : MODE
-----Mode-----
AS4MODE
    
```

Figure 37. Device Description for APPC Device DPF4028

Display Device Description		Page	1
5738SS1 V2R2M0 920925	WTSCSL4	11/14/94	16:06:14
Device description	DEVD	PRT3820	
Option	OPTION	*ALL	
Category of device		*PRT	
Device class	DEVCLS	*RMT	
Device type	TYPE	*IPDS	
Device model	MODEL	0	
Advanced function printing	AFP	*YES	
AFP attachment	AFPATTACH	*APPC	
Online at IPL	ONLINE	*YES	
Font	FONT		
Identifier		011	
Point size		*NONE	
Form feed	FORMFEED	*CUT	
Separator drawer	SEPDRAWER	2	
Printer error message	PRTERMSG	*INQ	
Message queue	MSGQ	QSYSOPR	
Library		*LIBL	
Maximum pending requests	MAXPNDRQS	6	
Print while converting	PRTCVT	*YES	
Form definition	FORMDF	F1C10110	
Library		*LIBL	
Character identifier	CHRID	*SYSVAL	
Remote location	RMTLOCNAME	LUAS4	
Local location	LCLLOCNAME	AS4DPF	
Remote network identifier	RMTNETID	SYSLAB	
Mode	MODE	AS4MODE	
Text	TEXT	Printer for DPF	

Figure 38. Device Description for APPC Controller DPF3820

Display Device Description		Page	1
5738SS1 V2R2M0 920925		WTSCSL4	11/14/94 16:06:14
Device description	DEVD	PRT3820	
Option	OPTION	*ALL	
Category of device		*PRT	
Device class	DEVCLS	*RMT	
Device type	TYPE	*IPDS	
Device model	MODEL	0	
Advanced function printing	AFP	*YES	
AFP attachment	AFPATTACH	*APPC	
Online at IPL	ONLINE	*YES	
Font	FONT		
Identifier		011	
Point size		*NONE	
Form feed	FORMFEED	*CUT	
Separator drawer	SEPDRAWER	2	
Printer error message	PRTERMSG	*INQ	
Message queue	MSGQ	QSYSOPR	
Library		*LIBL	
Maximum pending requests	MAXPNDRQS	6	
Print while converting	PRTCVT	*YES	
Form definition	FORMDF	F1C10110	
Library		*LIBL	
Character identifier	CHRID	*SYSVAL	
Remote location	RMTLOCNAME	LUAS4	
Local location	LCLLOCNAME	AS4DPF	
Remote network identifier	RMTNETID	SYSLAB	
Mode	MODE	AS4MODE	
Text	TEXT	Printer for DPF	

Figure 39. Device Description for Printer PRT3820

3.8 AS/400 to PSF/6000 Direct Definitions

Defining the necessary parameters for using PSF/6000 Direct from an AS/400 system requires a lot of experience in how to use AS/400 system panels for network definitions. We decided to use a little different method in establishing the connection compared to what we had in the S/370 connection to PSF/6000 Direct.

After spending a lot of time to find the reason why we could not get the connection working, we realized that the initial connection between AS/400 and Risc System/6000 works a little differently. The important parameter is the *solicit_sscp_sessions* in *link_station_token_ring* definition. In the S/370 (3745 Token Ring Controller) connection, we used *yes*, in AS/400 it had to be set to *no* to get the connection working.

The definitions used on the AS/400 were the following. These definitions work together with the definitions in SNA Server/6000.

```
Display Device Description                                     Page    1
5738SS1 V2R2M0 920925                                       WTSCSL4 11/14/94 16:06:39
Device description . . . . . : DEVD      AIX4028
Option . . . . . : OPTION    *ALL
Category of device . . . . . :          *APPC
Remote location . . . . . : RMTLOCNAME AS4LU
Online at IPL . . . . . : ONLINE    *YES
Local location . . . . . : LCLLOCNAME AS4AIX
Remote network identifier . . . . . : RMTNETID SYSLAB
Attached controller . . . . . : CTL     AIX4028
Message queue . . . . . : MSGQ      QSYSOPR
  Library . . . . . :          *LIBL
Local location address . . . . . : LOCADR 00
APPN-capable . . . . . : APPN     *NO
Single session . . . . . : SNGSSN
  Single session capable . . . . . :          *NO
Secure location . . . . . : SECURELOC *NO
Text . . . . . : TEXT      *BLANK
Mode . . . . . : MODE
-----Mode-----
QSPWTR
```

Figure 40. Device Description for APPC Device AIX4028

Display Controller Description		Page	1
5738SS1 V2R2M0 920925		WTSCSL4	11/14/94 16:06:55
Controller description	CTLD	AIX4028	
Option	OPTION	*ALL	
Category of controller		*APPC	
Link type	LINKTYPE	*LAN	
Online at IPL	ONLINE	*YES	
Character code	CODE	*EBCDIC	
Maximum frame size	MAXFRAME	1994	
Remote network identifier	RMTNETID	SYSLAB	
Remote control point	RMTCPNAME	SLRISC	
Exchange identifier	EXCHID	07106000	
SSCP identifier	SSCPID	0500000000FE	
Initial connection	INLCNN	*DIAL	
Dial initiation	DIALINIT	*LINKTYPE	
Switched disconnect	SWTDSC	*NO	
Data link role	ROLE	*NEG	
LAN remote adapter address	ADPTADR	400006000001	
LAN DSAP	DSAP	04	
LAN SSAP	SSAP	04	
Text	TEXT	*BLANK	
Switched line list	SWTLINLST		
-----Switched Lines-----			
SLTR041SNA			
Attached devices	DEV		
-----Attached Devices-----			
AIX4028			
APPN-capable	APPN	*NO	
LAN frame retry	LANFRMRTY	*CALC	
LAN connection retry	LANCNRRTY	*CALC	
LAN response timer	LANRSPTMR	*CALC	
LAN connection timer	LANCNTMR	*CALC	
LAN acknowledgement timer	LANACKTMR	*CALC	
LAN inactivity timer	LANINACTMR	*CALC	
LAN acknowledgement frequency	LANACKFRQ	7	
LAN max outstanding frames	LANMAXOUT	7	
LAN access priority	LANACCTY	*CALC	
LAN window step	LANWDWSTP	*NONE	
Recovery limits	CMNRCYLMT		
Count limit		2	
Time interval		5	

Figure 41. Device Description for APPC Controller AIX4028

Display Device Description			Page	1
5738SS1 V2R2M0 920925			WTSCSL4	11/14/94 16:06:23
Device description	DEVD	PRT4028		
Option	OPTION	*ALL		
Category of device		*PRT		
Device class	DEVCLS	*RMT		
Device type	TYPE	*IPDS		
Device model	MODEL	0		
Advanced function printing	AFP	*YES		
AFP attachment	AFPATTACH	*APPC		
Online at IPL	ONLINE	*YES		
Font	FONT			
Identifier		011		
Point size		*NONE		
Form feed	FORMFEED	*CUT		
Separator drawer	SEPDRAWER	*FILE		
Printer error message	PRTERMSG	*INQ		
Message queue	MSGQ	QSYSOPR		
Library		*LIBL		
Maximum pending requests	MAXPNDRQS	6		
Print while converting	PRTCVT	*YES		
Form definition	FORMDF	F1C10110		
Library		*LIBL		
Character identifier	CHRID	*SYSVAL		
Remote location	RMTLOCNAME	AS4LU		
Local location	LCLLOCNAME	AS4AIX		
Remote network identifier	RMTNETID	SYSLAB		
Mode	MODE	QSPWTR		
Text	TEXT	*BLANK		

Figure 42. Device Description for Printer PRT4028

Display Mode Description			Page	1
5738SS1 V2R2M0 920925			WTSCSL4	11/14/94 16:07:11
Mode description	MODD	QSPWTR		
Class-of-service	COS	#CONNECT		
Maximum sessions	MAXSSN	8		
Maximum conversations	MAXCNV	8		
Locally controlled sessions	LCLCTLSSN	4		
Pre-established sessions	PREESTSSN	0		
Inbound pacing value	INPACING	63		
Outbound pacing value	OUTPACING	63		
Maximum length of request unit	MAXLENRU	512		
Text	TEXT	This mode is IBM supplied		

Figure 43. LOGMODE Entry QSPWTR

The definitions used on the PSF/6000 side were the following:

```

local_lu_lu6.2:
  prof_name           = "AS4LU"
  local_lu_name       = "AS4LU"
  local_lu_alias      = "AS4LU"
  local_lu_dependent  = no
  local_lu_address    = 1
  sscp_id             = *
  link_station_prof_name = "AS4MODJ"
  conversation_security_list_profile_name = ""
  comments            = ""

partner_lu6.2:
  prof_name           = "AS4AIX"
  fq_partner_lu_name  = "SYSLAB.AS4AIX"
  partner_lu_alias    = "AS4AIX"
  session_security_supp = no
  parallel_session_supp = no
  conversation_security_level = none
  comments            = ""

side_info:
  prof_name           = "AS4LU"
  local_lu_or_control_pt_alias = "AS4LU"
  partner_lu_alias    = "AS4AIX"
  fq_partner_lu_name  = ""
  mode_name           = "QSPWTR"
  remote_tp_name_in_hex = no
  remote_tp_name      = ""
  comments            = ""

link_station_token_ring:
  prof_name           = "AS4MODJ"
  use_control_pt_xid  = yes
  xid_node_id         = "*"
  sna_dlc_profile_name = "tr3745"
  stop_on_inactivity  = no
  time_out_value      = 1
  LU_registration_supported = no
  LU_registration_profile_name = ""
  link_tracing        = no
  trace_format        = long
  access_routing_type = link_address
  remote_link_name    = ""
  remote_link_address = 0x400009406001
  remote_sap          = 0x04
  verify_adjacent_node = no
  net_id_of_adjacent_node = ""
  cp_name_of_adjacent_node = ""
  xid_node_id_of_adjacent_node = "*"
  node_type_of_adjacent_node = learn
  solicit_sscp_sessions = no
  call_out_on_activation = no
  activate_link_during_system_init = yes

```

```
activate_link_on_demand           = no
cp_cp_sessions_supported         = no
cp_cp_session_support_required   = no
adjacent_node_is_preferred_server = no
initial_tg_number                = 0
restart_on_normal_deactivation    = no
restart_on_abnormal_deactivation  = no
restart_on_activation            = no
TG_effective_capacity            = 4300800
TG_connect_cost_per_time        = 0
TG_cost_per_byte                 = 0
TG_security                      = nonsecure
TG_propagation_delay             = lan
TG_user_defined_1                = 128
TG_user_defined_2                = 128
TG_user_defined_3                = 128
comments                          = ""

sna_dlc_token_ring:
  prof_name                       = "tr3745"
  datalink_device_name           = "tok0"
  force_timeout                  = 120
  user_defined_max_i_field       = no
  max_i_field_length             = 30729
  max_active_link_stations       = 100
  num_reserved_inbound_activation = 0
  num_reserved_outbound_activation = 0
  transmit_window_count          = 16
  dynamic_window_increment       = 1
  retransmit_count               = 8
  receive_window_count           = 7
  priority                       = 0
  inact_timeout                  = 48
  response_timeout               = 4
  acknowledgement_timeout        = 1
  link_name                      = ""
  local_sap                      = 0x04
  retry_interval                 = 60
  retry_limit                    = 20
  dynamic_link_station_supported = yes
  trace_base_listen_link_station = yes
  trace_base_listen_link_station_format = long
  dynamic_lnk_solicit_scp_sessions = yes
  dynamic_lnk_cp_cp_sessions_supported = yes
  dynamic_lnk_cp_cp_session_support_required = no
  dynamic_lnk_TG_effective_capacity = 4300800
  dynamic_lnk_TG_connect_cost_per_time = 0
  dynamic_lnk_TG_cost_per_byte   = 0
  dynamic_lnk_TG_security        = nonsecure
  dynamic_lnk_TG_propagation_delay = lan
  dynamic_lnk_TG_user_defined_1  = 128
  dynamic_lnk_TG_user_defined_2  = 128
  dynamic_lnk_TG_user_defined_3  = 128
  comments                        = ""

mode:
  prof_name                       = "QSPWTR"
  mode_name                       = "QSPWTR"
  max_sessions                     = 8
```

```
min_conwinner_sessions      = 4
min_conloser_sessions       = 0
auto_activate_limit         = 2
max_adaptive_receive_pacing_window = 16
receive_pacing_window       = 7
max_ru_size                 = 512
min_ru_size                 = 256
class_of_service_name       = "#CONNECT"
comments                    = ""
```

This soft copy for use by IBM employees only.

The figures on the next two pages show the relationships between host and RISC System/6000 parameters.

3.9 Parameter relationships for PSF/6000

Note that use of reversed numbers (such as **1**) refer to values, which must match. Every occurrence of the same number must have equal value.

3.9.1 Host PSF definitions

```
PRT5 1 CLASS=X,FSS=WRT5 2
```

Figure 44. MVS JESPARM Definitions

```
//WRT5 2 PROC
. . .
//PRT5 1 PRINTDEV APPLID=PSFMVSDP, 3
// LUNAME=SLRISC2, 4
// LOGMODE=MODDPFC2
```

Figure 45. PSF/MVS JCL

```
S DEV,pr4028,SYSPSF8,8 10
```

Figure 46. PSF/VSE Printer Start

```
APPLID PSFVMDP 5
LUNAME SLRISC3 9
LOGMODE MODDPFC2
```

Figure 47. PSF/VM OPTIONS PDM Definitions

```
PR4028 10 PRINTDEV APPLID=PSFVSEDP, 11
LUNAME=SLRISC1, 12
LOGMODE=MODDPFC2
```

Figure 48. PSF/VSE Start-Up

```
MODDPFN MODETAB
MODDPFC2 MODEENT LOGMODE=MODDPFC2,FMPROF=X'13',TSPROF=X'07', X
PRIPROT=X' B0', SECPROT=X' B0', COMPROT=X' DOB1', X
RUSIZES=X'8585',PSERVIC=X'060200000000000000002000', X
PSNDPAC=X'10',SRCVPAC=X'10',SSNDPAC=X'00'
MODEEND
END
```

Figure 54. Logmode

3.9.2 VTAM definitions

```
NETID=SYSLAB, 6
```

Figure 49. VTAM Startup Parameters

```
VBUILD TYPE=ALL
PSFMVSDP 3 APPL AUTH=ACQ,EAS=1,SONSCIP=YES
```

Figure 50. VTAM Application Definition

```
VBUILD TYPE=ALL
PSFVMDP 5 APPL AUTH=ACQ,EAS=1,SONSCIP=YES
```

Figure 51. VTAM Application Definition

```
VBUILD TYPE=ALL
PSFVSEDP 11 APPL AUTH=ACQ,EAS=1,SONSCIP=YES
```

Figure 52. VTAM Application Definition

```
VBUILD TYPE=SWNET
SLRISC 7 PU
SLRISC1 12 LU LOCADDR=0,
MODETAB=MODDPFN,
DLOGMODE=MODDPFC2
SLRISC2 4 LU LOCADDR=0,
MODETAB=MODDPFN,
DLOGMODE=MODDPFC2
SLRISC3 9 LU LOCADDR=0,
MODETAB=MODDPFN,
DLOGMODE=MODDPFC2
```

Figure 53. NCP Definitions

3.9.3 PSF/6000 Definitions

```

control_pt:
  prof_name           = "node_cp"
  xid_node_id        = 0x07106000
  network_name       = "SYSLAB"
  control_pt_name_alias = "SLRISC"
  control_pt_name     = "SLRISC"
  control_pt_node_type = appn_end_node
  max_cached_trees   = 500
  max_nodes_in_topology_database = 500
  route_addition_resistance = 128
  comments           = "PSF/6000 CONTROL-PT"

local_lu_lu6.2:
  prof_name           = "SLRISC3"
  local_lu_name       = "SLRISC3"
  local_lu_alias      = "SLRISC3"
  local_lu_dependent  = no
  local_lu_address    = 33
  sscp_id             = *
  link_station_prof_name = "tr3725"
  conversation_security_list_profile_name = ""
  comments           = "LU for VM attach"

partner_lu6.2:
  prof_name           = "PSFVMDP"
  fq_partner_lu_name  = "SYSLAB.PSFVMDP"
  partner_lu_alias    = "PSFVMDP"
  session_security_supp = no
  parallel_session_supp = no
  conversation_security_level = none
  comments           = ""

side_info:
  prof_name           = "SLRISC3"
  local_lu_or_control_pt_alias = "SLRISC3"
  partner_lu_alias    = "PSFVMDP"
  fq_partner_lu_name  = ""
  mode_name           = "MODDPFC2"
  remote_tp_name_in_hex = no
  remote_tp_name     = ""
  comments           = "Side info for VM attach"

```

Figure 55. RS/6000 definitions for VM host

3.10 Installation of the Network Print Facility

This section describes the NPF installation for distributing printing.

3.10.1 Hardware Installation

The TCP/IP connection from the MVS system to the RISC System/6000 was through an IBM 3172 Controller. On RISC System/6000 side, a token-ring adapter card is needed.

3.10.2 Software Installation

NPF is included as a separately orderable feature in MVS TCP/IP Version 3 Release 1.

To get TCP/IP Version 3 Release 1 and NPF working, a lot of corrective service is needed. Check for the recommended service with your IBM representative.

3.11 NPF customization

Perform the following steps (see Network Print Facility, SC31-8074).

1. Allocate the NPF datasets; refer to pages 57-60.
2. Initialize them; refer to pages 61-63.
3. Set up the ISPF interface; refer to pages 67-72.
4. Update the files using the panels.
5. Define a JES printer and a FSS for NPF; refer to pages 125-129.
6. Set up JCL for the FSS; refer to pages 123-124.
7. Set up JCL for the NPF queue manager; refer to page 136.

3.12 Parameter Relationships for NPF

Note that the use of reversed numbers (like **1**) refers to values, which must match. Every occurrence of the same number must have equal value.

```
//OUT  OUTPUT FORMS=STD 1  
//SYSPRINT DD SYSOUT=9, 2  
//     OUTPUT=*.OUT
```

Figure 56. JCL Definitions

```
PRT(5)  FSS=FSS5,MODE=FSS,CLASS=9 2  
FSS(FSS5) PROC=NPFPROC
```

Figure 57. JESPARM Definitions

NPFPROC contains a DD statement referring to a dataset, which is updated by following the ISPF panel (selection UR from NPF primary option menu).

```
ROUTING FILE RECORD INFO UPDATE PANEL - NORMAL RECORD  
ENTER THE APPROPRIATE FIELD FOR UPDATE:  
  
MAJOR NAME      ===> LOCAL          MINOR NAME      ===> 9STD 1 2  
LUCLASS        ===>  
  
NO OF DEST      ===> 1  
RETAIN TIME(S)  ===> 0000005      RETAIN TIME(U)  ===> 0000010  
RETRY TIME      ===> 0000002      RETRY LIMIT     ===> 5  
DEF PAGE FORMAT ===>  
OPTIONS NAME    ===> OPTION1      EOFILE NAME     ===>  
INTERNET NAME   ===> 9.12.0.41    ROUTING EXIT    ===>  
  
PRINTER NAME    ===> p4029  
  
PRESS ENTER TO UPDATE THE ABOVE RECORD
```

Figure 58. NPF Panel for Routing Information

3.13 Experiences from Installation and Customization

A beta version of PSF/2 Version 2 was used, and no errors related to the code were detected.

Some problems with OS/2 were encountered. We suggest that you obtain the latest level of OS/2. We suggest also that you ensure that enough memory is installed. We encountered some problems with memory management in situations where a lot of simultaneous activities took place.

Set the MGMTMODE parameter in the host into OUTAVAIL. Value IMMED interfered the PSF/2 severely.

Be careful with names; remember that uppercase and lowercase characters are not the same.

Verify that DISCINTV at the host PSF and the host receiver inactivity timer do not conflict.

Although we had a rather early version of the PSF/6000 enhancements, we did not face any problems in PSF/6000 installation and operation. The biggest problem in installing PSF Direct in PSF/6000 was to find out how the parameters in SNA Server/6000 have to be set. After a lot of experiments, everything finally worked.

TCP/IP for MVS needed several fixes before it worked. NPF worked as expected after we finally got TCP/IP fixes applied. The exit supplied as an PTF in PSF/6000 seems to work fine if the TCP/IP is working properly. The lack of feedback from NPF makes it difficult to know whether the print job printed correctly or not.

Chapter 4. Operation

This chapter describes the differences in host system and workstation operation with different types of distributed printing.

4.1 MVS Operation

This section describes how to operate a PSF/2 or PSF/6000 controlled printer from an MVS system.

4.1.1 Print Submission

The print submission for distributed printing under MVS does not differ from any other print tasks. You must set into your spool file such characteristics that some JES Printer will select it.

Some sysout class should be allocated for distributed printing, and a JES printer customized to select that class and to invoke PSF/MVS for the printing.

4.1.2 Controlling the Printing

Just as with print submission, the controlling of remote printers does not differ from the controlling of local printers. All the same commands are used for both.

The only difference is within error recovery, and it is different if you are using DPF or Direct.

When the host PSF first establishes the connection with a printer, the message on the console tells how the printer is attached to the system. It is either PSF (printers directly controlled by PSF, either local or remote), RPM (for PSF Direct), or DPF (for DPF controlled printers). (If the host APARs are installed, PSF Direct connection shows PSFDIRECT instead of RPM.)

4.1.2.1 DPF

Printing using DPF is actually writing to a spool in PSF/2. As soon as all pages have been written into the spool, PSF/2 tells PSF/MVS that the file has been successfully printed. After that MVS, does not know the print file any longer.

PSF/2 then starts the actual printing and possible printer errors are handled by PSF/2. Thus, the host operator knows nothing about the physical printing. Another operator is required at the printer site.

4.1.2.2 PSF Direct

PSF Direct connects PSF/MVS, PSF/2 and the printer all together. PSF/2 only passes information between the host and the printer. All error recovery is handled by PSF/MVS, just as for local printers, with the exception that the host operator cannot physically operate the printer. Errors, such as paper jams, out of paper and so on, are reported to PSF Direct/2 or PSF Direct/6000, and the operator at the printer should handle them within the time set in the printer intervention timer. If the printer intervention timer at the workstation expires, the the host system is notified. Another operator is required at the printer site, and both operators must communicate with each other.

4.2 VSE Operation

This section describes how to operate a PSF/2 or PSF/6000 controlled printer from a VSE system.

4.2.1 Print Submission

The print submission for distributed printing under VSE does not differ from any other print tasks. You must set into your spool file such characteristics that some VSE POWER printer will select it.

Some classes should be allocated for distributed printing and a PSF printer customized to select that class and to invoke PSF/VSE for the printing.

4.2.2 Controlling the Printing

Just as with print submission, the controlling of remote printers does not differ from the controlling of local printers. All the same commands are used for both.

The only difference is within error recovery, and it is different if you are using DPF or Direct.

When the host PSF first establishes the connection with a printer, the message on the console tells how the printer is attached to the system. It is either PSF (printers directly controlled by PSF, either local or remote), RPM (for PSF Direct), or DPF (for DPF controlled printers). (If the host APARs are installed, PSF Direct connection shows PSFDIRECT instead of RPM.)

4.2.2.1 DPF

Printing using DPF is actually writing to a spool in PSF/2. As soon as all pages have been written into the spool, PSF/2 tells PSF/VSE that the file has been successfully printed. After that, VSE does not know the print file any longer.

PSF/2 then starts the actual printing. Possible printer errors are handled by PSF/2. Thus, the host operator knows nothing about the physical printing. Another operator is required at the printer site.

4.2.2.2 PSF Direct

PSF Direct connects PSF/VSE, PSF/2 and the printer all together. PSF/2 only passes information between the host and the printer. All error recovery are handled by PSF/VSE, just as for local printers, with the exception that the host operator cannot physically operate the printer. Errors, such as paper jams, out of paper and so on, are reported to PSF Direct/2 or PSF Direct/6000, and the operator at the printer should handle them within the time set in the printer intervention timer. If the printer intervention timer at the workstation expires, the the host system is notified. Another operator is required at the printer site, and both operators must communicate with each other.

4.3 VM Operation

This section describes how to operate a PSF/2 or PSF/6000 controlled printer from an VM system.

4.3.1 Print Submission

The print submission for distributed printing under VM does not differ from any other print tasks. You must set into your spool file such characteristics that a printer will select it.

Some classes should be allocated for distributed printing and a PSF printer customized to select that class and to invoke PSF/VM for the printing.

4.3.2 Controlling the Printing

Just as with print submission, the controlling of remote printers does not differ from the controlling of local printers. All the same commands are used for both.

The only difference is within error recovery, and it is different if you are using DPF or Direct.

When the host PSF first establishes the connection with a printer, the message on the console tells how the printer is attached to the system. It is either PSF (printers directly controlled by PSF, either local or remote), RPM (for PSF Direct), or DPF (for DPF controlled printers). (If the host APARs are installed, PSF Direct connection shows PSFDIRECT instead of RPM.)

4.3.2.1 DPF

Printing using DPF is actually writing to a spool in PSF/2. As soon as all pages have been written into the spool, PSF/2 tells PSF/VM that the file has been successfully printed. After that, VM does not know the print file any longer.

PSF/2 then starts the actual printing. Possible printer errors are handled by PSF/2. Thus, the host operator knows nothing about the physical printing. Another operator is required at the printer site.

4.3.2.2 PSF Direct

PSF Direct connects PSF/VM, PSF/2 and the printer all together. PSF/2 only passes information between the host and the printer. All error recovery is handled by PSF/VM just as for local printers, with the exception that the host operator cannot physically operate the printer. Errors, such as paper jams, out of paper and so on, are reported to PSF Direct/2 or PSF Direct/6000, and the operator at the printer should handle them within the time set in the printer intervention timer. If the printer intervention timer at the workstation expires, the the host system is notified. Another operator is required at the printer site, and both operators must communicate with each other.

4.4 AS/400 Operation

This section describes how to operate a PSF/2 or PSF/6000 controlled printer from an AS/400 system.

4.4.1 Print Submission

The print submission for distributed printing under AS/400 does not differ from any other print tasks. You must define your spool file with such characteristics that an AS/400 printer will select it.

Some queues should be allocated for distributed printing and an AFP printer customized to select that class and to invoke PSF in the AS/400 system for the printing.

4.4.2 Controlling the Printing

Just as with print submission, the controlling of remote printers does not differ from the controlling of local printers. All the same commands are used for both.

The only difference is within error recovery, and it is different if you are using DPF or Direct.

The system operator does not even see a difference between different ways of connecting the printer to the system.

4.4.2.1 DPF

Printing using DPF is actually writing to a spool in PSF/2. As soon as all pages have been written into the spool, PSF/2 tells AS/400 that the file has been successfully printed. After that, AS/400 does not know the print file any longer.

PSF/2 then starts the actual printing. Possible printer errors are handled by PSF/2. Thus, the host operator knows nothing about the physical printing. Another operator is required at printer site.

4.4.2.2 PSF Direct

PSF Direct connects the AS/400 PSF component, PSF/2 and the printer all together. PSF/2 only passes information between the host and the printer. All error recovery is handled by AS/400, just as for local printers, with the exception that the host operator cannot physically operate the printer. Errors, such as paper jams, out of paper and so on, are reported to PSF Direct/2 or PSF Direct/6000, and the operator at the printer should handle them within the time set in the printer intervention timer. If the printer intervention timer at the workstation expires, the the host system is notified. Another operator is required at the printer site, and both operators must communicate with each other.

4.5 PSF/2 Operation

Installation of PSF/2 will put icon PSF/2 onto the Desktop. Double-click it to start PSF/2. You will get the icon view of the PSF/2 folder:

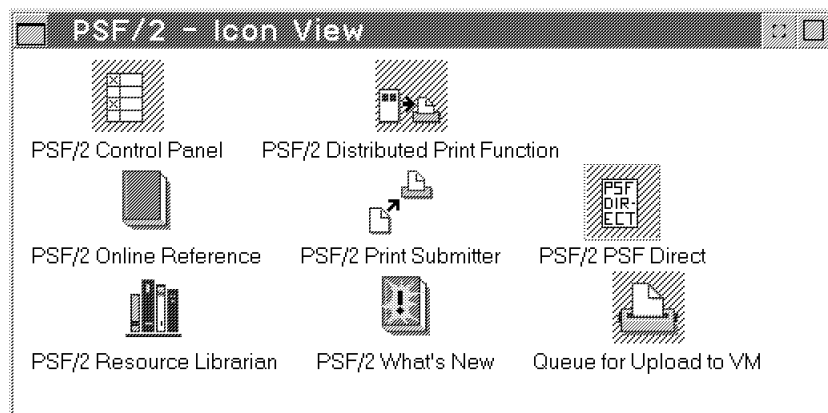


Figure 59. Icon View of PSF/2 Folder

The items for operating and controlling the PSF/2 are:

PSF/2 Control Panel

Used to operate the physical printer.

PSF/2 Distributed Print Function

Used to operate the DPF component of PSF/2.

PSF/2 PSF Direct

Used to operate the PSF Direct component of PSF/2.

4.5.1 Printer Operation

Double-clicking on the control panel icon will display the following control panel:

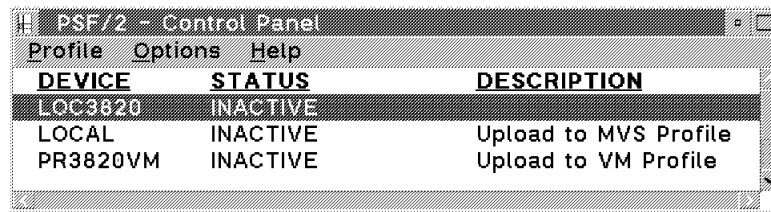


Figure 60. PSF/2 Control Panel

All the physical printers defined during customization will be shown in the panel. Also all dummy printers defined for Upload to Host -printing are shown.

The status field describes the current status of a printer; it should be either ACTIVE or INACTIVE.

This is the only task required for local printing initiated from the OS/2 system itself.

4.5.2 DPF Operation

Double-clicking on the Distributed Print Function will display the following panel:

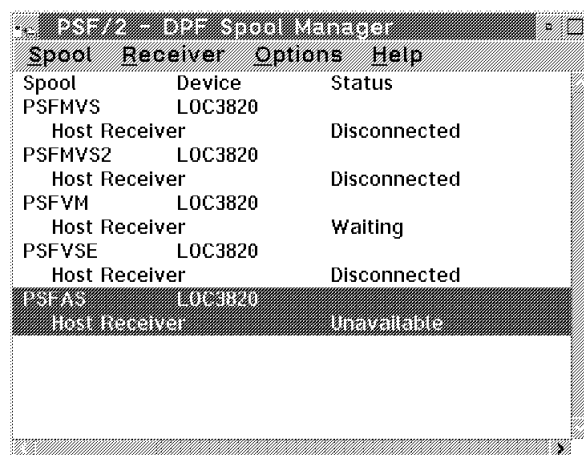


Figure 61. DPF Spool Manager Panel

This panel shows all the host receivers defined during customization. Each receiver has got a status, which is one of following:

Unavailable The host receiver alias LU is not controlled by DPF.

- Disconnected** The host receiver alias LU session to the host PSF is disconnected.
- Connected** The host receiver alias LU session to the host PSF is connected.
- Waiting** The session with host PSF is active, but DPF is waiting for data from the host PSF.
- Receiving** Host PSF is transferring data.
- Active-PSF Direct** The receiver is active using PSF Direct.

To display the contents of a spool related to a host receiver, select the host receiver by clicking on it. Then click on Spool at the menu bar and click on Show jobs. You will have a panel showing all the print jobs currently in that spool:

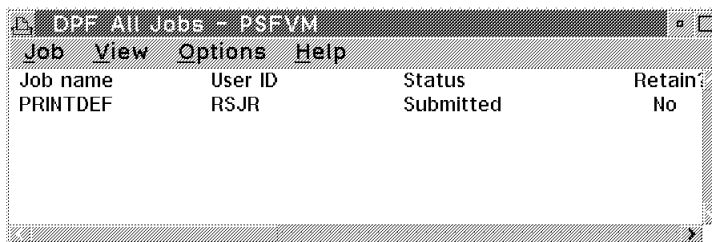


Figure 62. DPF Spool Jobs

4.5.3 PSF Direct Operation

Double-clicking on the PSF Direct will display the following panel:

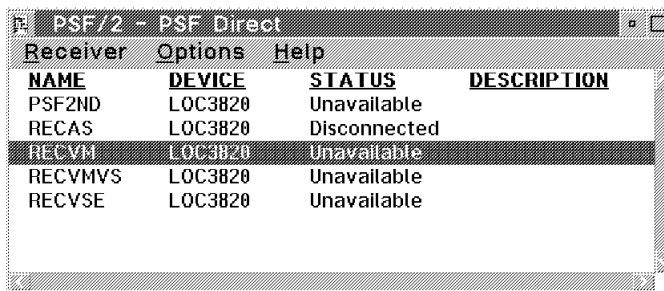


Figure 63. PSF Direct Panel

This panel shows all the host receivers defined during customization. Each receiver has a status explained above under DPF.

4.5.4 Switching between DPF and Direct

You may have several different combinations:

1. One host PSF and one host receiver (either DPF or Direct)
2. One host PSF and two receivers (both DPF and Direct)
3. Two host PSFs and two receivers (one for each)

Case 1 is static and no switching ever takes place.

Case 3 is also static and no switching is required.

Case 2 is the case where we may wish to do switching. You must know the customization and know that host receivers PSFMVS (DPF) and RECVMS (Direct) both use the same LU alias and, thus, connect to same host PSF.

One of them can be active at one time and the other is in Unavailable status.

Now to switch the PSF/MVS (see Figure 61 on page 53 and Figure 63 on page 54), you must do following (You can do the switching also by using the timers):

1. Note that DPF (PSFMVS) is active, and Direct (RECVMS) is unavailable, so you would like to switch MVS from DPF to PSF Direct.
2. Select the unavailable receiver by clicking on the line RECVMS.
3. Click Receiver at menu bar.
4. Click Change. You will get the screen shown in Figure 6 on page 15.
5. The screen contains a box labelled Change control of LU alias to PSF Direct. Click on that box and then on OK.

The actual switching takes place when current host activities have ended. Then, the statuses will change, from Unavailable to Disconnected and from Disconnected to Unavailable. The next print file being printed by host the PSF would be printed using PSF Direct.

4.6 RISC System/6000 Workstation Operation

This section describes how to operate the RISC System/6000 system with different types of distributed printing.

4.6.1 PSF Direct Operation

When PSF/6000 has been installed and customized, it is automatically active. There is no way to operate the host receiver; it is automatic.

You can control the printers defined for PSF/6000 queues with the `psfctl` command. Its syntax is:

```
psfctl [-d] [-k] [-t] [-u] printername
```

Refer to PSF/6000 Print Administration, S544-3817 for further information.

You may wish to print locally in the AIX system to the same printer used by PSF Direct. For that, you must ensure that the host receiver has a low value defined for inactivity timer. It causes PSF to disconnect the printer when the time has expired.

When the printer becomes free, then local print files created by command

```
enq -P printername filename
```

will start printing.

When all local files have been printed, the printer is automatically freed when the device inactivity timer has expired.

Host printing will then start automatically provided that host parameters make it possible.

4.7 NPF Operation

NPF has three components:

- JES FSS
- VTAM capture point
- Queue manager

The JES FSS does not have its own operation tasks. It is operated by operating the JES printer.

The VTAM capture point is an address space started by JCL or as a started task. It issues a WTOR, and it is operated by responding to the WTOR.

The queue manager is also an address space and is started by JCL or as a started task. It also uses a WTOR for operation.

To start NPF operation; you must:

Start JES printer (optional)

```
$sprt5
```

The FSS is automatically started by JES.

Start VTAM Capture Point (optional)

```
s npfvam
```

Start NPF Queue Manager

```
s npfqmgr
```

When using printers controlled by PSF/6000 or PSF/2, the user can see when the printing has been completed, or in the DPF case, when it has been successfully transferred to the workstation.

When using NPF, this capability is missing. The basic idea of using TCP/IP is to send a print job to the server and expect that the job will be printed. In our tests, when we had some errors in our options, the print job seemed to be OK, but nothing was found. The procedure ended with an error inside the RISC/6000 workstation, for example, the page definition referred was not found. No information about this is passed to the originating MVS system.

Chapter 5. Performance Considerations

This chapter deals with performance considerations for the different ways of distributing printing.

5.1 Performance Factors

There are several things which may impact the performance of a distributed printing system. In addition to the host itself and the physical printer, the following items may impact the performance of the overall system:

- Capacity of communication connections
- Capacity of the workstation
- Additional steps performed in the workstation, like:
 - Spooling
 - Conversions
- Status of the host to workstation connection

The communication capacity must be planned to meet the needs of the printing application. One single page may need up to one megabyte to be transferred from host to printer and the network should transfer it while the previous page is being printed for continuous printing.

The workstation may have to communicate with one or more hosts and one or more printers at the same time. Thus, the workstation must be fitted with enough resources, especially relating to real storage.

Also, the workstation may have to do extra work due to the way it is customized for the practical work. Some solutions make the workstation write the print files to the spool and afterwards retrieve them from the spool.

Both PSF/2 and PSF/6000 support printers other than IPDS printers and perform a data stream conversion for non-IPDS printers.

Establishing and releasing the logical connection between the host and the workstation is time consuming and may significantly slow down the system if the connections are changed frequently.

5.2 PSF/2 Performance

The PSF/2 system has two basic alternatives:

- DPF - Distributed Print Function
- PSF Direct

DPF communicates with the host PSF and receives all data and puts it into a spool of its own. Then it informs the host PSF that the job is finished, and after that, the print file is written to the printer from the spool. For small files the delay is small but visible. As file size increases, the delay grows more and more visible. Finally it becomes also a question of spool space within PSF/2.

PSF Direct forms a direct path from the host PSF through PSF/2 to the printer. No spooling takes place.

5.2.1 DPF

The time used in DPF processing can be divided into following components:

Host connection

Changing the host receiver from status "Disconnected" into "Waiting" or "Receiving" (establish a LU6.2 session from host PSF to PSF/2)

Device activation

Changing the local printer device from status "Inactive" to "Active"

File processing

Spooling and processing of the IPDS created by host PSF

5.2.2 PSF Direct

The time spent in PSF/Direct can be divided into following components:

Host connection

Changing the host receiver from status "Disconnected" into "Connected", "Waiting" or "Receiving". Due to nature of PSF/Direct this includes device activation (establish a LU6.2 session from host PSF to the printer).

File processing

Processing of the IPDS created by the host PSF

5.2.3 Conclusions

PSF Direct is much faster, as can be expected, because DPF uses intermediate spooling. It will print the first page earlier than DPF.

If the print job requires large amounts of AFP resources that are used throughout the job, there may be a situation when the host has to download the same resources over and over again. In these cases, DPF may have better overall performance than PSF Direct. As in DPF, resources may be stored in the workstation if the host system is either an MVS or a VSE system.

If the host system is an MVS system, it is possible to force the resources to stay in the printer by coding a user exit in PSF/MVS.

Capacity of the OS/2 workstation may be a critical aspect. We suggest that a model with a fast processor is used and enough memory installed. Refer to Chapter 2, "Requirements" on page 5 and especially the memory requirements on page 6. Ensure that you have at least that amount of memory installed.

Both the host connection and device activation are rather slow operations and can take a minute of elapsed time.

Startup times are longer than processing times for smaller files. Switching from one combination to another may take several minutes each time. Therefore, you should consider solutions other than frequent switching.

If you have a single host and several printers attached to the workstation, then you will need one host receiver for each printer and definition of a host printer driver for each host receiver.

5.3 NPF Performance

The time elapsed between the submission of a print job and the time when the printing starts on a printer depends on the characteristics of the print job. If a line print data set is sent to the PSF/6000 spool, the AFP Conversion and Indexing Facility (ACIF) program is invoked for converting the file to an AFP data stream format. This operation may cause a significant delay if the file is large or complex.

Chapter 6. SNA Upload Facility

This chapter describes the SNA upload and print facility included in PSF/2 Version 2.

6.1 Installation

To perform installation, we followed the instructions given in the "What's New" section of the online help. These instructions are quite clear and detailed, and there was no problem following the directions. We used the previously installed host definitions for DPF in the Communication Manager/2.

On the workstation side, the procedure is as follows.

First, from the Control Panel, we select **Profile**, and click on **New**. See Figure 64 and Figure 65.

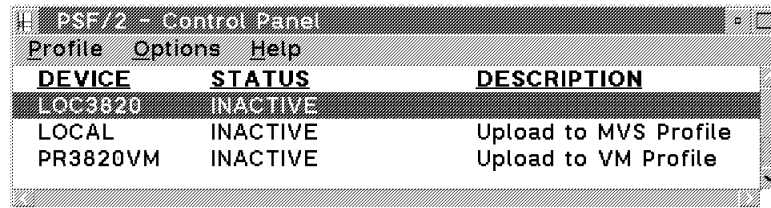


Figure 64. Control Panel

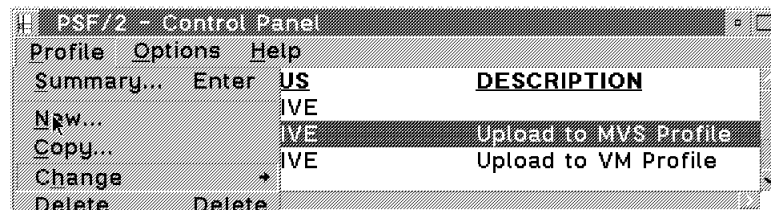


Figure 65. Defining a New Profile for Upload-n-Print

The new device profile must have a profile name which matches the printer ID as it is known at the host. This is the same name that has to appear in the PRINTDEF TABLE (VM) or the PRINTDEF.TABLE (MVS). See Figure 66 on page 62 and Figure 67 on page 62.

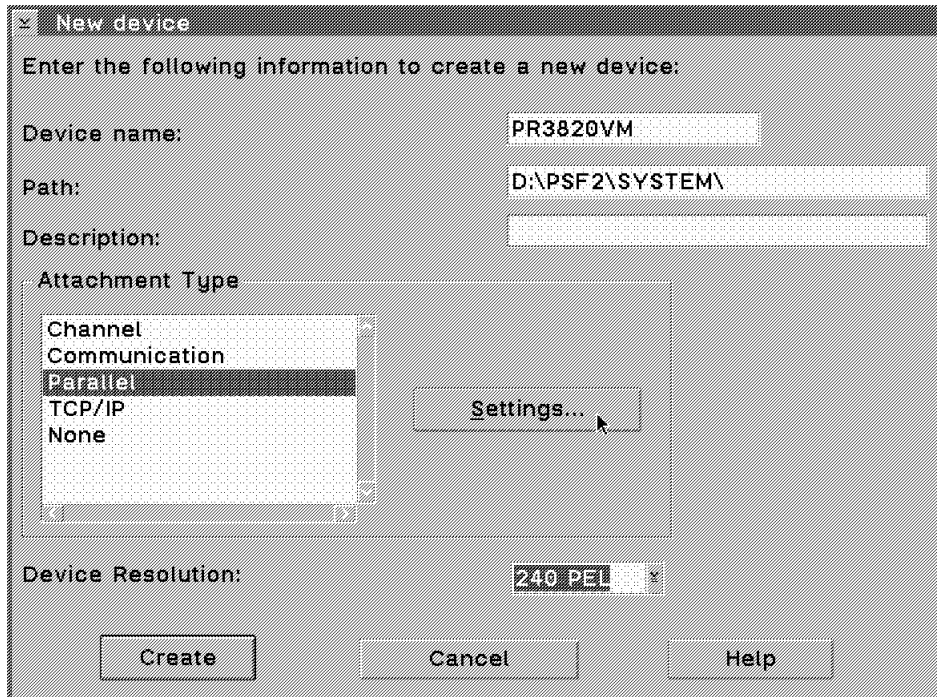


Figure 66. New Device Profile Definition



Figure 67. PRINTDEF TABLE at the HOST

At this point, the instructions correctly suggest to use the parallel connection for the “dummy” queue needed for the Upload-n-Print function. This queue never activated, even when being used by the Upload-n-Print. We used LPT1 as the port, which is an existing port. But as this port might be in use by a locally attached printer, we redefined it to LPT2 in the VM queue and to LPT3 in the MVS queue. As expected, as they are “dummy” queues, this worked. In fact, both queues can be Upload-n-printing at the same time. See Figure 68 on page 63.

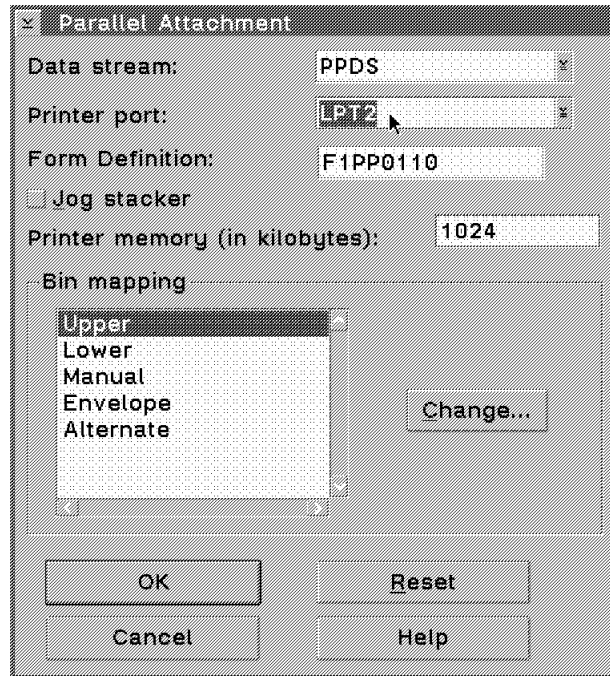


Figure 68. Printer Port Selection

The next step is to set up the transforms. Please refer to Figure 69 and Figure 70 on page 64 and Figure 71 on page 64. We also tested the use of two or more different transforms, for example, to upload print files to different hosts. In such a case, we must depart from the instructions given in Step One of the Workstation setup, Add the Upload-n-Print transform to PSF/2. In here we are supposed to have the transform named "Upload-n-Print". Since we have this name already defined for the upload to the VM system, then we must have a different name for the MVS upload. We did so and it works. The DLL name must always be AINHU370.

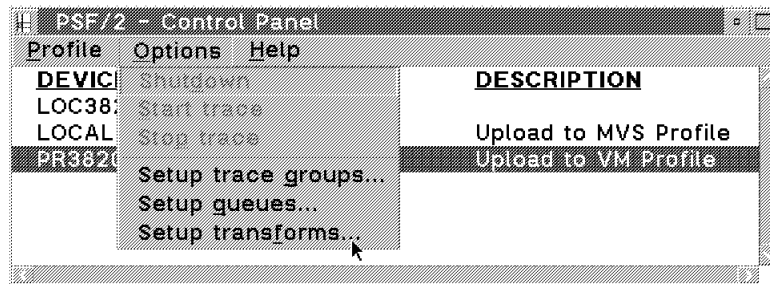


Figure 69. Setup Transforms at the Options Menu

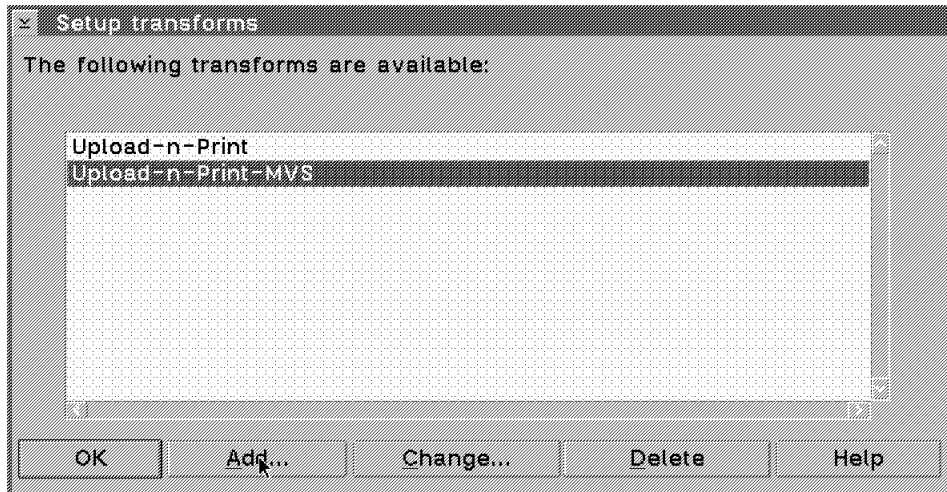


Figure 70. Setup Transforms

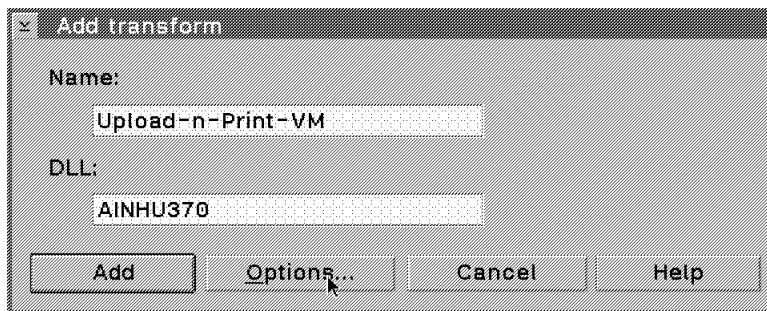


Figure 71. Add Transforms

Then the communications method must be selected. In our case, the Communications Manager is used. And it is important to notice that the settings call for a choice of the host system here, VM or MVS, and that the printer name must match the device name in the profile (Figure 66 on page 62). See Figure 72 and Figure 73 on page 65.

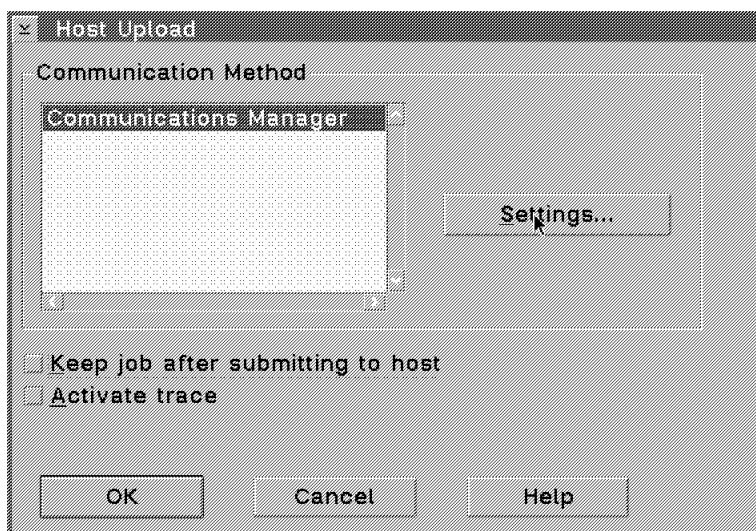


Figure 72. Host Upload

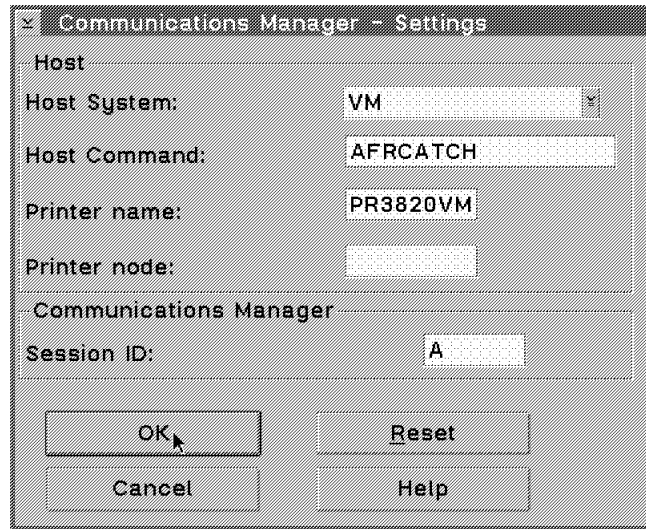


Figure 73. Communication Manager Settings

The next step is to setup the queues. Queue name should also match the device name. See Figure 74 and Figure 75.

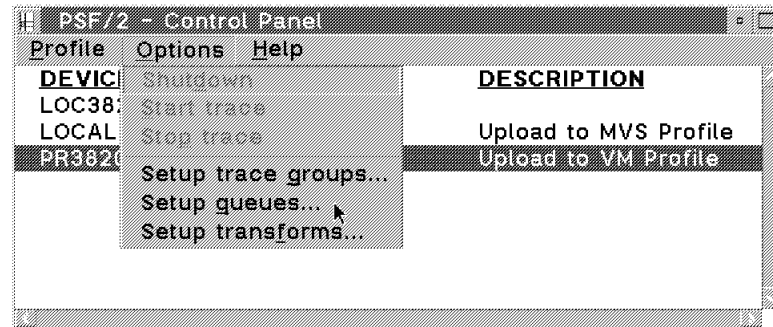


Figure 74. Setup Queues from Control Panel

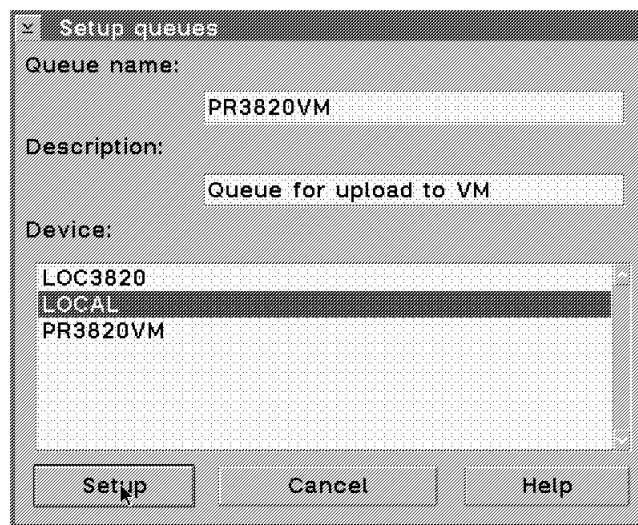


Figure 75. Setup Queues

The last step at the workstation side, STEP FOUR, Activate the Upload-n-Print transform is very important. We did a redefinition of the Upload-n-Print queue (STEP THREE) and forgot to re-do STEP FOUR, and the Upload-n-Print did not work at all. See Figure 76 on page 66 and Figure 77 on page 66.

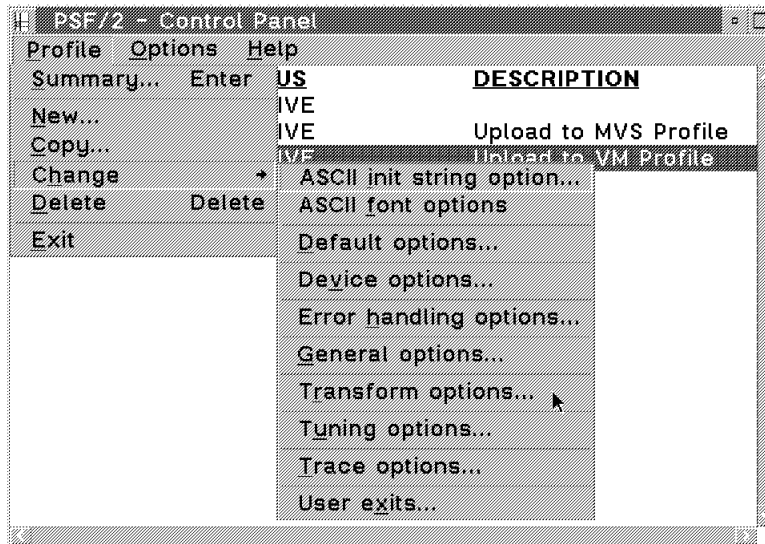


Figure 76. Activating the Upload-n-Print

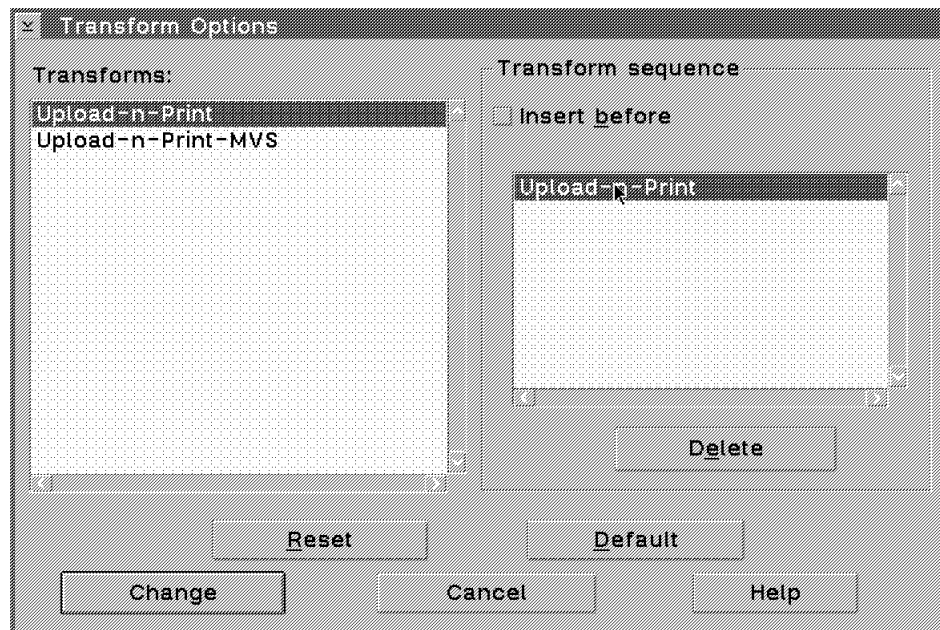


Figure 77. Transform Options

The customization on the host side is simple. It requires a file transfer from the workstation to the host of four files, three EXECs and the Printer Table (Figure 67 on page 62). Worth noticing, there was a small problem in the procedure: In Step Two for VM, sending the Upload-n-Print files to the VM host, we found out that two of the three EXECs sent to the host had a line at the end containing extraneous characters which caused the EXEC to fail. We deleted this line from the EXECs and they run okay. The EXECs affected were AFRREBLK and AFRREMSG. The same EXEC modification had to be performed at the MVS side.

The problem exists in the original ASCII files. This problem has been fixed in the latest CSD.

Then the sample PRINTDEF TABLE transferred to the host has to be changed so that the name of the printer in the PRINTDEF TABLE for VM *must be* the destination name of the printer for PSF/VM. The same is applicable to MVS.

6.2 Operation

Operating the Upload-n-Print facility is straightforward. Once an AFPDS file is ready at the workstation, no matter its origin (Windows application, OS/2 PM application, or host application), the procedure is to issue the APRINT command for the file and select the destination desired. This destination is a "dummy" device in PSF/2 with the same name as a valid host printer destination. The upload is fast. As it involves a file transfer, the receiving side (host) must be ready for reception. This means a READY status in CMS or TSO. Besides, all incoming messages to the host session receiving the printout should be blocked. This is accomplished with SET MSG OFF in VM and with PROFILE NOINTERCOM NOWTPMSG in MVS.

Chapter 7. When to Use Which Way

This chapter summarizes the advantages and disadvantages of different ways of distributing printing. There is also a list of recommendations about which method to use.

7.1 PSF/2 versus PSF/6000

This discussion assumes that these alternatives are equally available. You might already have one of them installed, and you might want to use the installed equipment.

<i>Table 4. PSF/2 and PSF/6000 Comparison</i>		
Subject	PSF/2	PSF/6000
PSF Direct	Supported	Supported
Distributed Print Function	Supported	Not supported
Switching between PSF Direct and local printing	Automatic with inactivity and job interval shutdown timers	Automatic with inactivity and job interval shutdown timers

7.2 DPF versus Direct

This discussion covers the possibilities within PSF/2.

<i>Table 5. PSF Direct and Distributed Print Function Comparison</i>		
Subject	Distributed Print Function	PSF Direct
Spooling at PSF/2	yes	no
First page prints on printer	when all pages have been copied to spool and first page resources transferred to printer	when resources for the first page transferred to printer
One host and one printer	spooling causes delay	fastest alternative
Several hosts and one printer	easy with multiple host receivers	extra delays when switching from host to host
Simultaneous use of APRINT	no restrictions	not possible while Direct is active
Saving resources at PSF/2	supported in MVS and VSE	not supported

7.3 Recommendations

For the following requirements, you should consider:

7.3.1 Single Host System

Many big files to be printed

PSF Direct, possibly several host printer drivers and several printers

Some big files and some small files

PSF Direct. Consider also having several printers and a host printer driver for each of them. It would allow you to use Direct for the big jobs and DPF for the small ones.

Few big files with many small files

DPF. Consider also having several printers and a host printer driver for each of them. It would allow you to use Direct for the big jobs and DPF for the small ones.

Just many small files

DPF, possible several printers and host printer drivers

Frequently used AFP resources

DPF allows you to store the resources at the workstation if the host system is either an MVS system or a VSE system.

Resources that are used often may be retained in the printer by preventing the deletion at the end of a print job. This is only possible if the host is MVS.

Need for simultaneous printing from LAN

DPF allows you to print locally.

7.3.2 Several Host Systems

Single printer

DPF. Avoid PSF Direct as it causes switching overhead.

Several printers

Dedicate printers to hosts and refer to 7.3.1, "Single Host System"

7.4 Migrating from RPM to PSF Direct

Many Remote PrintManager users may want to migrate from the RPM environment to the PSF Direct. RPM is no longer orderable, as the product has been withdrawn from marketing.

To migrate from RPM to PSF Direct, there are some major things to remember.

- Operating system. RPM is running under DOS in a PC or PS. For PSF Direct, either an OS/2 or AIX/6000 workstation is needed.
- Communications software. RPM uses APPC support in DOS, PSF Direct requires Communications Manager. In RISC System/6000, PSF Direct/6000 requires SNA Server/6000.
- Hardware. To run OS/2, the workstation has to be upgraded significantly from what was good for DOS. For PSF Direct/6000, a RISC System/6000 with AIX/6000 operating system is needed, see 2.4, "Requirements in the RISC System/6000 Workstation" on page 9.

- Printers. RPM supports only IPDS printers. With PSF Direct, it is possible to use any PSF/2 or PSF/6000 supported printer, including TCP/IP or parallel/serial attached printers.
- Printer sharing. With RPM, it is not possible to share a printer between host and local applications. With PSF Direct, the same printer may be used for both host and local printing.
- Flexibility. Although upgrading the workstation to run OS/2 may cause some extra costs, the flexibility achieved by migrating from RPM to PSF Direct may justify the costs. The same type of operation available in RPM is also available in PSF Direct, but at the same time, PSF/2 or PSF/6000 can be used in many other ways. The user has the choice between PS/2 and RISC System/6000 CPUs for PSF Direct.
- Changes in the host systems. Almost no or minor changes are required in the host system software to run PSF Direct instead of RPM. For optimal performance, the parameters related to tuning, such as RU sizes and VTAM pacing values, may have to be changed.

List of Abbreviations

AFP	advanced function printing (program product)	NCP	network control program
AIX	advanced interactive executive (IBM's flavor of UNIX)	NFS	network file server
APPC	advanced program-to-program communication	NPF	network print facility (TCP/IP MVS)
CMS	conversational monitor system (VM-based software, IBM)	PC/AT	IBM Personal Computer model AT (advanced technology)
CPU	central processing unit	PDM	printer driver machine
CSD	corrective service delivery	POWER	priority output writers, execution processor, and input readers (DOS)
DPF	distributed print function	PSF	Print Services Facility (IBM program product)
EXEC	execution program	PSF/MVS	Print Services Facility/MVS
HP	Hewlett-Packard Co.	PSF/VM	Print Services Facility/VM
IBM	International Business Machines Corporation	PSF/VSE	Print Services Facility/virtual storage extended
INTERNET	a worldwide network of TCP/IP-based networks	PTF	program temporary fix
IPDS	intelligent printer data stream (IBM)	RISC	reduced instruction set computer/cycles
ISPF	interactive system productivity facility (MVS & VM)	RPM	remote print manager
ITSO	International Technical Support Organization	SDLC	synchronous data link control (teleprocessing)
JCL	job control language (MVS and VSE)	SMIT	System Management Interface Tool (see also DSMIT)
JES	job entry subsystem (MVS counterpart to VM's RSCS)	SNA	systems network architecture (IBM)
LAN	local area network	TCP/IP	Transmission Control Protocol/Internet Protocol (USA, DoD, ARPANET; TCP=layer 4, IP=layer 3,
LPD	line printer daemon (AIX)	TSO	time sharing option
LPR	line printer control program and spooler (AIX)	VM/ESA	virtual machine/enterprise systems architecture (IBM)
LU	logical unit	VSE	virtual storage extended (IBM System/370)
MB	megabyte, 1,000,000 bytes (1,048,576 bytes memory) case should be Mb	VSE/ESA	virtual storage extended/enterprise systems architecture (IBM)
MVS	multiple virtual storage (IBM System 370 & 390)	VTAM	virtual telecommunications access method (IBM) (runs under MVS, VM, & DOS/VSE)
MVS/ESA	multiple virtual storage/enterprise systems architecture (IBM)	WTOR	write to operator with reply

Index

A

abbreviations 73
acronyms 73
Activating the Upload-n-Print. 66
AFRREBLK and AFRREMSG 66
Alias 23
APRINT command 13, 16, 69
AS/400 Operation 51

C

communication connections 57
Communication Manager/2 definitions 23
Communications Manager/2 17
Control Panel 53, 61

D

Data Link Control 18
Direct device busy timer 16
Direct inactivity timer 16
DISCINTV parameter 16
Distributed Print Function 12, 13, 53, 57, 69
DPF inactivity timer 16
DPF Spool Jobs 54
DPF Spool Manager 14, 53

E

enq command 55
Export Configuration Profiles 29

F

Fully qualified LU name 23

H

Host connection 19
host receiver 14, 33, 53

J

JESPARM definitions 22, 44, 47
job interval shutdown timer 16

L

Local LU 20
Local LU definition 27
Local node 18
Local node name 23
Logical unit alias 23
Logmode 22, 44

LU Mode Definition 28
LU name 23

M

MVS Operation 49

N

NCP definitions 22, 44
Network ID 23
NPF Customization 46
NPF Operation 56
NPF Queue Manager 56

O

Operation 67
OPTIONS PDM definitions 22, 44

P

Partner LU 20
Partner LU Definition 27
Performance Considerations 57
Print Submitter panel 16
PRINTDEF TABLE 61
PSF Direct 12, 33, 53, 57, 69
PSF/2 customization 12
PSF/2 definitions 23
PSF/2 Operation 52
PSF/6000 customization 24
PSF/6000 definitions 45
psfctl command 55

S

Saving resources 69
Setup Queues 65
Sharing printers 15
Side information definition 28
SMIT system management 24
SNA Server/6000 25
Switching DPF and Direct 54

T

Transaction Program Name 21
transforms 63

U

Upload Facility 61
Upload to Host 53

V

VM Operation 50
VSE Operation 50
VTAM capture point 56
VTAM definitions 22, 44

Distributing AFP Printing from a Host System**Publication No. GG24-4493-00**

Your feedback is very important to help us maintain the quality of ITSO Bulletins. **Please fill out this questionnaire and return it using one of the following methods:**

- Mail it to the address on the back (postage paid in U.S. only)
- Give it to an IBM marketing representative for mailing
- Fax it to: Your International Access Code + 1 914 432 8246
- Send a note to REDBOOK@VNET.IBM.COM

Please rate on a scale of 1 to 5 the subjects below.
(1 = very good, 2 = good, 3 = average, 4 = poor, 5 = very poor)

Overall Satisfaction	_____		
Organization of the book	_____	Grammar/punctuation/spelling	_____
Accuracy of the information	_____	Ease of reading and understanding	_____
Relevance of the information	_____	Ease of finding information	_____
Completeness of the information	_____	Level of technical detail	_____
Value of illustrations	_____	Print quality	_____

Please answer the following questions:

- a) If you are an employee of IBM or its subsidiaries:
- | | | |
|--|----------|---------|
| Do you provide billable services for 20% or more of your time? | Yes_____ | No_____ |
| Are you in a Services Organization? | Yes_____ | No_____ |
- b) Are you working in the USA? Yes_____ No_____
- c) Was the Bulletin published in time for your needs? Yes_____ No_____
- d) Did this Bulletin meet your needs? Yes_____ No_____

If no, please explain:

What other topics would you like to see in this Bulletin?

What other Technical Bulletins would you like to see published?

Comments/Suggestions: (THANK YOU FOR YOUR FEEDBACK!)

Name

Address

Company or Organization

Phone No.



 
Fold and Tape

Please do not staple

Fold and Tape



NO POSTAGE
NECESSARY
IF MAILED IN THE
UNITED STATES



BUSINESS REPLY MAIL

FIRST-CLASS MAIL PERMIT NO. 40 ARMONK, NEW YORK

POSTAGE WILL BE PAID BY ADDRESSEE

IBM International Technical Support Organization
Mail Station P099
522 SOUTH ROAD
POUGHKEEPSIE NY
USA 12601-5400



Fold and Tape

Please do not staple

Fold and Tape



This soft copy for use by IBM employees only.

Printed in U.S.A.

GG24-4493-00



Figures

<u>id</u>	<u>File</u>	<u>Page</u>	<u>References</u>
DD	4493CH1	4	1
PRTDEF	CH3OS2	12	4 2
QUEDEF	CH3OS2	13	12 3
DPFSPOL	CH3OS2	13	12 4
DPFRECV	CH3OS2	14	5
DIRRECV	CH3OS2	15	15, 23 6
CMSNA	CH3CM2	17	15, 23, 55 7
CMDLC	CH3CM2	18	17 8
CMLOCND	CH3CM2	18	9
CMHOST	CH3CM2	19	23, 23 10
CMFEAT	CH3CM2	19	11
CMLOCLU	CH3CM2	20	12
CMPARLU	CH3CM2	20	23, 23 13
CMTRANS	CH3CM2	21	23 14
SYSMGMT	CH3RS	24	26
CMAPPL	CH3RS	25	27
ADVCFG	CH3RS	25	28
TRPROF	CH3RS	26	29
LU62MEN	CH3RS	26	30
LOCALLU	CH3RS	27	31
PARTNLU	CH3RS	27	32
MODERS	CH3RS	28	33
SIDEINF	CH3RS	28	34
PSFDIRC	CH3RS	33	35
HOSTRCV	CH3RS	33	36
DPD3820	CH3RS	34	37
DPC3820	CH3RS	35	38
PRT3820	CH3RS	36	39
AID4028	CH3RS	37	40
AIC4028	CH3RS	38	41
PRT4028	CH3RS	39	42
QSPWTR	CH3RS	39	43
PSFMAIN	CH4OS2	52	59
CTLPANL	CH4OS2	53	60
DPFMGR	CH4OS2	53	61

DPFJOB	CH4OS2	54	62	
DIRECT	CH4OS2	54	63	
UPL01	4493CH6			55
		61	64	
UPL01A	4493CH6			61
		61	65	
UPL02	4493CH6			61
		62	66	
UPL02B	4493CH6			61, 64
		62	67	
UPL02A	4493CH6			61, 66
		63	68	
UPL03	4493CH6			62
		63	69	
UPL05	4493CH6			63
		64	70	
UPL06	4493CH6			63
		64	71	
UPL07	4493CH6			63
		64	72	
UPL08	4493CH6			64
		65	73	
UPL04	4493CH6			64
		65	74	
UPL09	4493CH6			65
		65	75	
UPL010	4493CH6			65
		66	76	
UPL011	4493CH6			66
		66	77	
				66

Headings

<u>id</u>	<u>File</u>	<u>Page</u>	<u>References</u>
NOTICES	4493FM	xiii	Special Notices ii
BIBL	4493PREF	xv	Related Publications
INTRO	4493CH1	1	Chapter 1, Introduction xv
HISTDIS	4493CH1	1	1.1, Development of Distributed Printing
DISSNA	4493CH1	1	1.2, Using Remote Printers
DISRPM1	4493CH1	1	1.3, Remote PrintManager Version 1
DISRPM2	4493CH1	2	1.4, Remote PrintManager Version 2
DISRPM3	4493CH1	2	1.5, Remote PrintManager Version 3
DISDPF	4493CH1	2	1.6, PSF/2 Distributed Print Facility
DISDIR2	4493CH1	3	1.7, PSF Direct/2
DISDIR6	4493CH1	3	1.8, PSF Direct/6000
DISNPF	4493CH1	3	1.9, Network Print Facility
DISUPL	4493CH1	3	1.10, SNA Upload-n-Print Facility
REQUI	4493CH2	5	Chapter 2, Requirements xv, 58

RQHOST2	4493CH2	5	2.1, Requirements in the Host System for PSF/2
HOSTHW	4493CH2	5	2.1.1, Hardware Requirements
HOSTSW	4493CH2	5	2.1.2, Software Requirements
REQWS2	4493CH2	5	2.2, Requirements in the OS/2 Workstation
OS2HW	4493CH2	5	2.2.1, Hardware Requirements
OS2SW	4493CH2	7	2.2.2, Software Requirements 5
RQHOST6	4493CH2	8	2.3, Requirements in the Host System for PSF/6000
HOSTHW1	4493CH2	8	2.3.1, Hardware Requirements
HOSTSW1	4493CH2	8	2.3.2, Software Requirements
REQWS6	4493CH2	9	2.4, Requirements in the RISC System/6000 Workstation 70
RS6HW	4493CH2	9	2.4.1, Hardware Requirements
RS6SW	4493CH2	10	2.4.2, Software Requirements
INSTA	4493CH3	11	Chapter 3, Installation xv
INSHOST	CH3HOST	11	3.1, Installation in the Host System
INSHHW	CH3HOST	11	3.1.1, Hardware Installation
INSHSW	CH3HOST	11	3.1.2, Software Installation
OS2IHW	CH3OS2	11	3.2.1, Workstation Hardware Installation
OS2ISW	CH3OS2	11	3.2.2, Workstation Software Installation
PSF2CUS	CH3OS2	12	3.2.3, PSF/2 Customization
DPFDEF	CH3OS2	13	3.2.3.1, Distributed Print Function 12
DIRDEF	CH3OS2	15	3.2.3.2, PSF Direct 12
CM2CUST	CH3CM2	17	3.3, Communications Manager/2 Customization
INSWS6	CH3RS	24	3.5, Installation in the RISC System/6000 Workstation
RS6IHW	CH3RS	24	3.5.1, Hardware Installation
RS6ISW	CH3RS	24	3.5.2, Software installation
CUSPS6	CH3RS	24	3.6, PSF/6000 Customization
AS4PS	CH3RS	34	3.7, AS/400 to PSF/2 Definitions
AS4RS	CH3RS	36	3.8, AS/400 to PSF/6000 Direct Definitions
PARMRS	CH3RS	44	3.9, Parameter relationships for PSF/6000 29
INSNPF	CH3NPF	46	3.10, Installation of the Network Print Facility
NPFIHW	CH3NPF	46	3.10.1, Hardware Installation
NPFISW	CH3NPF	46	3.10.2, Software Installation
CUSNPF	CH3NPF	46	3.11, NPF customization
INSEXP	CH3EXP	48	3.13, Experiences from Installation and Customization
OPER	4493CH4	49	Chapter 4, Operation xv
OPEMVS	CH4MVS	49	4.1, MVS Operation
SUBMVS	CH4MVS	49	4.1.1, Print Submission
CONMVS	CH4MVS	49	4.1.2, Controlling the Printing
OPEVSE	CH4VSE	50	4.2, VSE Operation

SUBVSE	CH4VSE	50	4.2.1, Print Submission
CONVSE	CH4VSE	50	4.2.2, Controlling the Printing
OPEVM	CH4VM	50	4.3, VM Operation
SUBVM	CH4VM	51	4.3.1, Print Submission
CONVM	CH4VM	51	4.3.2, Controlling the Printing
OPEAS4	CH4AS400	51	4.4, AS/400 Operation
SUBAS4	CH4AS400	51	4.4.1, Print Submission
CONAS4	CH4AS400	52	4.4.2, Controlling the Printing
OPEPSF2	CH4OS2	52	4.5, PSF/2 Operation
PRTOPER	CH4OS2	53	4.5.1, Printer Operation
DPFMGR	CH4OS2	53	4.5.2, DPF Operation
DIRECT	CH4OS2	54	4.5.3, PSF Direct Operation
OPEWS6	CH4RS	55	4.6, RISC System/6000 Workstation Operation
OPEDIR6	CH4RS	55	4.6.1, PSF Direct Operation
OPENPF	CH4RS	56	4.7, NPF Operation
PERF	4493CH5	57	Chapter 5, Performance Considerations xv
PERFFAC	4493CH5	57	5.1, Performance Factors
PERFPSF	4493CH5	57	5.2, PSF/2 Performance
PERFDPF	4493CH5	58	5.2.1, DPF
PERFDIR	4493CH5	58	5.2.2, PSF Direct
PERFNPF	4493CH5	59	5.3, NPF Performance
SNAUP	4493CH6	61	Chapter 6, SNA Upload Facility xv
UPINST	4493CH6	61	6.1, Installation
UPOP	4493CH6	67	6.2, Operation
SUMMARY	4493CH7	69	Chapter 7, When to Use Which Way xv
SNGHOST	4493CH7	70	7.3.1, Single Host System 70
RPMIMGR	RPMMIGR	70	7.4, Migrating from RPM to PSF Direct

Spots

<u>id</u>	<u>File</u>	<u>Page</u>	<u>References</u>
PS2MEM	4493CH2	6	(no text) 58

Tables

<u>id</u>	<u>File</u>	<u>Page</u>	<u>References</u>
PSF2PRM	CH3OS2	16	1 15

Processing Options

Runtime values:

```

Document fileid ..... EG244493 SCRIPT
Document type ..... USERDOC
Document style ..... IBMXAGD
Profile ..... EDFPRF40
Service Level ..... 0022
SCRIPT/VS Release ..... 4.0.0
Date ..... 94.11.29
Time ..... 06:37:43
Device ..... 3820A
Number of Passes ..... 3
Index ..... YES
SYSVAR D ..... YES
SYSVAR G ..... INLINE
SYSVAR V ..... ITSCEVAL
SYSVAR X ..... YES

```

Formatting values used:

```

Annotation ..... NO
Cross reference listing ..... YES
Cross reference head prefix only ..... NO
Dialog ..... LABEL
Duplex ..... YES
DVCF conditions file ..... (none)
DVCF value 1 ..... (none)
DVCF value 2 ..... (none)
DVCF value 3 ..... (none)
DVCF value 4 ..... (none)
DVCF value 5 ..... (none)
DVCF value 6 ..... (none)
DVCF value 7 ..... (none)
DVCF value 8 ..... (none)
DVCF value 9 ..... (none)
Explode ..... NO
Figure list on new page ..... YES
Figure/table number separation ..... YES
Folio-by-chapter ..... NO
Head 0 body text ..... Part
Head 1 body text ..... Chapter
Head 1 appendix text ..... Appendix
Hyphenation ..... NO
Justification ..... NO
Language ..... ENGL
Keyboard ..... 395
Layout ..... OFF
Leader dots ..... YES
Master index ..... (none)
Partial TOC (maximum level) ..... 4
Partial TOC (new page after) ..... INLINE
Print example id's ..... NO
Print cross reference page numbers ..... YES
Process value ..... (none)
Punctuation move characters ..... ,
Read cross-reference file ..... (none)
Running heading/footing rule ..... NONE
Show index entries ..... NO
Table of Contents (maximum level) ..... 3
Table list on new page ..... YES
Title page (draft) alignment ..... RIGHT
Write cross-reference file ..... (none)

```

Imbed Trace

Page 0	GG244493
Page 0	4493SU
Page 0	4493VARS
Page 0	4493FM
Page i	4493EDNO
Page ii	4493ABST
Page xiii	4493SPEC
Page xiii	4493TMKS
Page xiv	4493PREF
Page xvii	4493ACKS
Page xviii	4493CH1
Page 4	4493CH2
Page 10	4493CH3
Page 11	CH3HOST
Page 11	CH3OS2
Page 17	CH3CM2
Page 22	CH3MAP
Page 24	CH3RS
Page 24	SYSMGMT SMIT
Page 25	CMAPPL SMIT
Page 25	ADVCFIG SMIT
Page 26	TRPROF SMIT
Page 26	LU62MENU SMIT
Page 27	LOCALLU SMIT
Page 27	PARTNLU SMIT
Page 27	MODE SMIT
Page 28	SIDEINFO SMIT
Page 29	EXPORT CONFIG
Page 33	PSFDIRECT SMIT
Page 33	HOSTRECV SMIT
Page 34	DPF3820 PSDEV
Page 34	DPF3820 PSCTL
Page 35	PRT3820 DEVD
Page 36	AIX4028 RSDEV
Page 37	AIX4028 RSCTL
Page 38	PRT4028 DEVD
Page 39	QSPWTR MODE
Page 40	AS4MODJ LINK
Page 44	MAP2HOST
Page 45	MAP2AIX
Page 46	CH3NPF
Page 48	CH3EXP
Page 48	4493CH4
Page 49	CH4MVS
Page 49	CH4VSE
Page 50	CH4VM
Page 51	CH4AS400
Page 52	CH4OS2
Page 55	CH4RS
Page 56	4493CH5
Page 59	4493CH6
Page 67	4493CH7
Page 70	RPMMIGR
Page 72	4493ABRV
Page 76	4493EVAL
Page 76	RCFADDR
Page 76	ITSCADDR FILE
Page 77	RCFADDR
Page 77	ITSCADDR FILE