

Important:

The ServeRAID™-4Mx and ServeRAID-4Lx controllers support assisted system configuration using *only* the *ServerGuide™ Setup and Installation* CD (version 6.0.3A, or later). Otherwise, you must configure the ServeRAID controller and operating system without ServerGuide assistance.

Note: ServerGuide supports Microsoft® Windows® 2000, Windows NT® 4.0, Red Hat Linux® 6.2, Novell NetWare 5.1, and SCO UnixWare 7.1.1.

Refer to the flow chart on this flyer for detailed installation instructions and go to the IBM Support Web site for the latest ServeRAID information and updates at the following address:
<http://www.ibm.com/pc/support>

The *ServeRAID-4 Installation Guide* contains information for setting up and configuring your ServeRAID controller. For detailed information about your ServeRAID controller, view the *User's Reference* on the *IBM ServeRAID Support CD*.

© Copyright International Business Machines Corporation 2001.
All rights reserved.


Note to U. S. Government Users --- Documentation related to restricted rights --- Use, duplication or disclosure is subject to restrictions set forth in GSA ADP Schedule Contract with IBM Corp.

IBM, OS/2, ServeRAID, and ServerGuide are trademarks or registered trademarks of the IBM Corporation.

Microsoft, Windows, and Windows NT are registered trademarks of Microsoft Corporation.

Linux is a registered trademark of Linus Torvalds.

Other company, product, and service names may be trademarks or service marks of others.

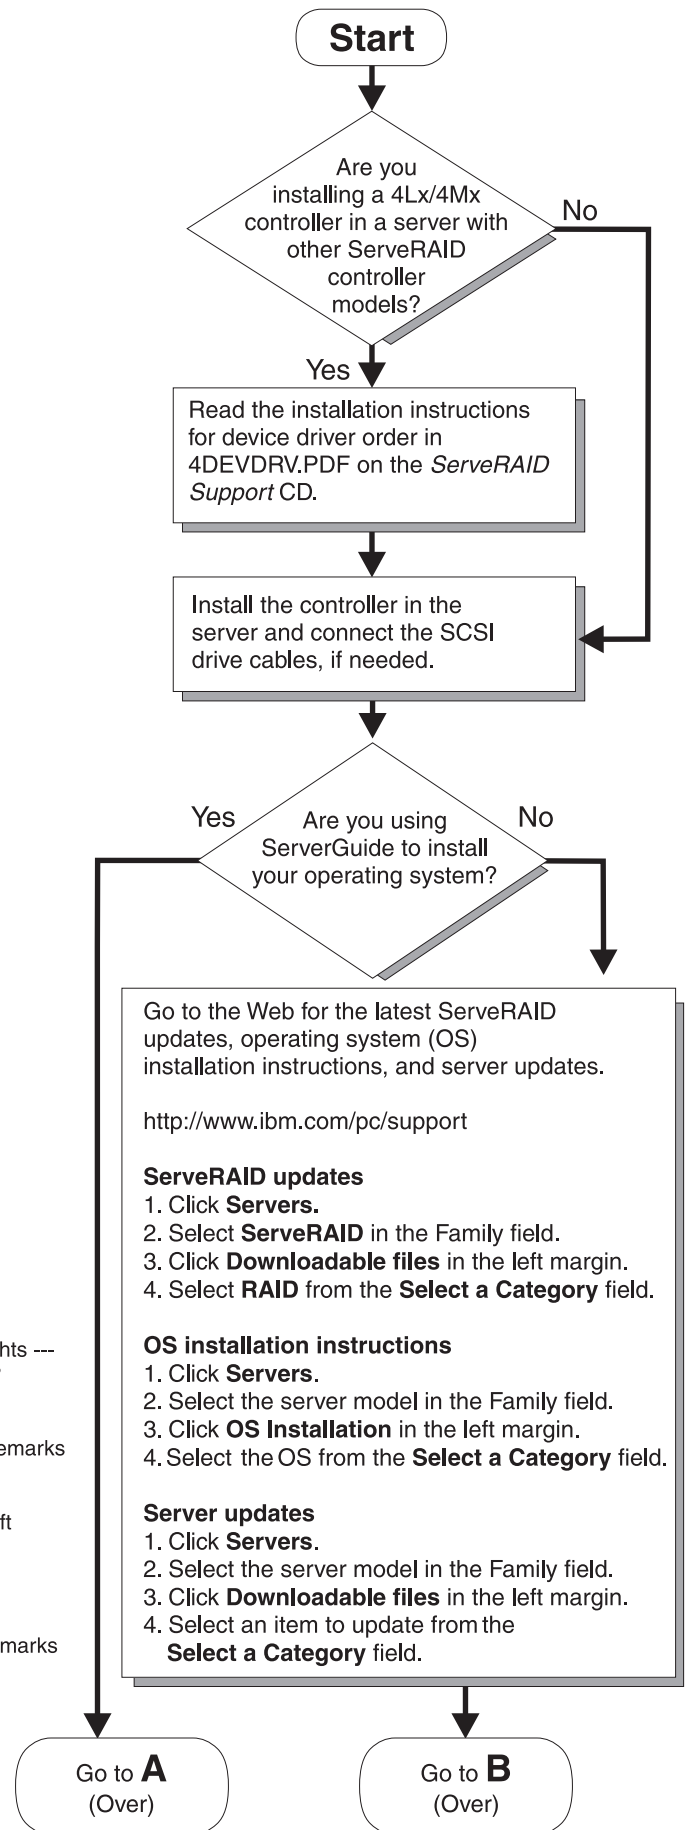

Continued from other side.

