

**10/100Mbps Ethernet-TX PCI Adapter  
Installation and User's Guide**

**Note**

Before you install this product and use this information, be sure to read the product warranties and notices information included with the system unit into which you are installing the product.

**First Edition (October 1997)**

**The following paragraph does not apply to the United Kingdom or any country where such provisions are inconsistent with local law:** THIS PUBLICATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. The manufacturer may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time, without notice.

It is possible that this publication may contain reference to, or information about, products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that these products, programming, or services will be announced in your country. Any reference to a specific licensed program in this publication is not intended to state or imply that you can use only that licensed program. You can use any functionally equivalent program instead.

Requests for technical information about products should be made to your authorized reseller or marketing representative.

© **International Business Machines Corporation 1997. All rights reserved.**

Note to U.S. Government Users -- Documentation related to restricted rights -- Use, duplication or disclosure is subject to restrictions set forth in GSA ADP Schedule Contract with IBM Corp.

---

## Contents

<b>Safety Information</b> .....	v
<b>Handling the 10/100Mbps Ethernet-TX PCI Adapter</b> .....	vii
Electrostatic Discharge Protection .....	vii
<b>About This Book</b> .....	ix
ISO 9000 .....	ix
Related Publications .....	ix
Trademarks and Acknowledgments .....	ix
<b>Chapter 1. Overview</b> .....	1-1
<b>Chapter 2. Preparing to Install the Adapter</b> .....	2-1
Verifying Your Hardware Requirements .....	2-1
Verifying Your Software Requirements .....	2-1
Checking Your Package .....	2-2
Gathering Tools and Documentation .....	2-2
<b>Chapter 3. Installing the Device Driver</b> .....	3-1
<b>Chapter 4. Installing the Adapter</b> .....	4-1
Installing the 10/100Mbps Ethernet-TX PCI Adapter .....	4-1
Verifying the Installation .....	4-2
Running Adapter Diagnostics .....	4-2
<b>Chapter 5. Connecting to an Ethernet Network</b> .....	5-1
Connecting the Network Cables and Adapter .....	5-1
Understanding the Adapter LEDs .....	5-2
<b>Appendix A. Communications Statements</b> .....	A-1
Federal Communications Commission (FCC) Statement .....	A-1
European Union (EU) Statement .....	A-2
International Electrotechnical Commission (IEC) Statement .....	A-2
United Kingdom Telecommunications Safety Requirements .....	A-2
Avis de conformité aux normes du ministère des Communications du Canada .....	A-3
Canadian Department of Communications Compliance Statement .....	A-3
VCCI Statement .....	A-3
Radio Protection for Germany .....	A-4
<b>Reader's Comments — We'd Like to Hear From You</b> .....	X-1



---

## **Safety Information**

### **DANGER**

**An electrical outlet that is not correctly wired could place hazardous voltage on metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock.**

**Before installing or removing signal cables, ensure that the power cables for the system unit and all attached devices are unplugged.**

**When adding or removing any additional devices to or from the system, ensure that the power cables for those devices are unplugged before the signal cables are connected. If possible, disconnect all power cables from the existing system before you add a device.**

**Use one hand, when possible, to connect or disconnect signal cables to prevent a possible shock from touching two surfaces with different electrical potentials.**

**During an electrical storm, do not connect cables for display stations, printers, telephones, or station protectors for communication lines.**



---

## Handling the 10/100Mbps Ethernet-TX PCI Adapter

**Attention:** Static electricity can damage your equipment. Leave the 10/100Mbps Ethernet-TX PCI Adapter in its static-protective bag until you are ready to install it in your system unit.

---

### Electrostatic Discharge Protection

Take the following precautions whenever you handle the 10/100Mbps Ethernet-TX PCI Adapter or other static-sensitive devices:

- If you have an anti-static wrist strap, use it while handling the adapter.
- Limit your movement. Movement can cause static electricity to build up around you.
- With the adapter still in its anti-static bag, touch it to an unpainted metal part of the system unit, such as an expansion slot.
- Hold the adapter carefully by its edges. Avoid touching solder joints, pins, or other printed circuitry.
- Do not place the adapter on the system unit cover or on a metal table. If you must set it aside, put it back into its anti-static bag. Before you pick it up again, touch the bag and metal frame of the system unit at the same time.
- Be very careful when you handle the adapter during cold weather, as low humidity and heating increase static electricity.



---

## **About This Book**

This book provides information about the 10/100Mbps Ethernet-TX PCI Adapter, how to install and configure the adapter, and how to attach the adapter to a network. Use this book together with your specific system unit and operating system documentation.

---

## **ISO 9000**

ISO 9000 registered quality systems were used in the development and manufacturing of this product.

---

## **Related Publications**

Refer to your system unit and operating system documentation for information specific to your hardware and software configuration.

---

## **Trademarks and Acknowledgments**

AIX is a registered trademark of International Business Machines Corporation



---

## Chapter 1. Overview

The 10/100Mbps Ethernet-TX PCI Adapter is a 32-bit high performance expansion adapter card for systems adhering to the Peripheral Component Interconnect (PCI) and IEEE 802.3 standards. The adapter connects the system to an Ethernet LAN at either 10Mbps or 100Mbps data rate.

The 10/100Mbps Ethernet-TX PCI Adapter provides the following features:

- Easy installation and automatic configuration
- 16MHz to 33MHz PCI bus speeds
- 3 LED adapter status indicators
- Auto negotiation of 10Mbps or 100Mbps
- Half-duplex or full-duplex operation
- 64KB on-card FIFO for transmit and receive
- An RJ-45 for connecting to UTP or STP cabling
- Operation in 64-bit PCI-bus motherboards as a 32-bit device
- Surface mount (SMT) and pin-in-hole (PIH) technology

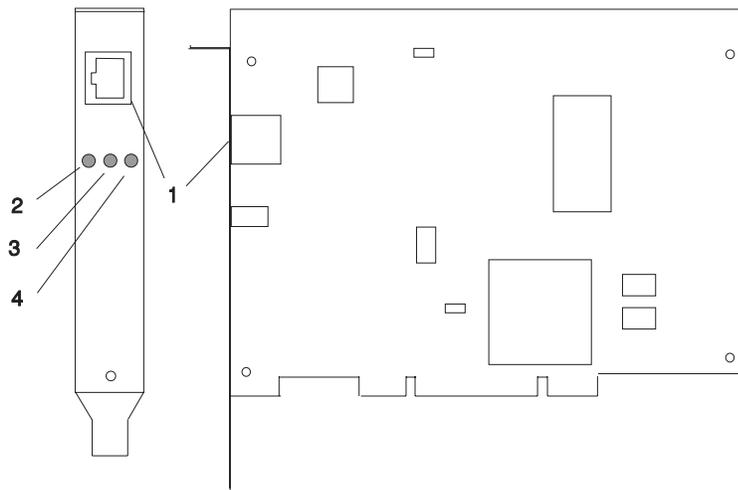


Figure 1-1. The 10/100Mbps Ethernet-TX PCI Adapter

- |   |                 |
|---|-----------------|
| 1 | RJ-45 connector |
| 2 | Activity LED    |
| 3 | FDX LED         |
| 4 | 100Mbps LED     |



---

## Chapter 2. Preparing to Install the Adapter

This chapter covers the things you need to do before you install your 10/100Mbps Ethernet-TX PCI Adapter. Preparing to install the adapter involves the following tasks:

- Verifying your hardware requirements
- Verifying your software requirements
- Making sure your package is complete
- Gathering tools and documentation

---

### Verifying Your Hardware Requirements

The 10/100Mbps Ethernet-TX PCI Adapter requires the following hardware:

- \_\_\_ A wrap plug for the RJ-45 connector, if you are running the total diagnostics package
- \_\_\_ Category 3, 4, or 5 unshielded twisted pair cables for a 10Mbps network attachment
- \_\_\_ Category 5 unshielded twisted pair cables for a 100Mbps network attachment

**Note:** The above cable segment length can be no longer than 100 meters (330 feet). This is the maximum allowable cable length from the adapter to the local concentrator, including patch cables.

---

### Verifying Your Software Requirements

The 10/100Mbps Ethernet-TX PCI Adapter is supported on several operating systems, including AIX 4.1.5 or later. Please ensure that your operating system supports this adapter before you install it. Contact your support representative for assistance.

**Important:** If you are installing your operating system at this time, install the adapter before you install the operating system (see Chapter 4, “Installing the Adapter” on page 4-1 for instructions). If you are installing only the device driver for this adapter, install the device driver before you install the adapter. (See Chapter 3, “Installing the Device Driver” on page 3-1 for instructions.)

---

## Checking Your Package

Check that your package contains the following items:

- The 10/100Mbps Ethernet-TX PCI Adapter
- A registration card

Contact the place of purchase if an item is missing or damaged.

**Important:** Be sure to retain your proof of purchase as it might be required to receive warranty service.

---

## Gathering Tools and Documentation

To install the adapter, you need the following items:

- A flat-blade screwdriver
- Your system unit documentation, including any service documentation
- Your operating system documentation

---

## Chapter 3. Installing the Device Driver

This chapter provides instructions for installing the device driver for the 10/100Mbps Ethernet-TX PCI Adapter on an AIX system. The device driver is provided in AIX and other operating systems that support the adapter. It is also available on separate media.

If your *installed* operating system supports the 10/100Mbps Ethernet-TX PCI Adapter, the device driver is already installed and you can install the adapter. Go to Chapter 4, “Installing the Adapter” on page 4-1 for instructions. If you must install the device driver on a system other than AIX, refer to your system documentation for instructions.

To install the device driver on an AIX system:

1. At the system prompt, log in as a root user.
2. Insert the device driver media into the appropriate media device.
3. To start SMIT, type:  

```
smit devinst
```

at the prompt, then press Enter. The Install Additional Device Software panel displays. The **INPUT device/directory for software** option is highlighted for selection.
4. Press F4 to display a list of input devices from which you can select. The cursor is already positioned on the input device entry field.
5. Either type the name of the input device in the entry field or select the appropriate device, then press Enter. The Install Additional Device Software panel displays the device you selected in the **INPUT device/directory for software** field. The **SOFTWARE to install** option is highlighted.
6. Press F4 to display a list of the device packages you can install.
7. To display a Find dialog box, type:  

```
/
```

in the field where the cursor is positioned.
8. Type the following device package name:  

```
devices.pci.23100020
```

then press Enter.
9. Press F7 to select the device package name, then press Enter. The Install Additional Device Software panel displays the completed required fields.

10. Press Enter. The **ARE YOU SURE** list displays.
11. Press Enter. The COMMAND STATUS panel displays. The term RUNNING is highlighted, indicating that the software is being installed.
12. When RUNNING changes to OK, scroll down to the bottom of the panel and locate the Installation Summary. If the installation was successful, SUCCESS appears at the bottom of the panel in the Result column of the Installation Summary.
13. Remove the device driver software media from the media device.
14. Press F10 to exit SMIT.
15. To shut down and restart your system, type:  
shutdown -Fr  
then press Enter.

---

## Chapter 4. Installing the Adapter

After you install the device driver, you can install the 10/100Mbps Ethernet-TX PCI Adapter. This chapter takes you through the steps of installing your 10/100Mbps Ethernet-TX PCI Adapter which involves the following tasks:

- Installing the adapter in your system unit
- Verifying installation
- Running adapter diagnostics

---

### Installing the 10/100Mbps Ethernet-TX PCI Adapter

#### Attention

Be sure to read the “Electrostatic Discharge Protection” on page vii and Chapter 2, “Preparing to Install the Adapter” on page 2-1 before you begin the installation process.

To install the adapter:

1. Follow your operating system instructions for shutting down your system, then turn off the power to your system unit. On an AIX system, type:  

```
shutdown -F
```

  
at the system prompt, then press Enter. When `halt` completed displays, turn the system unit power off and unplug the power cord from the wall outlet.
2. Remove the covers of your system unit. Follow the instructions provided in your system unit documentation.
3. Install the adapter in an available expansion slot in your system unit. See the instructions in your system unit documentation for installing PCI adapters.
4. Follow the directions provided in your system unit documentation to reinstall the covers of your system unit.
5. Plug the power cord back into the wall outlet.
6. Turn the power on to your system unit so that the operating system can update the system configuration.

---

## Verifying the Installation

See the instructions provided in your system unit documentation for verifying the successful installation of the adapter. To verify the installation on an AIX system, type:

```
lsdev -Cs pci
```

at the system prompt, then press Enter. A list of PCI devices displays. An *Available* status indicates that the adapter is installed and ready to use.

---

## Running Adapter Diagnostics

Diagnostics are provided with the device driver software. If you must run diagnostics, refer to your system unit documentation for instructions.

---

## Chapter 5. Connecting to an Ethernet Network

Refer to your local procedures for information about connecting the 10/100Mbps Ethernet-TX PCI Adapter to your Ethernet network.

**Note:** Only one type of network can be attached to the adapter card at a time.

---

### Connecting the Network Cables and Adapter

Make sure you have the hardware listed in “Verifying Your Hardware Requirements” on page 2-1 before you begin connecting the adapter.

To connect the adapter to an unshielded twisted-pair network:

- Insert the male RJ-45 jack at one end of the unshielded twisted-pair wire segment into the female RJ-45 connector (see Figure 5-1).
- Insert the male RJ-45 connector at the other end of the unshielded twisted-pair wire segment into the network concentrator.

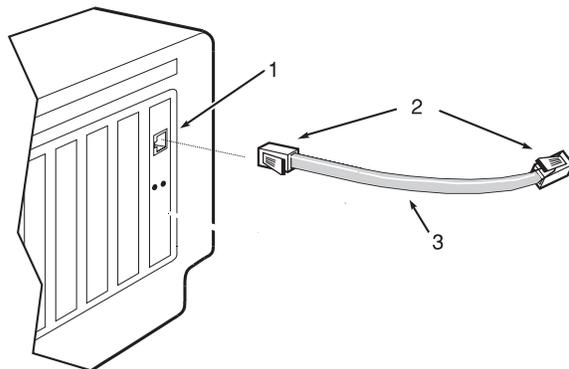


Figure 5-1. Connecting the Adapter to the Network

- 1 RJ-45 connector
- 2 RJ-45 jack
- 3 Twisted-pair wire

---

## Understanding the Adapter LEDs

The LEDs on the 10/100Mbps Ethernet-TX PCI Adapter provide information about the card's operation status. The LEDs are visible through the card's mounting bracket and, when lit, indicate the following conditions:

FDX LED (green)	The adapter is operating in full-duplex mode
100 LED (yellow)	The adapter is operating at 100Mbps data rate
Activity LED (green)	Packets are being received or transmitted over the network

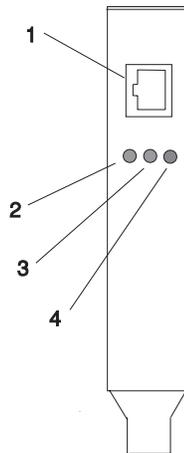


Figure 5-2. LEDs on the 10/100Mbps Ethernet-TX PCI Adapter

- 1 RJ-45 connector
- 2 Activity LED
- 3 FDX LED
- 4 100Mbps LED

---

## Appendix A. Communications Statements

The following statement applies to this product. The statement for other products intended for use with this product appears in their accompanying documentation.

---

### Federal Communications Commission (FCC) Statement

**Note:** The 10/100Mbps Ethernet-TX PCI Adapter has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an authorized dealer or service representative for help.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Proper cables and connectors are available from authorized dealers. Neither the provider nor the manufacturer are responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Responsible Party:

International Business Machines Corporation  
Old Orchard Road  
Armonk, New York 10504  
Telephone: (919) 543-2193

---

## **European Union (EU) Statement**

This product is in conformity with the protection requirements of EU Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility. The manufacturer cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of option cards supplied by third parties. Consult with your dealer or sales representative for details on your specific hardware.

This product has been tested and found to comply with the limits for Class B Information Technology Equipment according to CISPR 22 / European Standard EN 55022. The limits for Class B equipment were derived for typical residential environments to provide reasonable protection against interference with licensed communication devices.

---

## **International Electrotechnical Commission (IEC) Statement**

This product has been designed and built to comply with IEC Standard 950.

---

## **United Kingdom Telecommunications Safety Requirements**

This equipment is manufactured to the International Safety Standard EN60950 and as such is approved in the UK under the General Approval Number NS/G/1234/J/100003 for indirect connection to the public telecommunication network.

The network adapter interfaces housed within this equipment are approved separately, each one having its own independent approval number. These interface adapters, supplied by the manufacturer, do not use or contain excessive voltages. An excessive voltage is one which exceeds 70.7 V peak ac or 120 V dc. They interface with this equipment using Safe Extra Low Voltages only. In order to maintain the separate (independent) approval of the manufacturer's adapters, it is essential that other optional cards, not supplied by the manufacturer, do not use main voltages or any other excessive voltages. Seek advice from a competent engineer before installing other adapters not supplied by the manufacturer.

---

## **Avis de conformité aux normes du ministère des Communications du Canada**

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

---

## **Canadian Department of Communications Compliance Statement**

This Class B digital apparatus meets the requirements of the Canadian Interference-Causing Equipment Regulations.

---

## **VCCI Statement**

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。  
取扱説明書に従って正しい取り扱いをして下さい。

The following is a summary of the VCCI Japanese statement in the box above.

This is a Class B product based on the standard of the Voluntary Control Council for Interference from Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

When used near a radio or TV receiver, it may become the cause of radio interference.

Read the instructions for correct handling.

---

## **Radio Protection for Germany**

Dieses Gerät ist berechtigt in Übereinstimmung mit dem deutschen EMVG vom 9.Nov.92 das EG-Konformitätszeichen zu führen.

Der Aussteller der Konformitätserklärung ist die IBM Germany.

Dieses Gerät erfüllt die Bedingungen der EN 55022 Klasse B.

---

## Reader's Comments — We'd Like to Hear From You

10/100Mbps Ethernet-TX PCI Adapter Installation and User's Guide

Part Number: 05L0222

Overall how satisfied are you with the information in this book?

	Very Satisfied	Satisfied	Neutral	Dissatisfied	Very Dissatisfied
Overall Satisfaction	<input type="checkbox"/>				

How satisfied are you that the information in this book is:

	Very Satisfied	Satisfied	Neutral	Dissatisfied	Very Dissatisfied
Accurate	<input type="checkbox"/>				
Complete	<input type="checkbox"/>				
Easy to find	<input type="checkbox"/>				
Easy to understand	<input type="checkbox"/>				
Well organized	<input type="checkbox"/>				
Applicable to your tasks	<input type="checkbox"/>				

Please tell us how we can improve this book:

Thank you for your response. May we contact you?  Yes  No

When you send comments to us, you grant us a nonexclusive right to use or distribute your comments in any way we believe appropriate without incurring any obligation to you.

\_\_\_\_\_  
Name

\_\_\_\_\_  
Address

\_\_\_\_\_  
Company or Organization

\_\_\_\_\_  
Phone Number

Cut or Fold  
Along Line

Fold and Tape


Please do not Staple

Fold and Tape



NO POSTAGE  
NECESSARY  
IF MAILED IN THE  
UNITED STATES

**BUSINESS REPLY MAIL**

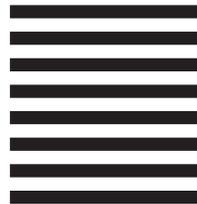

POSTAGE WILL BE PAID BY ADDRESSEE

Information Development  
Department H4TS-9561  
11400 Burnet Road  
Austin, TX 78758-3493



Fold and Tape

Please do not Staple

Fold and Tape

Cut or Fold  
Along Line



Part Number: 05L0222

Printed in U.S.A.

05L0222

