



Alteon OS[™] BBI Quick Guide

Nortel 10Gb Uplink Ethernet Switch Module for IBM BladeCenter[®]

Version 1.0

Part Number: 31R1727, June 2006

Solutions by

NORTEL

BLADE
NETWORK
TECHNOLOGIES

2350 Mission College Blvd.
Suite 600
Santa Clara, CA 95054
www.bladenetwork.net

Copyright © 2006 Blade Network Technologies, Inc., 2350 Mission College Blvd., Suite 600, Santa Clara, California, 95054, USA. All rights reserved. Part Number: 31R1727.

This document is protected by copyright and distributed under licenses restricting its use, copying, distribution, and decompilation. No part of this document may be reproduced in any form by any means without prior written authorization of Blade Network Technologies, Inc. Documentation is provided “as is” without warranty of any kind, either express or implied, including any kind of implied or express warranty of non-infringement or the implied warranties of merchantability or fitness for a particular purpose.

U.S. Government End Users: This document is provided with a “commercial item” as defined by FAR 2.101 (Oct. 1995) and contains “commercial technical data” and “commercial software documentation” as those terms are used in FAR 12.211-12.212 (Oct. 1995). Government End Users are authorized to use this documentation only in accordance with those rights and restrictions set forth herein, consistent with FAR 12.211- 12.212 (Oct. 1995), DFARS 227.7202 (JUN 1995) and DFARS 252.227-7015 (Nov. 1995).

Blade Network Technologies, Inc. reserves the right to change any products described herein at any time, and without notice. Blade Network Technologies, Inc. assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by Blade Network Technologies, Inc. The use and purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of Blade Network Technologies, Inc.

Originated in the USA.

Alteon OS, and Alteon are trademarks of Nortel Networks, Inc. in the United States and certain other countries. Cisco® and EtherChannel® are registered trademarks of Cisco Systems, Inc. in the United States and certain other countries. Any other trademarks appearing in this manual are owned by their respective companies.

Contents

Preface 5

- Who Should Use This Book 6
- Related Documentation 6
- Typographic Conventions 7
- How to Get Help 8

Chapter 1: Getting Started 9

- Features 10
- Requirements 11
- Switch Set Up 12
 - IP Interfaces 12
 - Enabling/Disabling BBI Access 12
- Web Browser Set Up 13
- Starting the BBI 14

Chapter 2: Browser-Based Interface Basics 17

- Toolbar 19
 - Context Buttons 19
 - Commands 20
- Navigation Window 21
- Forms Window 22
- Message Window 23

Chapter 3: Configuring the Switch 25

- Configuration Steps 26
 - Using the BBI to Load Switch Software 28

Chapter 4: Viewing Statistics 31

- Steps for Displaying Statistics 32

Chapter 5: The Dashboard 35
Steps for Displaying Dashboards 36

Preface

Alteon OS Browser-Based Interface (BBI) software is included with the Nortel 10Gb Uplink Ethernet Switch Module (GbE Switch Module). The BBI software lets you use your Web browser to access switch information and statistics, and to perform switch configuration via the Internet.

This *BBI Quick Guide* provides an overview of how to access and use the Alteon OS Browser-Based Interface.

Who Should Use This Book

This *BBI Quick Guide* is intended for network installers and system administrators engaged in configuring and maintaining a network. It assumes that you are familiar with your GbE Switch Module, your Web browser, Ethernet concepts, IP addressing, the IEEE 802.1d Spanning-Tree Protocol, and SNMP configuration parameters.

Related Documentation

For documentation on installing the switch physically, see the *Installation Guide* for your GbE Switch Module.

For details about the switch information, statistics, and configuration parameters available using the Alteon OS BBI, see the Alteon OS *Command Reference* and *Application Guide*.

Typographic Conventions

The following table describes the typographic styles used in this book.

Table 1 Typographic Conventions

Typeface or Symbol	Meaning	Example
AaBbCc123	This type is used for names of commands, files, and directories used within the text. It also depicts on-screen computer output and prompts.	View the <code>readme.txt</code> file. Main#
AaBbCc123	This bold type appears in command examples. It shows text that must be typed in exactly as shown.	Main# sys
<AaBbCc123>	This italicized type appears in command examples as a parameter placeholder. Replace the indicated text with the appropriate real name or value when using the command. Do not type the brackets. This also shows book titles, special terms, or words to be emphasized.	To establish a Telnet session, enter: host# telnet <IP address> Read your <i>User's Guide</i> thoroughly.
[]	Command items shown inside brackets are optional and can be used or excluded as the situation demands. Do not type the brackets.	host# ls [-a]

How to Get Help

If you need help, service, or technical assistance, see the "Getting help and technical assistance" chapter in the Nortel 10Gb Uplink Ethernet Switch Module for IBM BladeCenter *Installation Guide*.

CHAPTER 1

Getting Started

This chapter briefly describes the software features and requirements for the Alteon OS Browser-Based Interface (BBI), and explains how to access the BBI start page.

Features

The network administrator can access all switch configuration and monitoring functions through the BBI, a Web-based switch management interface. The BBI has the following features:

- Many of the same configuration and monitoring functions as the command-line interface
- Intuitive and easy-to-use interface structure
- Password protection
- Nothing to install; the BBI is part of the Alteon OS switch software
- Automatically upgraded with each new software release

NOTE – You can perform most configuration and monitoring tasks through the BBI. For a comprehensive set of commands, use the command-line interface. Refer to *Alteon OS Command Reference* for the Nortel 10Gb Uplink Ethernet Switch Module for IBM BladeCenter.

Requirements

- GbE Switch Module
- Installed Alteon OS switch software
- PC or workstation with network access to the switch's management interface, as configured using the management module
- Frame-capable Web-browser software, such as the following:
 - Netscape Navigator 4.7x or higher
 - Internet Explorer 6.0x or higher
- JavaScript enabled in your Web browser

Switch Set Up

Before you can access the BBI, minimal configuration is required on the GbE Switch Module.

IP Interfaces

At least one IP interface must be configured on the switch. This is configured from the management module and not the command-line interface. The management module assigns the management IP address by default, starting at 192.168.70.127 for I/O module slot 1 through 192.168.70.130 for I/O module slot 4.

Each IP interface address provides a point of access for Alteon OS switch management. The default management interface is 128, which allows access to Alteon OS switch management via the management module network only.

For complete information about configuring IP interfaces, see your GbE Switch Module *Installation Guide*.

Enabling/Disabling BBI Access

By default, BBI access is enabled. If you need to disable or re-enable access, use the following command from the GbE Switch Module command-line interface:

```
>> Main# /cfg/sys/access/http <disable|enable (or just d|e)>
```

For more information on the accessing and configuring the switch through the command-line interface, see your GbE Switch Module *Installation Guide*.

Web Browser Set Up

Most modern Web browsers work with frames and JavaScript by default, and require no additional set up. However, you should check your Web browser's features and configuration to make sure frames and JavaScript are enabled.


NOTE – JavaScript is not the same as Java. Please make sure that JavaScript is enabled in your Web browser.

Starting the BBI


When the switch and browser set up is done, follow these steps to launch the BBI:

1. **Start your Web browser.**
2. **Enter the switch IP interface address in the Web browser's URL field.**

For example, consider an IP interface with a network IP address of 20.80.20.30. You could enter the following:

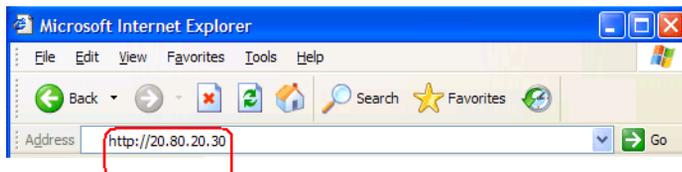


If the IP interface's address has a name on your local domain name server, you could enter the name instead. For example, with Internet Explorer, you could enter the following:

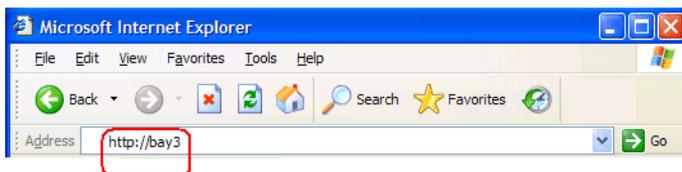

3. **Log in to the switch.**

If your switch and browser are properly configured, you are asked to enter a password:

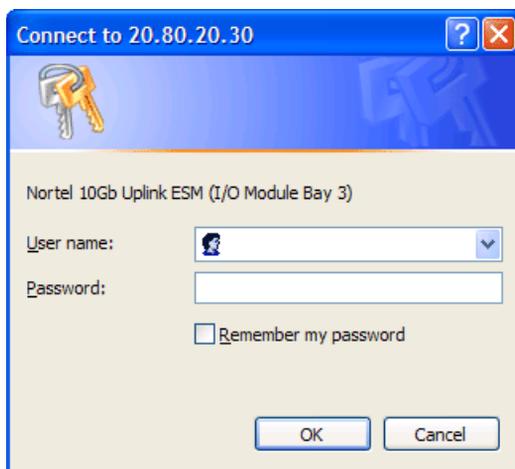

Enter the account name and password for the switch's administrator or user account. The default account name is *admin*, and the default password is *admin*. For more password information, see your Alteon OS *Command Reference* manual.

4. Allow the BBI Dashboard page to load.

When the proper account name and password combination is entered, the BBI Dashboard page is displayed in your browser's viewing area:

Switch Dashboard	
Switch Name	
Switch Location	
Switch Type	Nortel 10Gb Uplink Ethernet Switch Module
Switch Up Time	4 days, 14 hours, 34 minutes and 39 seconds.
Last Boot Time	(reset from Telnet)
Time and date	14:34:39 , 1/5/2006
Daylight Savings Location	
MAC Address	00:16:60:f9:3e:00
IP Address	20.80.20.30
Flash Configuration	FLASH image1, active configuration.
PCBA Part Number	320486-A
FAB Number	EL4512027
Serial Number	YOSCAR612068
Manufacturing Date	0601
Hardware Revision	3
PLD Firmware Version	7.0
Temperature Sensor 1 (Warning)	47.0 C (Warn at 85.0 C/Recover at 79.0 C)
Temperature Sensor 2 (Shutdown)	46.5 C (Warn at 93.0 C/Recover at 86.0 C)
Software Rev	1.0.1.(FLASH image1)
Enabled Software features	none
Banner	

NOTE – There may be a slight delay while the Dashboard page is being initialized. You should not stop the browser while loading is in progress. When loading is complete, a folder icon appears in the left-hand navigation window.

CHAPTER 2

Browser-Based Interface Basics

Once you are properly logged in, the Alteon OS Browser-Based Interface (BBI) appears in your Web browser's viewing window:

The screenshot shows the Alteon OS web interface. At the top is a blue header with the Nortel Networks logo on the left and the 'Alteon OS' logo on the right. Below the logos is a toolbar with buttons for 'CONFIGURE', 'STATISTICS', and 'DASHBOARD'. Underneath these are buttons for 'Apply', 'Save', 'Revert', 'Diff', and 'Dump'. On the far right of the header are 'Show Log', 'Help', and 'Logout' buttons. Below the header is a navigation window on the left showing a folder icon and the text 'Nortel 10Gb Uplink Ethernet'. The main content area is titled 'Switch Dashboard' and contains a table of switch information. At the bottom of the interface is a navigation window with left and right arrow buttons, and a forms window with a scroll bar on the right.

Switch Name	
Switch Location	
Switch Type	Nortel 10Gb Uplink Ethernet Switch Module
Switch Up Time	4 days, 14 hours, 34 minutes and 39 seconds.
Last Boot Time	(reset from Telnnet)
Time and date	14:34:39 , 1/5/2006
Daylight Savings Location	
MAC Address	00:16:60:f9:3e:00
IP Address	20.80.20.30
Flash Configuration	FLASH image1, active configuration.
PCBA Part Number	320486-A
FAB Number	EL4512027
Serial Number	YOSCAR612068
Manufacturing Date	0601
Hardware Revision	3
PLD Firmware Version	7.0
Temperature Sensor 1 (Warning)	47.0 C (Wam at 85.0 C/Recover at 79.0 C)
Temperature Sensor 2 (Shutdown)	46.5 C (Wam at 93.0 C/Recover at 86.0 C)
Software Rev	1.0.1.(FLASH image1)
Enabled Software features	none
Banner	

There are four main regions on the Alteon OS screen:

- The toolbar is used for selecting the context for your actions in the other windows.
- The navigation window is used for selecting particular items or features to act upon.
- The forms window is used for viewing or altering switch information.
- The message window is used for displaying the most recent switch `syslog` messages and events.

Toolbar

Context Buttons

The toolbar is used for setting the context for your actions in the application. There are three context buttons:

Configure	When selected, you can access the switch configuration forms. Configuration forms can be altered only if you are logged in using the administrator account. Select an item in the navigation window to display the desired configuration form in the forms window.
Statistics	When selected, you can view information about switch performance. Select an item in the navigation window to display the desired statistics in the forms window.
Dashboard	This context button is selected by default when the BBI is first activated. When selected, basic switch information and status can be viewed in the forms window. Select an item in the navigation window to display the desired dashboard information in the forms window.

When a context icon is selected, the button is highlighted as a reminder of the current context mode.

Commands


The following general commands are available on the toolbar:

Apply	Pending configuration changes do not take effect until you click the Apply command. Once applied, all changes take effect on the switch immediately. If you do not save the changes, however, they will be lost the next time the switch is rebooted.
Save	Writes applied configuration changes to non-volatile flash memory on the switch.
Revert	Remove pending configuration changes between Apply commands. Use this command to restore configuration parameters set since last Apply command.
Diff	Show any pending configuration changes.
Dump	Generates a dump of critical state information in the switch.
Show Log	Opens a new Web-browser window for displaying the most recent switch log messages. Close the log browser when finished.
Help	Opens a new Web-browser window for displaying the basic online help information. Close the help browser when finished.
Logout	Log off the switch and exit the BBI.

Navigation Window

The navigation window is used for selecting a particular switch feature to act upon. Status, statistics, or configuration forms for the selected item will appear in the forms window, depending on the context chosen on the toolbar.

The navigation window contains a tree of folders, sub-folders, and feature icons:

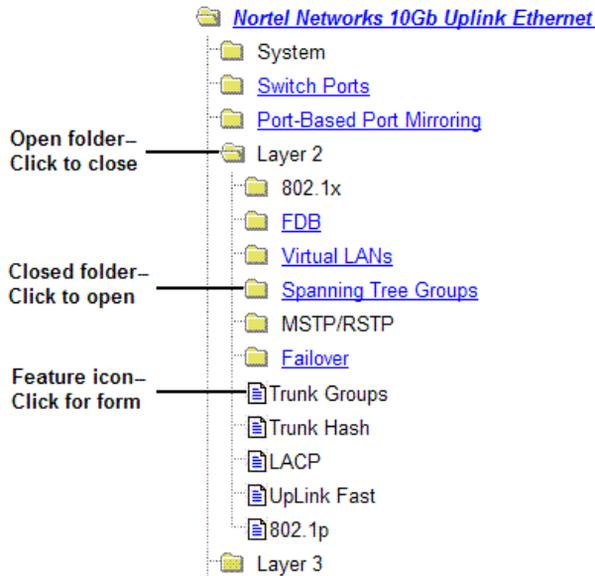

You can click on any closed folder to open it and reveal its contents. Click on any open folder to close it. Click on any feature icon to load the appropriate status, statistics, or configuration form in the forms window.

Some folders also have forms. If the name of the folders is underlined, click on the name to display the appropriate form.

Forms Window

When a feature icon is selected on the navigation window, a status, statistics, or configuration form is displayed in the forms window. The exact nature of the form depends on the current context selected on the toolbar, as well as the type of information available. Not all feature icons have forms for all contexts.

Some forms display switch information such as settings, status, or statistics. Others allow you to make configuration changes to switch parameters.

Message Window

Switch log messages are generated by events such as login/logout activity, password changes, configuration changes, and switch reboot. The BBI records the most recent messages and displays each one briefly in the message window. When the 64th message has been displayed, the cycle is repeated.

To view all messages at the same time, select the Show Log command on the toolbar. A new Web-browser window will be opened to display the log information. Close the window when finished.

For a list of `syslog` messages, see your Alteon OS *Command Reference* manual.

CHAPTER 3

Configuring the Switch

The Alteon OS Browser-Based Interface (BBI) can be used to view and change switch configuration parameters. The same configuration parameters that are available through the switch's command-line interface are present on the BBI configuration forms.

The following provides a basic outline for switch configuration. You should first be familiar with configuration as covered in the Alteon OS *Command Reference* manual.

NOTE – You must be logged in using the administrator account in order to change switch configuration settings.


Configuration Steps

Follow these basic steps for viewing or configuring switch parameters:

1. Click the Configure context button in the Alteon OS toolbar:



2. Select a feature icon in the navigation window. For example:

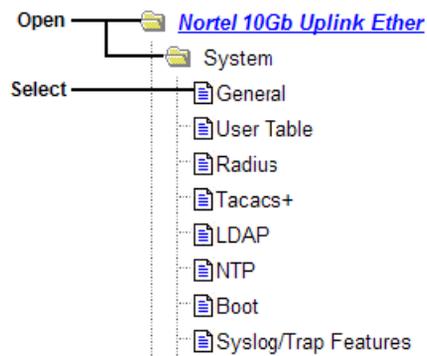

3. View or make changes to the settings shown in the forms window. For example:

The screenshot shows the configuration interface for a Nortel switch. The left sidebar contains a tree view with categories like System, Switch Ports, Layer 2, Layer 3, QoS, and Access Control. The main area displays the 'Switch Management Processor Configuration' form. Fields are color-coded: green for required fields and underlined for fields that load other forms. A red box highlights the 'Enable/Disable Console output of syslog messages' dropdown menu, which is currently set to 'Enabled'.

Switch IP Address	47.80.20.35
Switch IP Subnet Mask	255.255.255.0
Enable/Disable Console output of syslog messages	Enabled
Enable/Disable Host Name	Disabled
Syslog Host IP Address	0.0.0.0
Severity of Syslog Host	log debug 7
Facility of Syslog Host	local 0
Second Syslog Host IP Address	0.0.0.0
Severity of Second Syslog Host	log debug 7
Facility of Second Syslog Host	local 0
Current Date	1/3/2070
Current Time	14:12:36

NOTE – Fields which must be configured for proper switch operations are highlighted on the forms in **GREEN** type. Items which load other forms when selected are underlined.

4. Submit, reset, or delete the form contents using buttons on the bottom of the form.

- Submit** When selected, the form is sent to the switch. Any configuration changes are placed in the “pending” state and do not take effect until you click the toolbar **Apply** command.
- Reset** When selected, the form fields are reset to their last submitted values.
- Delete** This button is available for configuration items that can be deleted. When selected, the featured item is slated to be removed from the switch configuration database. The item is not actually deleted, however, until you click the toolbar **Apply** command.

5. Apply and save your changes using the toolbar commands.



Pending configuration changes (including deletions) do not take effect until you click the **Apply** command.

Applied changes take effect on the switch immediately, but will be lost the next time the switch is rebooted, unless the you click the **Save** command.

Using the BBI to Load Switch Software

You can use the Browser-Based Interface to load software onto the GbE Switch Module. The software image to load can reside in one of the following locations:


- FTP server
- TFTP server
- Local computer

After you log onto the BBI, perform the following steps to load a software image:

1. Click the Configure context button in the Alteon OS toolbar:



2. In the Navigation Window, select System > Config/Image Control.

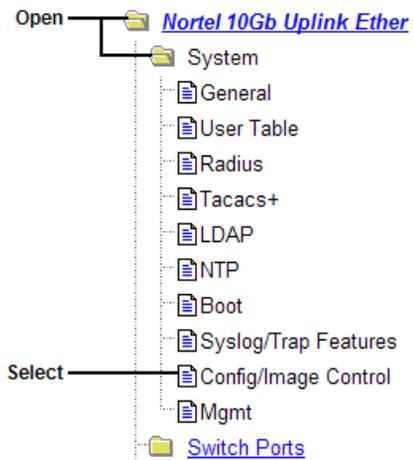

The Switch Image and Configuration Management page appears.

Switch Image and Configuration Management	
Image 1 Version	version 1.0.1, downloaded 0:47:20 Thu Jan 1, 2006
Image 2 Version	version 1.0.2, downloaded 0:11:29 Thu Jan 1, 2006
Boot Version	version 1.0.4
Active Image Version	1.0.2
Next Boot Image Selection	image 2 ▾
Active Configuration Block	active config
Next Boot Configuration Block Selection	active config ▾
Next CLI Boot Mode Selection	AOS CLI ▾
FTP/TFTP Settings	
Hostname or IP Address of FTP/TFTP server	<input type="text"/>
Username for FTP Server or Blank for TFTP Server	<input type="text"/>
Password for FTP Server	<input type="password"/>


3. If you are loading software from your computer (HTTP client), go to Step 4. If you are loading software from a FTP/TFTP server, enter the server's information in the FTP/TFTP Settings section.

FTP/TFTP Settings	
Hostname or IP Address of FTP/TFTP server	100.10.20.1
Username for FTP Server or Blank for TFTP Server	
Password for FTP Server	

4. In the Image Settings section, select the image version you want to replace (Image for Transfer).

Image Settings	
Image for Transfer	image 1 ▾
Image Filename (on server)	1.0.3 <input type="button" value="Get Image"/> <input type="button" value="Put Image"/>
Image Filename (on HTTP Client)	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Download via Browser"/>

- If you are loading software from a FTP/TFTP server, enter the file name and click Get Image.
- If you are loading software from your computer, click Browse. In the File Download Dialog, select the file and click OK. Click Download via Browser.

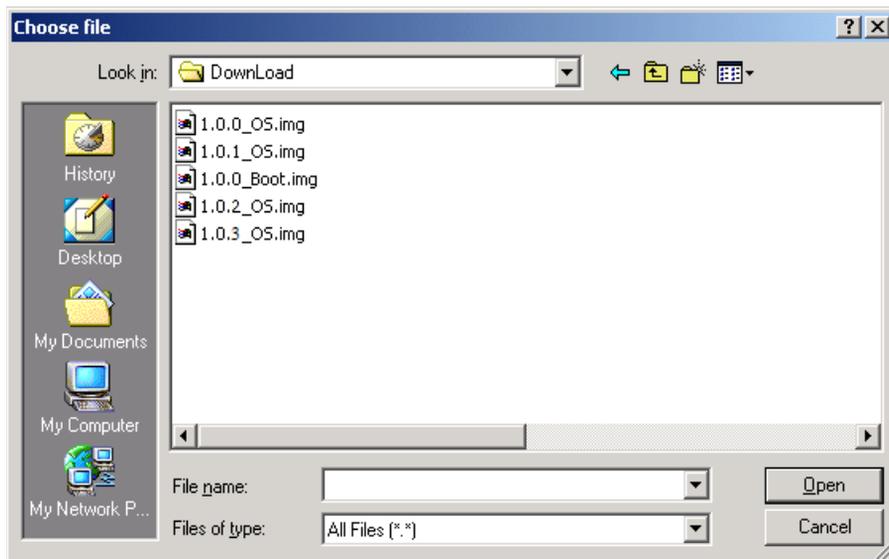

Once the image has loaded, the page refreshes to show the new software.

CHAPTER 4

Viewing Statistics

The Alteon OS Browser-Based Interface (BBI) can be used to view a variety of switch performance statistics. The same statistics that are available through the switch's command-line interface are present on the BBI statistics forms.

The following provides a basic outline for viewing statistics. You should first be familiar with available statistics as covered in the Alteon OS *Command Reference* manual.


Steps for Displaying Statistics

Follow these basic steps for viewing switch statistics:

1. Select the Statistics context button in the Alteon OS toolbar:



2. Select a feature icon or underlined folder in the navigation window. For example:

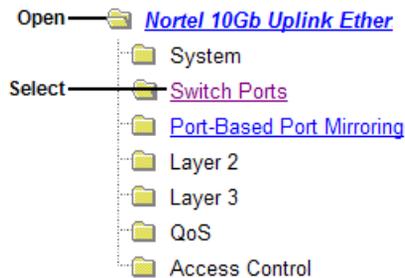

3. View the statistics in the forms window. For example:

Switch Port	InOctets	OutOctets	Total Errors
INT1	0	0	0
INT2	0	0	0
INT3	0	0	0
INT4	0	0	0
INT5	0	0	0
INT6	0	0	0
INT7	0	0	0
INT8	0	0	0
INT9	0	0	0
INT10	0	0	0
INT11	0	0	0
INT12	0	0	0
INT13	1591845	66918612	0
INT14	0	68510457	0
MGT	55790639	11611683	0
EXT1	0	0	0

NOTE – Items which load other forms when selected are [underlined](#).

CHAPTER 5

The Dashboard

The Alteon OS Browser-Based Interface (BBI) can be used to view the present settings and operating status of a variety of switch features. The same information available through the switch's command-line interface is present on the dashboard forms.

The following provides a basic outline for viewing the dashboard forms. You should first be familiar with configuration as covered in the Alteon OS *Command Reference* manual.


Steps for Displaying Dashboards

Follow these basic steps for viewing switch dashboard forms:

1. **Select the Dashboard context button in the BBI toolbar:**



2. **Select a feature icon in the navigation window. For example:**

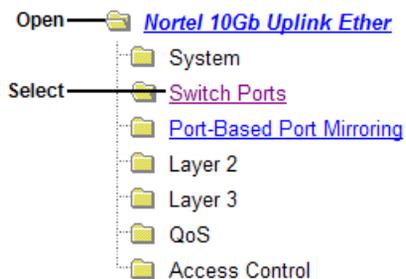

3. View information shown in the forms window. For example:

The screenshot shows the 'Switch Ports Dashboard' in the Alteon OS BBI. The interface includes a navigation menu on the left with options like 'System', 'Switch Ports', 'Port-Based Port Mirroring', 'Layer 2', 'Layer 3', 'QoS', and 'Access Control'. The main content area displays a table of switch ports. The table has the following columns: Status, Switch Port Info, Operational Status, Speed Duplex FlowCtl, Input Frames Output Frames, and LinkState Changes Total Errors. The table contains six rows, each representing a port (INT1 through INT6). Each row shows a port icon, the port name, its status (stp: DISABLED, portfast: disabled, tagging: enabled PVID: 1), operational status (operational), speed/duplex/flow control (1000/Full/Both), and zero input/output frames and link state changes.

Status	Switch Port Info	Operational Status	Speed Duplex FlowCtl	Input Frames Output Frames	LinkState Changes Total Errors
	INT1 : stp: DISABLED portfast: disabled tagging: enabled PVID: 1	operational	1000/Full/Both	0 0	0 0
	INT2 : stp: DISABLED portfast: disabled tagging: enabled PVID: 1	operational	1000/Full/Both	0 0	0 0
	INT3 : stp: DISABLED portfast: disabled tagging: enabled PVID: 1	operational	1000/Full/Both	0 0	0 0
	INT4 : stp: DISABLED portfast: disabled tagging: enabled PVID: 1	operational	1000/Full/Both	0 0	0 0
	INT5 : stp: DISABLED portfast: disabled tagging: enabled PVID: 1	operational	1000/Full/Both	0 0	0 0
	INT6 : stp: DISABLED portfast: disabled tagging: enabled PVID: 1	operational	1000/Full/Both	0 0	0 0

NOTE – The sample screens that appear in this document might differ slightly from the screens displayed by your system. Screen content varies based on the type of BladeCenter unit that you are using and the firmware versions and options that are installed.

NOTE – Items which load other forms when selected are underlined.

